



View this document in HTML
crestron.com/docs/9577



Product Manual

TS-880 and TS-1080

8.1 in. and 10.1 in. Tabletop Touch
Screens

Have feedback on this document? Contact docfeedback@crestron.com.

The original language version of this document is U.S. English.
All other languages are a translation of the original document.

Regulatory Model: M202404005 and M202404006

This product is licensed under the Crestron Software End-User License Agreement, available at www.crestron.com/Legal/software-license-agreement/Crestron-Software-End-User-License-Agreement.

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited nonexclusive, nontransferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed online at www.crestron.com/legal/patents.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Certain Crestron products collect information that may include personal data. For further details regarding those Crestron products that collect, process, and transmit information directly to Crestron via the internet, refer to the Crestron Privacy Statement Regarding Internet Data Collection, located at www.crestron.com/legal-data-collection-privacy.

Crestron, the Crestron logo, Crestron Home, Crestron Toolbox, and XiO Cloud are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Ad Astra is either a trademark or a registered trademark of Ad Astra Information Systems, LLC in the United States and/or other countries. Bluetooth is either a trademark or registered trademark of Bluetooth SIG, Inc. in the United States and/or other countries. CollegeNET and 25Live are either trademarks or registered trademarks of CollegeNET, Inc. in the United States and/or other countries. G Suite and Google Calendar are either trademarks or registered trademarks of Google, Inc. in the United States and/or other countries. IBM and Notes are either trademarks or registered trademarks of International Business Machines Corporation in the United States and/or other countries. Microsoft, Active Directory, Azure, Microsoft Exchange Server, Microsoft 365, and Outlook are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. UL is either a trademark or a registered trademark of Underwriters Laboratories, Inc. in the United States and/or other countries. Wi-Fi is either a trademark or registered trademark of Wi-Fi Alliance in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

©2026 Crestron Electronics, Inc.

Contents

TS-880 and TS-1080	5
Features	6
TS-880 Features	7
TS-1080 Features	11
TS-880-GV-B Features	15
TS-1080-GV-B Features	18
TS-880R Features	21
TS-1080R Features	23
Physical Description	25
Rear	25
Specifications	26
TS-880 Specifications	27
Product Specifications	27
Dimension Drawings	30
TS-1080 Specifications	32
Product Specifications	32
Dimension Drawings	35
TS-880-GV-B Specifications	37
Product Specifications	37
Dimension Drawings	40
TS-1080-GV-B Specifications	42
Product Specifications	42
Dimension Drawings	45
TS-880R Specifications	47
Product Specifications	47
Dimension Drawings	50
TS-1080R Specifications	52
Product Specifications	52
Dimension Drawings	55
Getting Started	57
Installation	57
Initial Setup	57
Web Configuration	57
Local Configuration	57
Installation	58
In the Box	58
Place the Touch Screen	58
Connect the Touch Screen	59
Install the Cable Grommet	59

Configuration	61
Initial Setup	62
Complete the Setup Wizard	62
Access the Device Settings Screens	69
Access the Web Configuration Interface	69
Web Configuration	71
Action Menu	73
Status	76
Settings	83
Local Configuration	115
Access the Settings Screens	115
Accessibility	116
Network Settings	117
Bluetooth	120
Display	124
System	126
Microsoft	127
About	128
Admin	130
Application Selection	131
Operation	132
Resources	133
Crestron Support and Training	133
Programmer and Developer Resources	133
Product Certificates	133
Related Documentation	133

TS-880 and TS-1080

This manual covers the TS-880 and TS-1080.

For TSS-80 Series touch screens, refer to the [TSS-880 and TSS-1080 Product Manual](#).

For TSW-80 Series touch screens, refer to the [TSW-880 and TSW-1080 Product Manual](#).

For Unified Communications (UC) variant touch screens, refer to the [TS-1080-UC and TSW-1080-UC Product Manual](#).

Refer to [Getting Started on page 57](#) for important information on using your product and this document.

This section provides the following information:

- [Features](#)
- [Physical Description](#)

Features

This section provides the following information:

- [TS-880 Features](#)
- [TS-1080 Features](#)
- [TS-880-GV-B Features](#)
- [TS-1080-GV-B Features](#)
- [TS-880R Features](#)
- [TS-1080R Features](#)

TS-880 Features

Key features include:

- Next generation Crestron tabletop touch screen
- 8.1 in. (204 mm) widescreen active-matrix color display and 1280 x 800 WXGA display resolution
- Capacitive touch screen display
- Custom-programmable virtual control buttons
- Supports Crestron HTML5 software custom user projects
- Built-in Rava® SIP intercom
- Built-in speakers and microphone
- H.265, H.264, or MJPEG streaming video display
- Native apps for Crestron Home® OS and various room scheduling services
- Built-in web browsing
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi® network connectivity
- USB-C® 2.0 port for room availability accessories
- Enterprise grade security and authentication
- Web, cloud, or device-based configuration
- Available in white or black finish



Advanced Touch Screen Control

The [TS-880](#) offers a sleek and powerful user interface for controlling technology in a home, boardroom, conference room, or command center. The touch screen provides an intuitive interface with easy-to-use capacitive controls, true feedback, and real-time status display. A built-in proximity sensor wakes the screen without requiring any user interaction, and automatic brightness controls ensure optimal visibility under varying lighting conditions.

Custom-Programmable Virtual Buttons

The TS-880 comes preconfigured with virtual buttons for Power, Home, Lights, Up, Down, and Microphone. Each button can be programmed via a Crestron control system to provide custom functionality, and unused buttons can be hidden individually. The universal status bar is expanded or hidden using simple swipe gestures on touch screen display.

Dynamic User Interfaces

The TS-880 supports custom user interfaces created with [Crestron HTML5 User Interface](#) and [Crestron Construct™](#) technologies, allowing greater flexibility for UI developers and programmers.

- Crestron HTML5 User Interface enables UI designers to develop rich, front-end user interfaces with increased reusability and efficiency using modern web methodologies. Development tools are provided to simplify creating user interfaces built on standard web technologies
- Crestron Construct is a cross-platform developer application that enables programmers to create HTML5-based user interfaces within a WYSIWYG (What You See Is What You Get) environment to further simplify UI development.

Streaming Video

Native support for H.265, H.264, and MJPEG formats allows the TS-880 to display live streaming video from an IP camera or streaming encoder. Video is delivered to the touch screen over Ethernet, eliminating the need for extra video wiring.

Rava SIP Intercom

Rava® SIP Intercom Technology enables hands free VoIP communication with other Rava enabled touch screens and door stations. Rava works over Ethernet, supporting 2-way intercom and paging without requiring any special wiring. VoIP phone capability is also possible through integration with a SIP compatible IP phone system or SIP server, allowing hands free telephone functionality complete with speed-dialing, caller ID, custom ringers, and other enhancements. The far-field microphone picks up voice communication even when the user is not directly next to the touchscreen. Built in echo cancellation affords full duplex performance for clear, seamless voice communication using the integrated microphone and speakers.² A dedicated mute button keeps conversations private and includes an indicator for added confidence.

Crestron Room Scheduling App

As part of a complete enterprise solution, the TS-880 serves as a room booking interface through the Crestron Room Scheduling app. If desired, a room can be reserved on the spot for an ad hoc meeting. A [CEN-ODT-C-POE](#) occupancy sensor can also be paired to the touch screen, allowing for occupancy status to be reported instantly to the scheduling app for no shows and unscheduled room usage.^{3,4}

Running the Crestron Scheduling App, the TS-880 integrates directly with Microsoft Exchange Server® software (for users of Outlook® software and Microsoft 365® software), the Google Calendar™ calendaring app (including G Suite™ software), CollegeNET® 25Live® scheduling software, or Ad Astra™ software.

Third-Party Scheduling Apps

The TS-880 also includes support for various third-party scheduling applications. New providers are made available via firmware or over the air updates. Whatever provider you choose, setup is as simple

as connecting the touch screen to the network and choosing an app from the built-in setup screens. The selected app downloads from the cloud and installs on the touch screen without any programming or control system required.^{5,6}

Crestron Home OS Control

The TS-880 is used to control a Crestron Home® OS whole home solution. Select the Crestron Home app from the touch screen to control lighting, shades, climate, media, security, and cameras, including the ability to create and recall scenes that create a desired ambiance throughout a home. A TS-880 may be installed in each room to provide easy access to various Crestron Home functions for both the room and the home.

Web Browsing

Using its built in web browser, the TS-880 provides access to online program guides and other web-based services, and it can be used to control DVRs and other devices without having to pick up a tablet or smartphone.¹

Wired and Wi-Fi Connectivity

An Ethernet LAN connection is all that is required to install the TS-880, containing all control, video, intercom, and power signals within a single wire.

For deployments without access to Ethernet, the touch screen can also be connected to the network over Wi-Fi communications via a local wireless access point (WAP).

Power over Ethernet

Using PoE technology, the TS-880 gets its operating power directly through the network cable. PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches offer a total networking solution with built in PoE for multiple touch screens. Refer to the full list of supported PoE switches [here](#).

NOTE: Refer to the Power specifications for more details.

Enterprise-Grade Security

Crestron touch screens employ enterprise-grade networking with robust security features such as 802.1X authentication, MDEP, TLS encryption, HTTPS connectivity, and Active Directory® service integration. These features are imperative to protect your network against service interruptions and malicious intrusions, and to ensure compliance with your organization's network policies. Cloud based configuration and management streamlines the process of monitoring and updating every touch screen on the network. Additional support for SNMP allows the touch screen to be monitored by your IT administrator.

XiO Cloud Service

The TS-880 is compatible with the XiO Cloud® service, which is an IoT (Internet of Things) based platform for remotely monitoring and managing Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's industry leading Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine based cloud solutions, Azure services provide unlimited scalability to suit the ever growing needs of an enterprise. For more information, visit the [XiO Cloud](#) page.

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. The microphone and Bluetooth® transceiver may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.
4. Room scheduling mode requires the TS-880 to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
5. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
6. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-880 as they do on a tablet device. The TS-880 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-880.

TS-1080 Features

Key features include:

- Next generation Crestron tabletop touch screen
- 10.1 in. (257 mm) widescreen active-matrix color display and 1920x1200 WUXGA display resolution
- Capacitive touch screen display
- Custom-programmable virtual control buttons
- Supports Crestron HTML5 software custom user projects
- Built-in Rava® SIP intercom
- Built-in speakers and microphone
- H.265, H.264, or MJPEG streaming video display
- Native apps for Crestron Home® OS and various room scheduling services
- Built-in web browsing
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi® network connectivity
- USB-C® 2.0 port for room availability accessories
- Enterprise grade security and authentication
- Web, cloud, or device-based configuration
- Available in white or black finish



Advanced Touch Screen Control

The [TS-1080](#) offers a sleek and powerful user interface for controlling technology in a home, boardroom, conference room, or command center. The touch screen provides an intuitive interface with easy-to-use capacitive controls, true feedback, and real-time status display. A built-in proximity sensor wakes the screen without requiring any user interaction, and automatic brightness controls ensure optimal visibility under varying lighting conditions.

Custom-Programmable Virtual Buttons

The TS-1080 comes preconfigured with virtual buttons for Power, Home, Lights, Up, Down, and Microphone. Each button can be programmed via a Crestron control system to provide custom functionality, and unused buttons can be hidden individually. The universal status bar is expanded or hidden using simple swipe gestures on touch screen display.

Dynamic User Interfaces

The TS-1080 supports custom user interfaces created with [Crestron HTML5 User Interface](#) and [Crestron Construct™](#) technologies, allowing greater flexibility for UI developers and programmers.

- Crestron HTML5 User Interface enables UI designers to develop rich, front-end user interfaces with increased reusability and efficiency using modern web methodologies. Development tools are provided to simplify creating user interfaces built on standard web technologies
- Crestron Construct is a cross-platform developer application that enables programmers to create HTML5-based user interfaces within a WYSIWYG (What You See Is What You Get) environment to further simplify UI development.

Streaming Video

Native support for H.265, H.264, and MJPEG formats allows the TS-1080 to display live streaming video from an IP camera or streaming encoder. Video is delivered to the touch screen over Ethernet, eliminating the need for extra video wiring.

Rava SIP Intercom

Rava® SIP Intercom Technology enables hands free VoIP communication with other Rava enabled touch screens and door stations. Rava works over Ethernet, supporting 2-way intercom and paging without requiring any special wiring. VoIP phone capability is also possible through integration with a SIP compatible IP phone system or SIP server, allowing hands free telephone functionality complete with speed-dialing, caller ID, custom ringers, and other enhancements. The far-field microphone picks up voice communication even when the user is not directly next to the touchscreen. Built in echo cancellation affords full duplex performance for clear, seamless voice communication using the integrated microphone and speakers.² A dedicated mute button keeps conversations private and includes an indicator for added confidence.

Crestron Room Scheduling App

As part of a complete enterprise solution, the TS-1080 serves as a room booking interface through the Crestron Room Scheduling app. If desired, a room can be reserved on the spot for an ad hoc meeting. A [CEN-ODT-C-POE](#) occupancy sensor can also be paired to the touch screen, allowing for occupancy status to be reported instantly to the scheduling app for no shows and unscheduled room usage.^{3,4}

Running the Crestron Scheduling App, the TS-1080 integrates directly with Microsoft Exchange Server® software (for users of Outlook® software and Microsoft 365® software), the Google Calendar™ calendaring app (including G Suite™ software), CollegeNET® 25Live® scheduling software, or Ad Astra™ software.

Third-Party Scheduling Apps

The TS-1080 also includes support for various third-party scheduling applications. New providers are made available via firmware or over the air updates. Whatever provider you choose, setup is as simple

as connecting the touch screen to the network and choosing an app from the built-in setup screens. The selected app downloads from the cloud and installs on the touch screen without any programming or control system required.^{5,6}

Crestron Home OS Control

The TS-1080 is used to control a Crestron Home® OS whole home solution. Select the Crestron Home app from the touch screen to control lighting, shades, climate, media, security, and cameras, including the ability to create and recall scenes that create a desired ambiance throughout a home. A TS-1080 may be installed in each room to provide easy access to various Crestron Home functions for both the room and the home.

Web Browsing

Using its built in web browser, the TS-1080 provides access to online program guides and other web-based services, and it can be used to control DVRs and other devices without having to pick up a tablet or smartphone.¹

Wired and Wi-Fi Connectivity

An Ethernet LAN connection is all that is required to install the TS-1080, containing all control, video, intercom, and power signals within a single wire.

For deployments without access to Ethernet, the touch screen can also be connected to the network over Wi-Fi communications via a local wireless access point (WAP).

Power over Ethernet

Using PoE technology, the TS-1080 gets its operating power directly through the network cable. PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches offer a total networking solution with built in PoE for multiple touch screens. Refer to the full list of supported PoE switches [here](#).

NOTE: Refer to the Power specifications for more details.

Enterprise-Grade Security

Crestron touch screens employ enterprise-grade networking with robust security features such as 802.1X authentication, MDEP, TLS encryption, HTTPS connectivity, and Active Directory® service integration. These features are imperative to protect your network against service interruptions and malicious intrusions, and to ensure compliance with your organization's network policies. Cloud based configuration and management streamlines the process of monitoring and updating every touch screen on the network. Additional support for SNMP allows the touch screen to be monitored by your IT administrator.

XiO Cloud Service

The TS-1080 is compatible with the XiO Cloud® service, which is an IoT (Internet of Things) based platform for remotely monitoring and managing Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's industry leading Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine based cloud solutions, Azure services

provide unlimited scalability to suit the ever growing needs of an enterprise. For more information, visit the [XiO Cloud](#) page.

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. The microphone and Bluetooth® transceiver may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.
4. Room scheduling mode requires the TS-1080 to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
5. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
6. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-1080 as they do on a tablet device. The TS-1080 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-1080.

TS-880-GV-B Features

Key features include:

- Next generation Crestron touch screen
- 8.1 in. (204 mm) widescreen active-matrix color display and 1280 x 800 WXGA display resolution
- Capacitive touch screen display
- Custom-programmable virtual control buttons
- Supports Crestron HTML5 software custom user projects
- Built-in speakers
- H.265, H.264, or MJPEG streaming video display
- Native apps for various room scheduling services
- Built-in web browsing
- Single wire Ethernet connection with PoE or PoE+ power
- USB-C® 2.0 port for room availability accessories
- Enterprise grade security and authentication
- Web, cloud, or device-based configuration
- Eliminates the TS-80 Series microphone, Bluetooth®, proximity sensor, and Wi-Fi® to comply with government security standards



Advanced Touch Screen Control

The [TS-880-GV](#) offers a sleek and powerful user interface for controlling technology in a home, boardroom, conference room, or command center. The touch screen provides an intuitive interface with easy-to-use capacitive controls, true feedback, and real-time status display. Automatic brightness controls ensure optimal visibility under varying lighting conditions.

Custom-Programmable Virtual Buttons

The TS-880-GV comes preconfigured with virtual buttons for Power, Home, Lights, Up, Down, and Microphone. Each button can be programmed via a Crestron control system to provide custom functionality, and unused buttons can be hidden individually. The universal status bar is expanded or hidden using simple swipe gestures on touch screen display.

Dynamic User Interfaces

The TS-880-GV supports custom user interfaces created with [Crestron HTML5 User Interface](#) and [Crestron Construct™](#) technologies, allowing greater flexibility for UI developers and programmers.

- Crestron HTML5 User Interface enables UI designers to develop rich, front-end user interfaces with increased reusability and efficiency using modern web methodologies. Development tools are provided to simplify creating user interfaces built on standard web technologies
- Crestron Construct is a cross-platform developer application that enables programmers to create HTML5-based user interfaces within a WYSIWYG (What You See Is What You Get) environment to further simplify UI development.

Streaming Video

Native support for H.265, H.264, and MJPEG formats allows the TS-880-GV to display live streaming video from an IP camera or streaming encoder. Video is delivered to the touch screen over Ethernet, eliminating the need for extra video wiring.

Crestron Room Scheduling App

As part of a complete enterprise solution, the TS-880-GV serves as a room booking interface through the Crestron Room Scheduling app. If desired, a room can be reserved on the spot for an ad hoc meeting. A [CEN-ODT-C-POE](#) occupancy sensor can also be paired to the touch screen, allowing for occupancy status to be reported instantly to the scheduling app for no shows and unscheduled room usage.^{2,3}

Running the Crestron Scheduling App, the TS-880-GV integrates directly with Microsoft Exchange Server® software (for users of Outlook® software and Microsoft 365® software), the Google Calendar™ calendaring app (including G Suite™ software), ColleagueNET® 25Live® scheduling software, or Ad Astra™ software.

Third-Party Scheduling Apps

The TS-880-GV also includes support for various third-party scheduling applications. New providers are made available via firmware or over the air updates. Whatever provider you choose, setup is as simple as connecting the touch screen to the network and choosing an app from the built-in setup screens. The selected app downloads from the cloud and installs on the touch screen without any programming or control system required.^{4,5}

Web Browsing

Using its built in web browser, the TS-880-GV provides access to online program guides and other web-based services, and it can be used to control DVRs and other devices without having to pick up a tablet or smartphone.¹

Wired Connectivity

An Ethernet LAN connection is all that is required to install the TS-880-GV, containing all control, video, and power signals within a single wire.

Power over Ethernet

Using PoE technology, the TS-880-GV gets its operating power directly through the network cable. PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring.

Crestron PoE switches offer a total networking solution with built in PoE for multiple touch screens. Refer to the full list of supported PoE switches [here](#).

NOTE: Refer to the Power specifications for more details.

Enterprise-Grade Security

Crestron touch screens employ enterprise-grade networking with robust security features such as 802.1X authentication, MDEP, TLS encryption, HTTPS connectivity, and Active Directory® service integration. These features are imperative to protect your network against service interruptions and malicious intrusions, and to ensure compliance with your organization's network policies. Cloud based configuration and management streamlines the process of monitoring and updating every touch screen on the network. Additional support for SNMP allows the touch screen to be monitored by your IT administrator.

XiO Cloud Service

The TS-880-GV is compatible with the XiO Cloud® service, which is an IoT (Internet of Things) based platform for remotely monitoring and managing Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's industry leading Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine based cloud solutions, Azure services provide unlimited scalability to suit the ever growing needs of an enterprise. For more information, visit the [XiO Cloud](#) page.

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. Item(s) sold separately. Refer to each product's spec sheet for complete information.
3. Room scheduling mode requires the TS-880-GV to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
4. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
5. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-880-GV as they do on a tablet device. The TS-880-GV runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-880-GV.

TS-1080-GV-B Features

Key features include:

- Next generation Crestron touch screen
- 10.1 in. (257 mm) widescreen active-matrix color display and 1920x1200 WUXGA display resolution
- Capacitive touch screen display
- Custom-programmable virtual control buttons
- Supports Crestron HTML5 software custom user projects
- Built-in speakers
- H.265, H.264, or MJPEG streaming video display
- Native apps for various room scheduling services
- Built-in web browsing
- Single wire Ethernet connection with PoE or PoE+ power
- USB-C® 2.0 port for room availability accessories
- Enterprise grade security and authentication
- Web, cloud, or device-based configuration
- Eliminates the TS-80 Series microphone, Bluetooth®, proximity sensor, and Wi-Fi® to comply with government security standards



Advanced Touch Screen Control

The [TS-1080-GV](#) offers a sleek and powerful user interface for controlling technology in a home, boardroom, conference room, or command center. The touch screen provides an intuitive interface with easy-to-use capacitive controls, true feedback, and real-time status display. Automatic brightness controls ensure optimal visibility under varying lighting conditions.

Custom-Programmable Virtual Buttons

The TS-1080-GV comes preconfigured with virtual buttons for Power, Home, Lights, Up, Down, and Microphone. Each button can be programmed via a Crestron control system to provide custom

functionality, and unused buttons can be hidden individually. The universal status bar is expanded or hidden using simple swipe gestures on touch screen display.

Dynamic User Interfaces

The TS-1080-GV supports custom user interfaces created with [Crestron HTML5 User Interface](#) and [Crestron Construct™](#) technologies, allowing greater flexibility for UI developers and programmers.

- Crestron HTML5 User Interface enables UI designers to develop rich, front-end user interfaces with increased reusability and efficiency using modern web methodologies. Development tools are provided to simplify creating user interfaces built on standard web technologies
- Crestron Construct is a cross-platform developer application that enables programmers to create HTML5-based user interfaces within a WYSIWYG (What You See Is What You Get) environment to further simplify UI development.

Streaming Video

Native support for H.265, H.264, and MJPEG formats allows the TS-1080-GV to display live streaming video from an IP camera or streaming encoder. Video is delivered to the touch screen over Ethernet, eliminating the need for extra video wiring.

Crestron Room Scheduling App

As part of a complete enterprise solution, the TS-1080-GV serves as a room booking interface through the Crestron Room Scheduling app. If desired, a room can be reserved on the spot for an ad hoc meeting. A [CEN-ODT-C-POE](#) occupancy sensor can also be paired to the touch screen, allowing for occupancy status to be reported instantly to the scheduling app for no shows and unscheduled room usage.^{2,3}

Running the Crestron Scheduling App, the TS-1080-GV integrates directly with Microsoft Exchange Server® software (for users of Outlook® software and Microsoft 365® software), the Google Calendar™ calendaring app (including G Suite™ software), CollegeNET® 25Live® scheduling software, or Ad Astra™ software.

Third-Party Scheduling Apps

The TS-1080-GV also includes support for various third-party scheduling applications. New providers are made available via firmware or over the air updates. Whatever provider you choose, setup is as simple as connecting the touch screen to the network and choosing an app from the built-in setup screens. The selected app downloads from the cloud and installs on the touch screen without any programming or control system required.^{4,5}

Web Browsing

Using its built in web browser, the TS-1080-GV provides access to online program guides and other web-based services, and it can be used to control DVRs and other devices without having to pick up a tablet or smartphone.¹

Wired Connectivity

An Ethernet LAN connection is all that is required to install the TS-1080-GV, containing all control, video, and power signals within a single wire.

Power over Ethernet

Using PoE technology, the TS-1080-GV gets its operating power directly through the network cable. PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches offer a total networking solution with built in PoE for multiple touch screens. Refer to the full list of supported PoE switches [here](#).

NOTE: Refer to the Power specifications for more details.

Enterprise-Grade Security

Crestron touch screens employ enterprise-grade networking with robust security features such as 802.1X authentication, MDEP, TLS encryption, HTTPS connectivity, and Active Directory® service integration. These features are imperative to protect your network against service interruptions and malicious intrusions, and to ensure compliance with your organization's network policies. Cloud based configuration and management streamlines the process of monitoring and updating every touch screen on the network. Additional support for SNMP allows the touch screen to be monitored by your IT administrator.

XiO Cloud Service

The TS-1080-GV is compatible with the XiO Cloud® service, which is an IoT (Internet of Things) based platform for remotely monitoring and managing Crestron devices across an enterprise or an entire client base. Built on the Microsoft® Azure® software platform and utilizing Microsoft's industry leading Azure IoT Hub technology, XiO Cloud enables installers and IT managers to deploy and manage thousands of devices simultaneously. Unlike other virtual machine based cloud solutions, Azure services provide unlimited scalability to suit the ever growing needs of an enterprise. For more information, visit the [XiO Cloud](#) page.

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. Item(s) sold separately. Refer to each product's spec sheet for complete information.
3. Room scheduling mode requires the TS-1080-GV to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
4. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
5. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-1080-GV as they do on a tablet device. The TS-1080-GV runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-1080-GV.

TS-880R Features

Key features include:

- Next generation Crestron touch screen featuring a native Crestron Home® OS application
- 8.1 in. (204 mm) widescreen active-matrix color display and 1280 x 800 WXGA display resolution
- Capacitive touch screen display
- Built-in Rava® SIP intercom
- Built-in speakers and microphone
- H.265, H.264, or MJPEG streaming video display
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi® network connectivity
- Enterprise grade security and authentication
- Web or device-based configuration
- Available in white or black finish



Crestron Home OS Control

The [TS-880R](#) is used to control a Crestron Home® OS whole home solution. Select the Crestron Home app from the touch screen to control lighting, shades, climate, media, security, and cameras, including the ability to create and recall scenes that create a desired ambiance throughout a home. A TS-880R may be installed in each room to provide easy access to various Crestron Home functions for both the room and the home.

Advanced Touch Screen Control

The offers a sleek and powerful user interface for controlling technology in a home via the Crestron Home app. The touch screen provides an intuitive interface with easy-to-use capacitive controls, true feedback, and real-time status display. Automatic brightness controls ensure optimal visibility under varying lighting conditions.

Streaming Video

Native support for H.265, H.264, and MJPEG formats allows the TS-880R to display live streaming video from an IP camera or streaming encoder. Video is delivered to the touch screen over Ethernet, eliminating the need for extra video wiring.

Rava SIP Intercom

Rava® SIP Intercom Technology enables hands free VoIP communication with other Rava enabled touch screens and door stations. Rava works over Ethernet, supporting 2-way intercom and paging without requiring any special wiring. VoIP phone capability is also possible through integration with a SIP compatible IP phone system or SIP server, allowing hands free telephone functionality complete with speed-dialing, caller ID, custom ringers, and other enhancements. The far-field microphone picks up voice communication even when the user is not directly next to the touchscreen. Built in echo cancellation affords full duplex performance for clear, seamless voice communication using the integrated microphone and speakers.² A dedicated mute button keeps conversations private and includes an indicator for added confidence.

Wired and Wi-Fi Connectivity

An Ethernet LAN connection is all that is required to install the TS-880R, containing all control, video, intercom, and power signals within a single wire.

For deployments without access to Ethernet, the touch screen can also be connected to the network over Wi-Fi communications via a local wireless access point (WAP).

Power over Ethernet

Using PoE technology, the TS-880R gets its operating power directly through the network cable. PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches offer a total networking solution with built in PoE for multiple touch screens. Refer to the full list of supported PoE switches [here](#).

NOTE: Refer to the Power specifications for more details.

Enterprise-Grade Security

Crestron touch screens employ enterprise-grade networking with robust security features such as 802.1X authentication, MDEP, TLS encryption, HTTPS connectivity, and Active Directory® service integration.

Notes:

1. Certain other functions require an internet connection.
2. The microphone may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.

TS-1080R Features

Key features include:

- Next generation Crestron touch screen featuring a native Crestron Home® OS application
- 10.1 in. (257 mm) widescreen active-matrix color display and 1920x1200 WUXGA display resolution
- Capacitive touch screen display
- Built-in Rava® SIP intercom
- Built-in speakers and microphone
- H.265, H.264, or MJPEG streaming video display
- Single wire Ethernet connection with PoE or PoE+ power
- Wi-Fi® network connectivity
- Enterprise grade security and authentication
- Web or device-based configuration
- Available in white or black finish



Crestron Home OS Control

The [TS-1080R](#) is used to control a Crestron Home® OS whole home solution. Select the Crestron Home app from the touch screen to control lighting, shades, climate, media, security, and cameras, including the ability to create and recall scenes that create a desired ambiance throughout a home. A TS-1080R may be installed in each room to provide easy access to various Crestron Home functions for both the room and the home.

Advanced Touch Screen Control

The offers a sleek and powerful user interface for controlling technology in a home via the Crestron Home app. The touch screen provides an intuitive interface with easy-to-use capacitive controls, true feedback, and real-time status display. Automatic brightness controls ensure optimal visibility under varying lighting conditions.

Streaming Video

Native support for H.265, H.264, and MJPEG formats allows the TS-1080R to display live streaming video from an IP camera or streaming encoder. Video is delivered to the touch screen over Ethernet, eliminating the need for extra video wiring.

Rava SIP Intercom

Rava® SIP Intercom Technology enables hands free VoIP communication with other Rava enabled touch screens and door stations. Rava works over Ethernet, supporting 2-way intercom and paging without requiring any special wiring. VoIP phone capability is also possible through integration with a SIP compatible IP phone system or SIP server, allowing hands free telephone functionality complete with speed-dialing, caller ID, custom ringers, and other enhancements. The far-field microphone picks up voice communication even when the user is not directly next to the touchscreen. Built in echo cancellation affords full duplex performance for clear, seamless voice communication using the integrated microphone and speakers.² A dedicated mute button keeps conversations private and includes an indicator for added confidence.

Wired and Wi-Fi Connectivity

An Ethernet LAN connection is all that is required to install the TS-1080R, containing all control, video, intercom, and power signals within a single wire.

For deployments without access to Ethernet, the touch screen can also be connected to the network over Wi-Fi communications via a local wireless access point (WAP).

Power over Ethernet

Using PoE technology, the TS-1080R gets its operating power directly through the network cable. PoE (Power over Ethernet) eliminates the need for a local power supply or any dedicated power wiring. Crestron PoE switches offer a total networking solution with built in PoE for multiple touch screens. Refer to the full list of supported PoE switches [here](#).

NOTE: Refer to the Power specifications for more details.

Enterprise-Grade Security

Crestron touch screens employ enterprise-grade networking with robust security features such as 802.1X authentication, MDEP, TLS encryption, HTTPS connectivity, and Active Directory® service integration.

Notes:


1. Certain other functions require an internet connection.
2. The microphone may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.

Physical Description

The TS-880 and TS-1080 provide the following connectors, controls, and indicators.

Rear

The following illustration shows the rear of the touch screen.

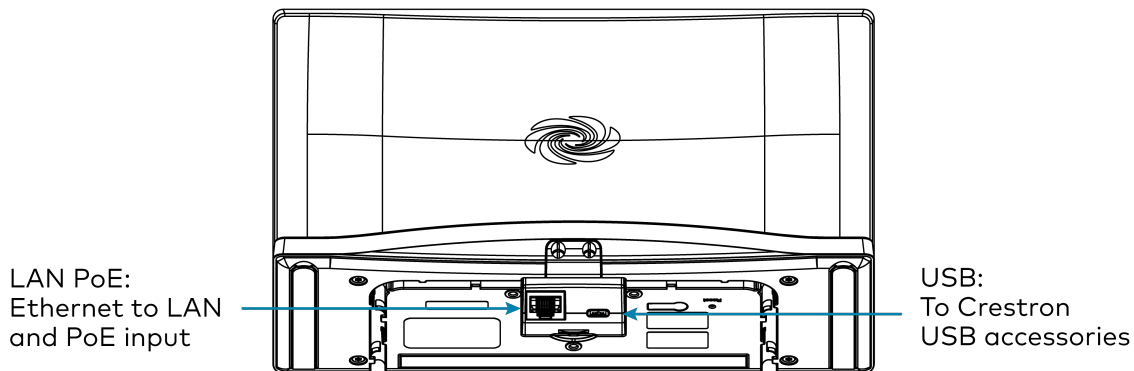

- ① **LAN PoE:** (1) 8-pin RJ-45 connector, female, with 2 LED indicators;
1000BASE-TX Ethernet port;
PoE+ PD port;
Green and yellow LEDs indicate Ethernet port status
- ② **USB:** (1) USB Type C connector, female;
USB 2.0 host port

Specifications

This section provides the following information:

- [TS-880 Specifications](#)
- [TS-1080 Specifications](#)
- [TS-880-GV-B Specifications](#)
- [TS-1080-GV-B Specifications](#)
- [TS-880R Specifications](#)
- [TS-1080R Specifications](#)

TS-880 Specifications

Product specifications for the TS-880 are provided below.

Product Specifications

Touch Screen Display

Display Type	TFT active matrix color LCD
Size	8.1 in. (204 mm) diagonal
Aspect Ratio	16:10 WXGA
Resolution	1280 x 800 pixels
Brightness	Minimum: 350 nits (cd/m ²) Maximum: 400 nits (cd/m ²)
Contrast	1000:1
Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5 point multitouch capable

Buttons

Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	(1) Pin hole on rear for hardware reset

Graphics Engine

Crestron HTML5 multilanguage web browser¹, multilanguage on-screen keyboard, screensaver, dual scalable streaming video window , native room scheduling applications ^{4,5,6}, native Crestron Home[®] OS app, touch screen setup and diagnostics via web browser, cloud, or on-screen UI

Room Scheduling Support

Crestron Scheduling App	Microsoft Exchange Server [®] and Microsoft 365 [®] software, Google Calendar [™] calendaring app and G Suite [™] software, CollegeNET [®] 25Live [®] software, and Ad Astra [™] software
Third-Party Apps	Includes support for various third-party scheduling applications. ^{4,5,6}

Memory

RAM	8GB LPDDR4
Storage	40GB eMMC pSLC
Maximum Project Size	1000 MB

Wired Communications

Ethernet	1000Mbps, autoswitching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, CIP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3 at compliant
USB	USB 2.0 host for room scheduling accessories

Wireless Communications

Transceiver	IEEE 802.11a/b/g/n/ac/ax Wi-Fi 6E (2.4, 5 GHz and 6GHz) 2x2 MIMO, static IP or dynamic IP via DHCP
Security	64 and 128-bit WEP, WPA, WPA2, WPA3, WPA Enterprise and WPA2 Enterprise
Range	Up to 50 ft (15 m), subject to site-specific conditions
Bluetooth® Hardware	BLE, BT5.2, 33 ft (10 m) typical range
Radio Frequency (RF) signals	Proximity sensor (Japan): 60.5 to 61 GHz Proximity sensor (Worldwide): 61 to 61.5 GHz

Streaming Decoder

Video Formats	H.265, H.264, MJPEG
Audio Formats	AAC Stereo
Bitrates	Up to 25 Mbps (20 Mbps maximum recommended)
Input Resolutions	Up to 3840x2160@30fps
Protocol	RTSP

Audio

Features	Built-in microphone ² and speakers, Rava® SIP Intercom
-----------------	---

Connectors

LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 1000BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(1) USB Type C connector, female; USB 2.0 host port; USB 3.1 DisplayPort Alt Mode (coming soon)

Power

PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1)
----------------------------------	---

NOTE: Enabling the USB port requires use of an 802.3 at Type 2 PoE+ PSE.

Environmental

Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr

Construction

Housing	Die-cast aluminum housing, smooth black or white finish, glass with black or white surround
----------------	---

Dimensions

Height	4.10 in. (104 mm)
Width	7.93 in. (201 mm)
Depth	4.53 in. (115 mm)

Weight

1.76 lb (799 g)

Compliance


Regulatory Model: M202404005




TUV Listed for the United States and Canada to UL/IEC 62368-1 safety standards. Meets CE, IC, and FCC compliance requirements

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. The microphone and Bluetooth® transceiver may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.
4. Room scheduling mode requires the TS-880 to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
5. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
6. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-880 as they do on a tablet device. The TS-880 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-880.

Dimension Drawings

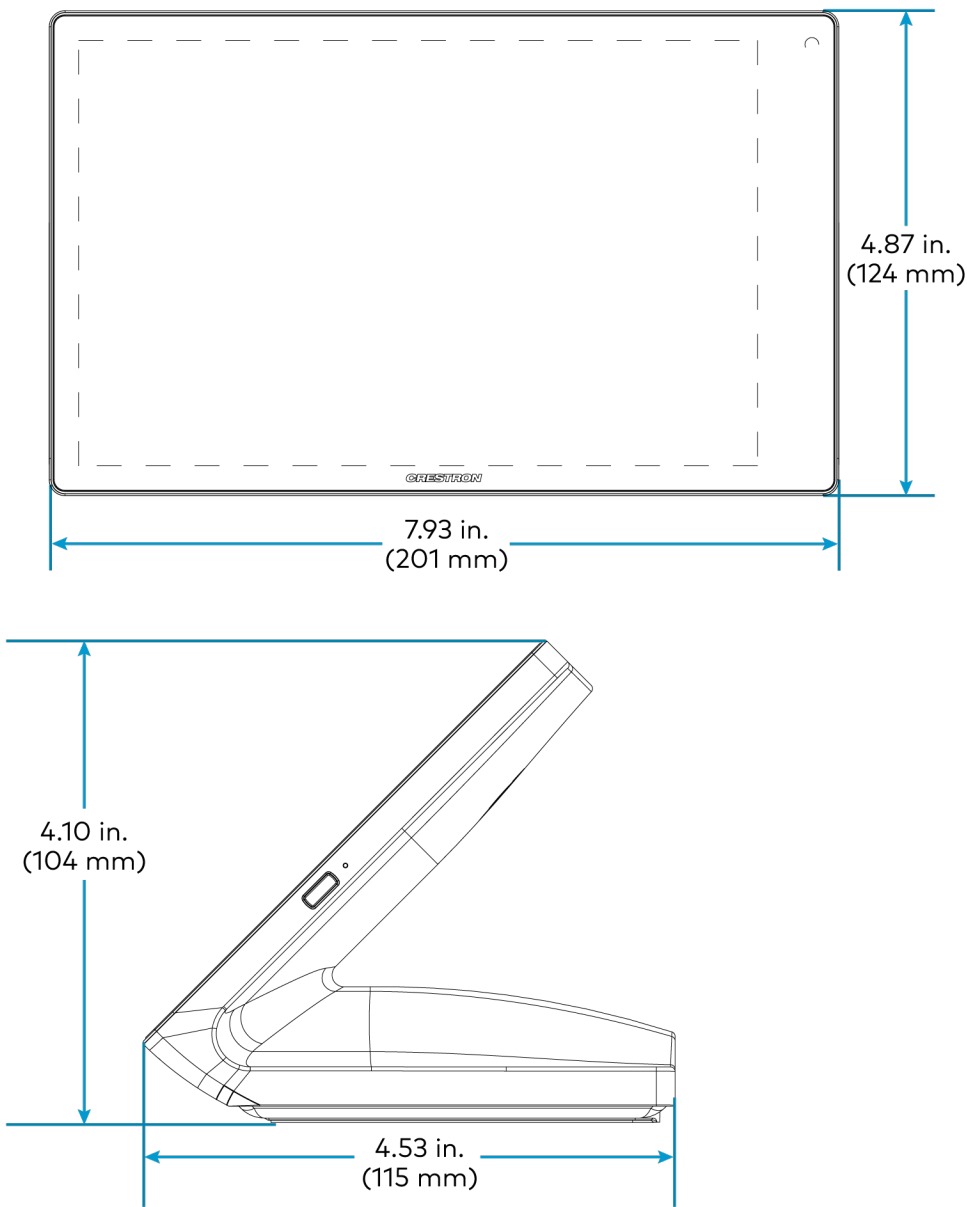

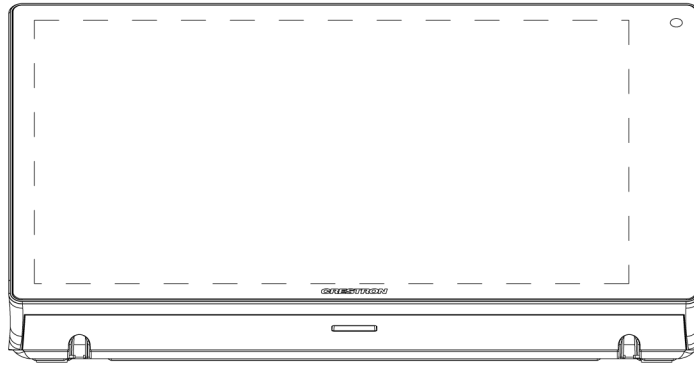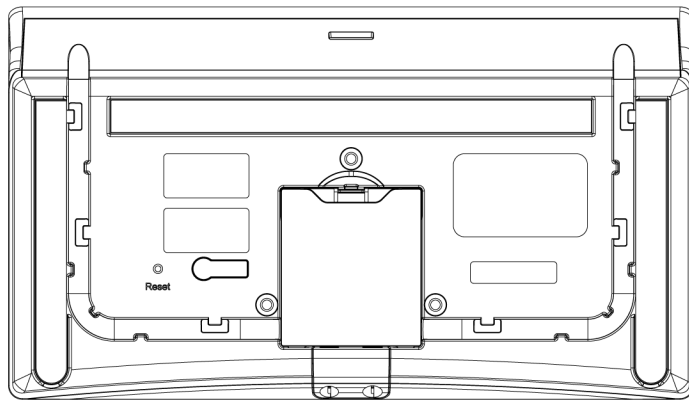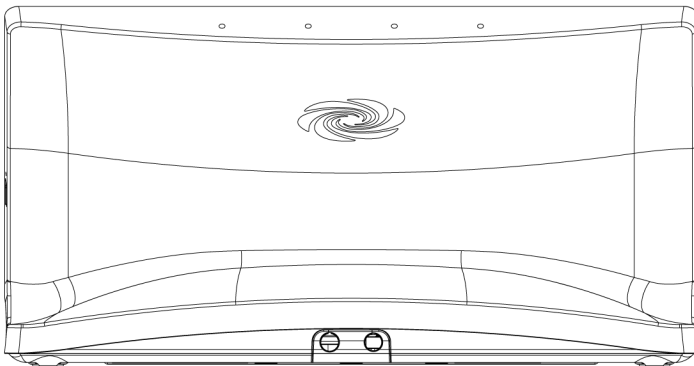

TS-1080 Specifications

Product specifications for the TS-1080 are provided below.

Product Specifications

Touch Screen Display

Display Type	TFT active matrix color LCD
Size	10.1 in. (257 mm) diagonal
Aspect Ratio	16:10 WXGA
Resolution	1920 x 1200 pixels
Brightness	Minimum: 350 nits (cd/m ²) Maximum: 400 nits (cd/m ²)
Contrast	1000:1
Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5 point multitouch capable

Buttons

Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	(1) Pin hole on rear for hardware reset

Graphics Engine

Crestron HTML5 multilanguage web browser¹, multilanguage on-screen keyboard, screensaver, dual scalable streaming video window , native room scheduling applications ^{4,5,6}, native Crestron Home[®] OS app, touch screen setup and diagnostics via web browser, cloud, or on-screen UI

Room Scheduling Support

Crestron Scheduling App	Microsoft Exchange Server [®] and Microsoft 365 [®] software, Google Calendar [™] calendaring app and G Suite [™] software, CollegeNET [®] 25Live [®] software, and Ad Astra [™] software
Third-Party Apps	Includes support for various third-party scheduling applications. ^{4,5,6}

Memory

RAM	8GB LPDDR4
Storage	40GB eMMC pSLC
Maximum Project Size	1000 MB

Wired Communications

Ethernet	1000Mbps, autoswitching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, CIP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3 at compliant
USB	USB 2.0 host for room scheduling accessories

Wireless Communications

Transceiver	IEEE 802.11a/b/g/n/ac/ax Wi-Fi 6E (2.4, 5 GHz and 6GHz) 2x2 MIMO, static IP or dynamic IP via DHCP
Security	64 and 128-bit WEP, WPA, WPA2, WPA3, WPA Enterprise and WPA2 Enterprise
Range	Up to 50 ft (15 m), subject to site-specific conditions
Bluetooth® Hardware	BLE, BT5.2, 33 ft (10 m) typical range
Radio Frequency (RF) signals	Proximity sensor (Japan): 60.5 to 61 GHz Proximity sensor (Worldwide): 61 to 61.5 GHz

Streaming Decoder

Video Formats	H.265, H.264, MJPEG
Audio Formats	AAC Stereo
Bitrates	Up to 25 Mbps (20 Mbps maximum recommended)
Input Resolutions	Up to 3840x2160@30fps
Protocol	RTSP

Audio

Features	Built-in microphone ² and speakers, Rava® SIP Intercom
-----------------	---

Connectors

LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 1000BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(1) USB Type C connector, female; USB 2.0 host port; USB 3.1 DisplayPort Alt Mode (coming soon)

Power

PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1)
----------------------------------	---

NOTE: Enabling the USB port requires use of an 802.3 at Type 2 PoE+ PSE.

Environmental

Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr

Construction

Housing	Die-cast aluminum housing, smooth black or white finish, glass with black or white surround
----------------	---

Dimensions

Height	4.88 in. (124 mm)
Width	9.68 in. (245 mm)
Depth	4.53 in. (115 mm)

Weight

2.23 lb (464 g)

Compliance



Regulatory Model: M202404006




TUV Listed for the United States and Canada to UL/IEC 62368-1 safety standards. Meets CE, IC, and FCC compliance requirements

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. The microphone and Bluetooth® transceiver may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.
4. Room scheduling mode requires the TS-1080 to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
5. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
6. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-1080 as they do on a tablet device. The TS-1080 runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-1080.

Dimension Drawings

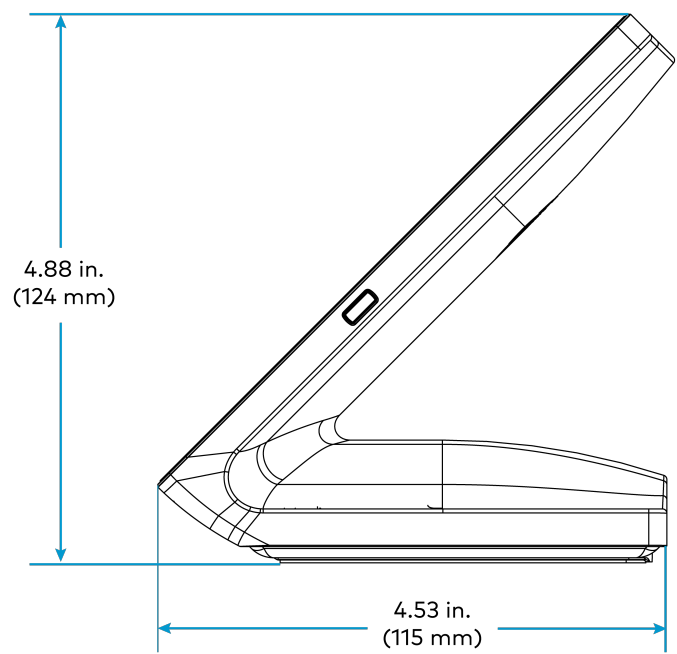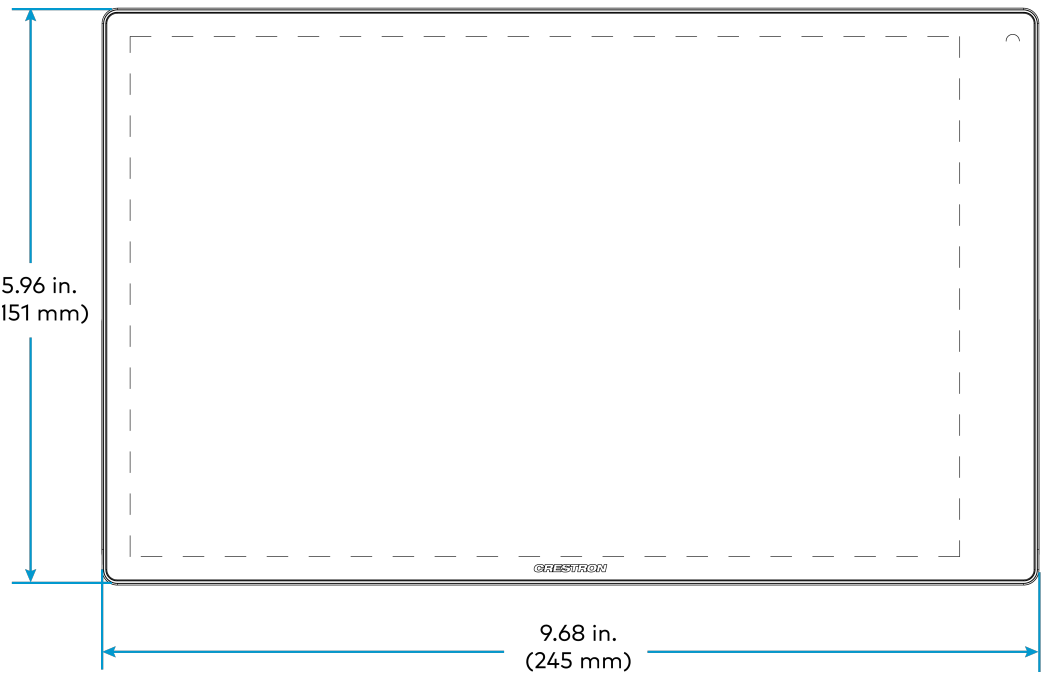

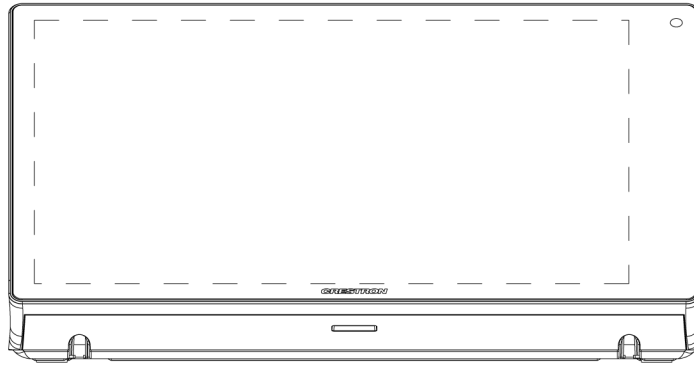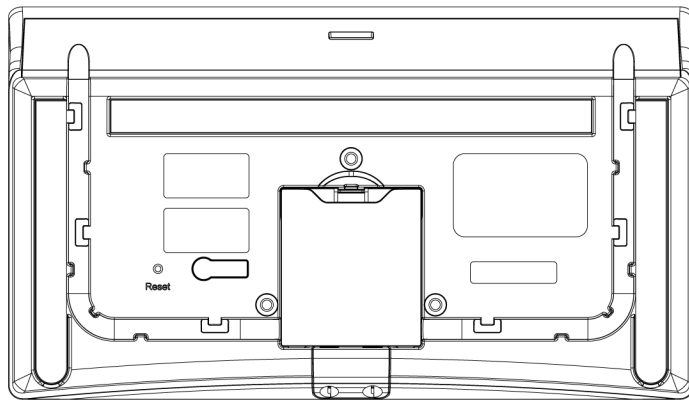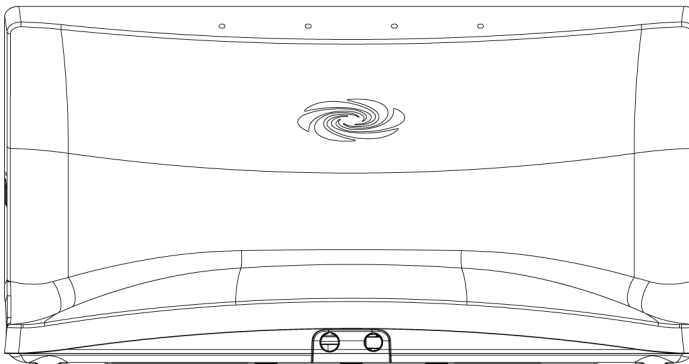

TS-880-GV-B Specifications

Product specifications for the TS-880-GV-B are provided below.

Product Specifications

Touch Screen Display

Display Type	TFT active matrix color LCD
Size	8.1 in. (204 mm) diagonal
Aspect Ratio	16:10 WXGA
Resolution	1280 x 800 pixels
Brightness	Minimum: 350 nits (cd/m ²) Maximum: 400 nits (cd/m ²)
Contrast	1000:1
Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5 point multitouch capable

Buttons

Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	(1) Pin hole on rear for hardware reset

Graphics Engine

Crestron HTML5 multilanguage web browser¹, multilanguage on-screen keyboard, screensaver, dual scalable streaming video window , touch screen setup and diagnostics via web browser, cloud, or on-screen UI

Room Scheduling Support

Crestron Scheduling App	Microsoft Exchange Server® and Microsoft 365® software, Google Calendar™ calendaring app and G Suite™ software, CollegeNET® 25Live® software, and Ad Astra™ software
Third-Party Apps	Includes support for various third-party scheduling applications. ^{3,4,5}

Memory

RAM	8GB LPDDR4
Storage	40GB eMMC pSLC
Maximum Project Size	1000 MB

Wired Communications

Ethernet	1000Mbps, autoswitching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, CIP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3 at compliant
USB	USB 2.0 host for room scheduling accessories

Streaming Decoder

Video Formats	H.265, H.264, MJPEG
Audio Formats	AAC Stereo
Bitrates	Up to 25 Mbps (20 Mbps maximum recommended)
Input Resolutions	Up to 3840x2160@30fps
Protocol	RTSP

Audio

Features	Built-in speakers
-----------------	-------------------

Connectors

LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 1000BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(1) USB Type C connector, female; USB 2.0 host port; USB 3.1 DisplayPort Alt Mode (coming soon)

Power

PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1)
----------------------------------	---

NOTE: Enabling the USB port requires use of an 802.3 at Type 2 PoE+ PSE.

Environmental

Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr

Construction

Housing	Die-cast aluminum housing, smooth black or white finish, glass with black or white surround
----------------	---

Dimensions

Height	4.10 in. (104 mm)
Width	7.93 in. (201 mm)
Depth	4.53 in. (115 mm)

Weight

1.76 lb (799 g)

Compliance


Regulatory Model: M202404005




TUV Listed for the United States and Canada to UL/IEC 62368-1 safety standards. Meets CE, IC, and FCC compliance requirements

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. Item(s) sold separately. Refer to each product's spec sheet for complete information.
3. Room scheduling mode requires the TS-880-GV to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
4. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
5. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-880-GV as they do on a tablet device. The TS-880-GV runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-880-GV.

Dimension Drawings

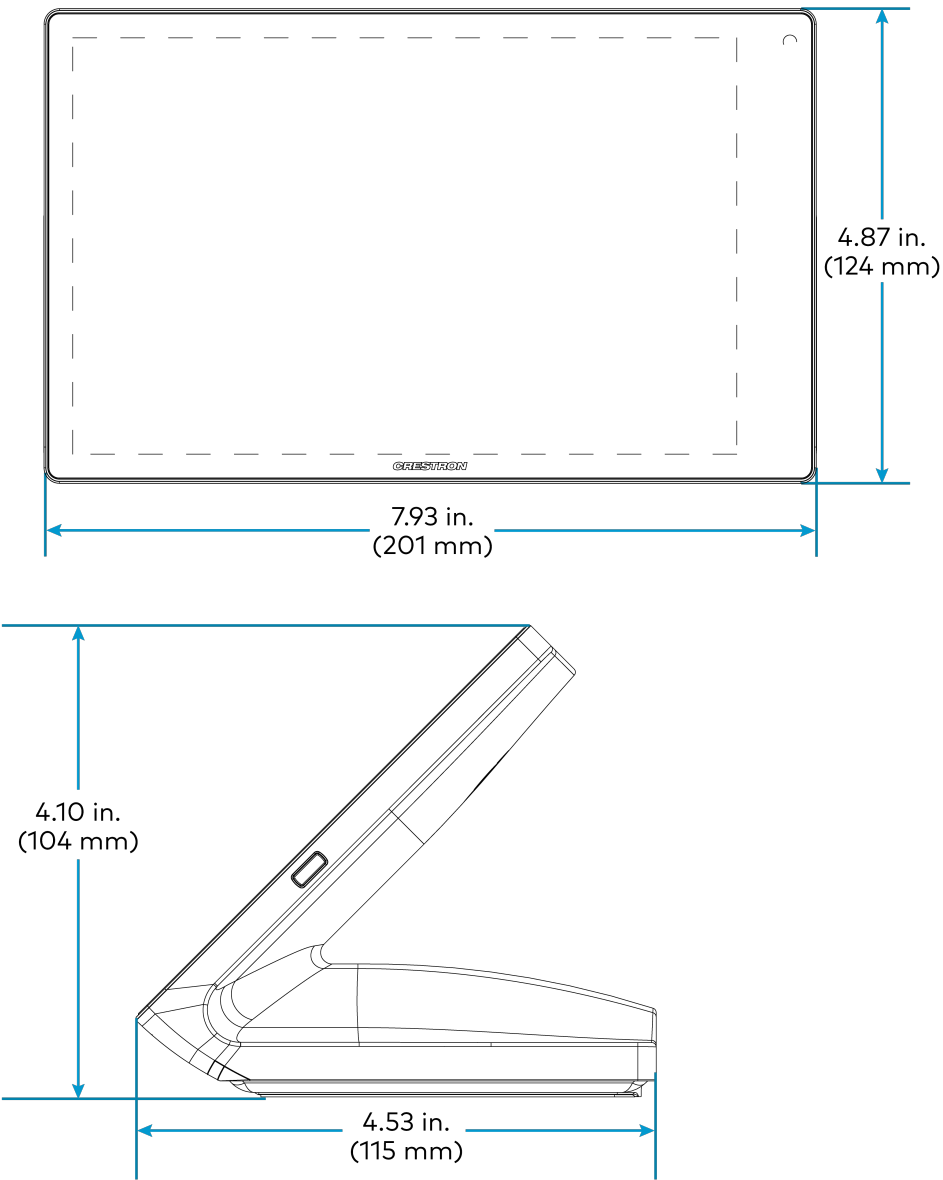

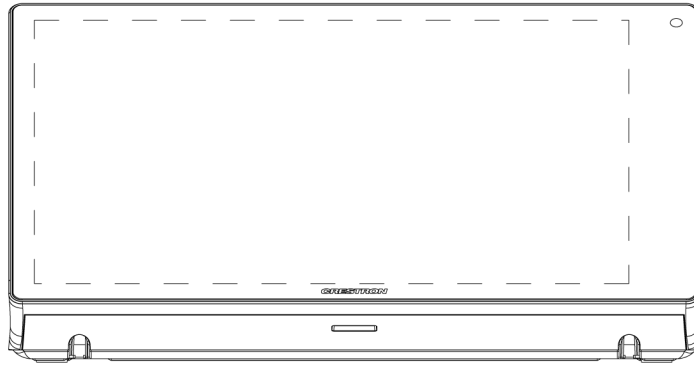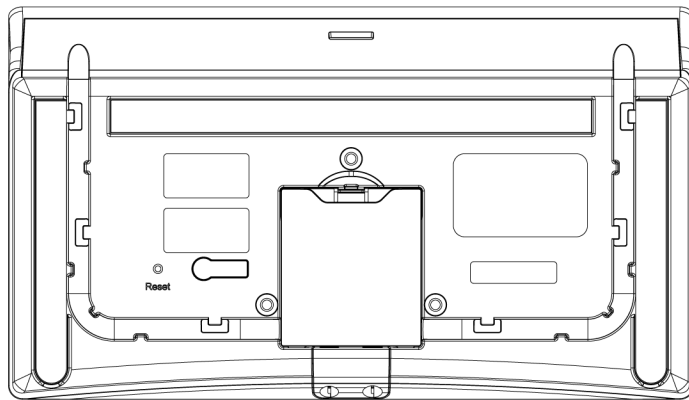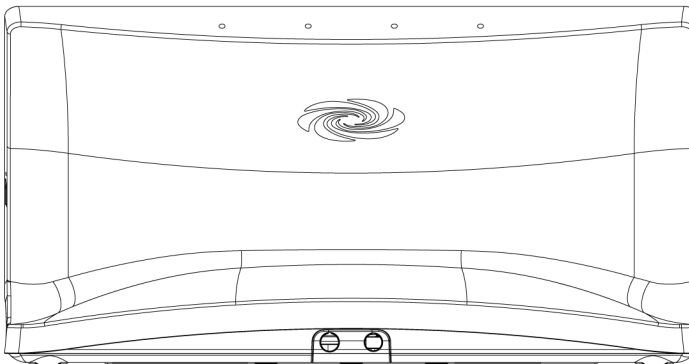

TS-1080-GV-B Specifications

Product specifications for the TS-1080-GV-B are provided below.

Product Specifications

Touch Screen Display

Display Type	TFT active matrix color LCD
Size	10.1 in. (257 mm) diagonal
Aspect Ratio	16:10 WXGA
Resolution	1920 x 1200 pixels
Brightness	Minimum: 350 nits (cd/m ²) Maximum: 400 nits (cd/m ²)
Contrast	1000:1
Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5 point multitouch capable

Buttons

Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	(1) Pin hole on rear for hardware reset

Graphics Engine

Crestron HTML5 multilanguage web browser¹, multilanguage on-screen keyboard, screensaver, dual scalable streaming video window , touch screen setup and diagnostics via web browser, cloud, or on-screen UI

Room Scheduling Support

Crestron Scheduling App	Microsoft Exchange Server® and Microsoft 365® software, Google Calendar™ calendaring app and G Suite™ software, CollegeNET® 25Live® software, and Ad Astra™ software
Third-Party Apps	Includes support for various third-party scheduling applications. ^{3,4,5}

Memory

RAM	8GB LPDDR4
Storage	40GB eMMC pSLC
Maximum Project Size	1000 MB

Wired Communications

Ethernet	1000Mbps, autoswitching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, CIP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, XiO Cloud® client, IEEE 802.3 at compliant
USB	USB 2.0 host for room scheduling accessories

Streaming Decoder

Video Formats	H.265, H.264, MJPEG
Audio Formats	AAC Stereo
Bitrates	Up to 25 Mbps (20 Mbps maximum recommended)
Input Resolutions	Up to 3840x2160@30fps
Protocol	RTSP

Audio

Features	Built-in speakers
-----------------	-------------------

Connectors

LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 1000BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(1) USB Type C connector, female; USB 2.0 host port; USB 3.1 DisplayPort Alt Mode (coming soon)

Power

PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1)
----------------------------------	---

NOTE: Enabling the USB port requires use of an 802.3 at Type 2 PoE+ PSE.

Environmental

Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr

Construction

Housing	Die-cast aluminum housing, smooth black or white finish, glass with black or white surround
----------------	---

Dimensions

Height	4.88 in. (124 mm)
Width	9.68 in. (245 mm)
Depth	4.53 in. (115 mm)

Weight

2.23 lb (464 g)

Compliance



Regulatory Model: M202404006




TUV Listed for the United States and Canada to UL/IEC 62368-1 safety standards. Meets CE, IC, and FCC compliance requirements

Notes:

1. Web browsing, weather information, and certain other functions require an internet connection.
2. Item(s) sold separately. Refer to each product's spec sheet for complete information.
3. Room scheduling mode requires the TS-1080-GV to be designated exclusively for room scheduling use, which precludes use of certain features and functions described in this spec sheet. Additionally, CollegeNET® 25Live® scheduling software and Ad Astra™ software do not support scheduling ad hoc meetings from the touch screen. For design assistance, contact the Crestron True Blue support team at www.crestron.com/support.
4. Refer to the firmware release notes for a list of all scheduling apps that are supported by that firmware release.
5. Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services. Third party apps typically run on the TS-1080-GV as they do on a tablet device. The TS-1080-GV runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron can run on the TS-1080-GV.

Dimension Drawings

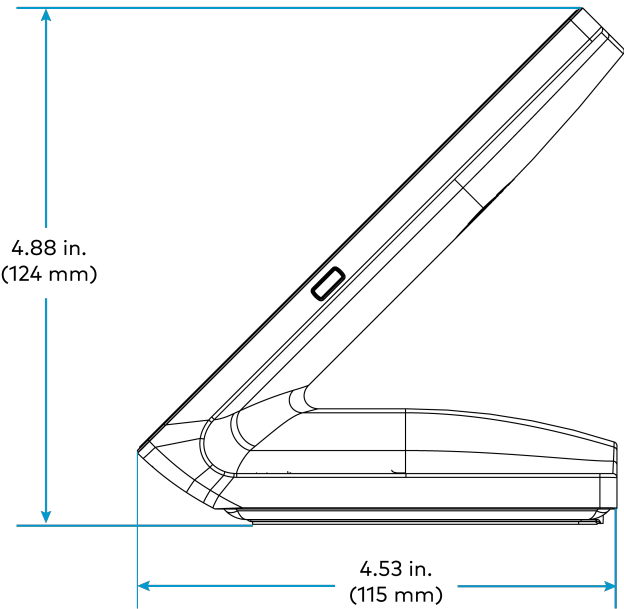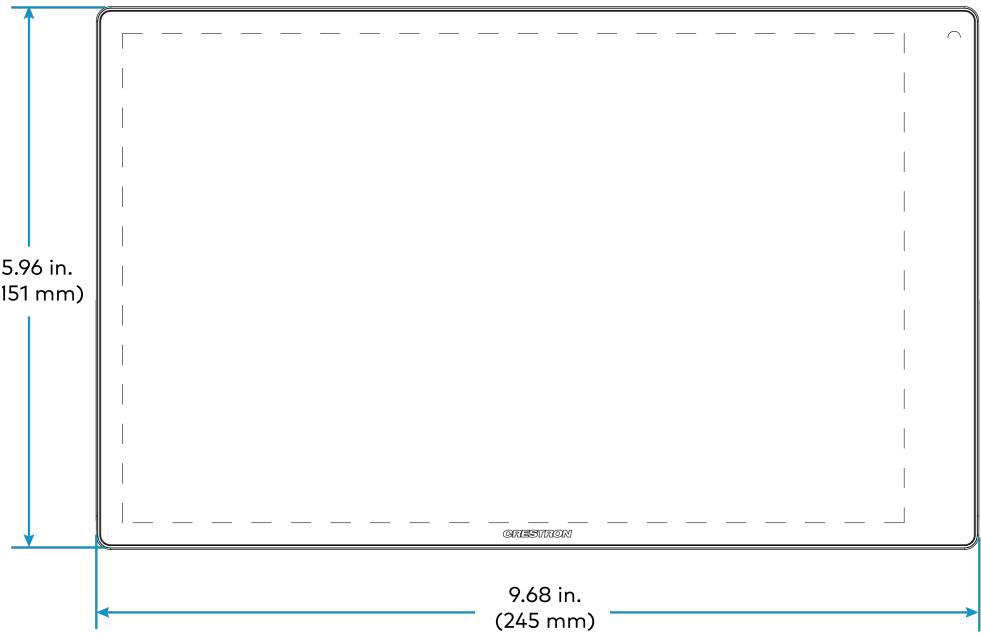

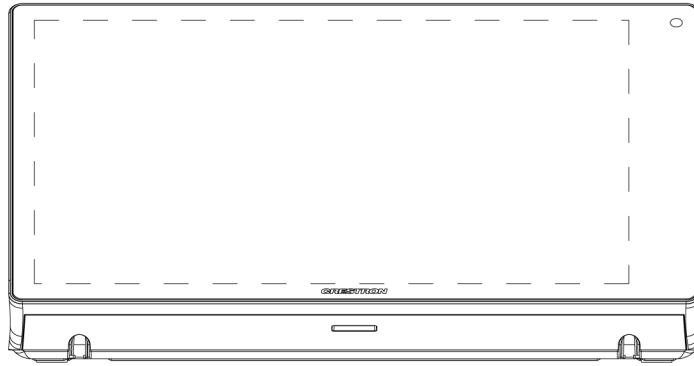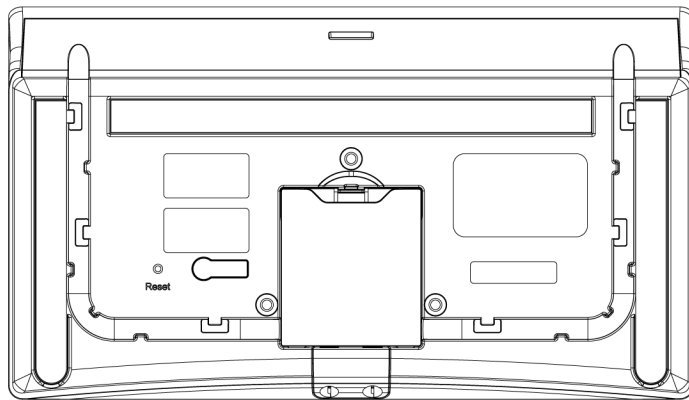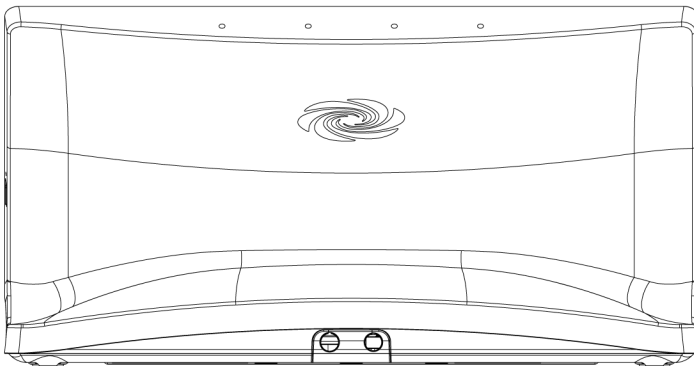

TS-880R Specifications

Product specifications for the TS-880R are provided below.

Product Specifications

Touch Screen Display

Display Type	TFT active matrix color LCD
Size	8.1 in. (204 mm) diagonal
Aspect Ratio	16:10 WXGA
Resolution	1280 x 800 pixels
Brightness	Minimum: 350 nits (cd/m ²) Maximum: 400 nits (cd/m ²)
Contrast	1000:1
Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5 point multitouch capable

Buttons

Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	(1) Pin hole on rear for hardware reset

Graphics Engine

Dual scalable streaming video window , native Crestron Home® OS app, touch screen setup and diagnostics via web browser, cloud, or on-screen UI, Crestron Home setup and diagnostics via Crestron Home Setup app

Languages

Onscreen Keyboard	Arabic, Chinese (Simplified), Croatian, Czech, Danish, Dutch, English (UK), English (US), Finnish, French (Canada), French (Switzerland), German, Hebrew, Hungarian, Italian, Japanese, Norwegian Bokmal, Polish, Portuguese, Russian, Serbian, Spanish, Swedish, Turkish
--------------------------	---

Memory

RAM	8GB LPDDR4
Storage	40GB eMMC pSLC
Maximum Project Size	1000 MB

Wired Communications

Ethernet	1000Mbps, autoswitching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, CIP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, IEEE 802.3 at compliant
USB	USB 2.0 host

Wireless Communications

Transceiver	IEEE 802.11a/b/g/n/ac/ax Wi-Fi 6E (2.4, 5 GHz and 6GHz) 2x2 MIMO, static IP or dynamic IP via DHCP
Security	64 and 128-bit WEP, WPA, WPA2, WPA3, WPA Enterprise and WPA2 Enterprise
Range	Up to 50 ft (15 m), subject to site-specific conditions
Bluetooth® Hardware	BLE, BT5.2, 33 ft (10 m) typical range
Radio Frequency (RF) signals	Proximity sensor (Japan): 60.5 to 61 GHz Proximity sensor (Worldwide): 61 to 61.5 GHz

Streaming Decoder

Video Formats	H.265, H.264, MJPEG
Audio Formats	AAC Stereo
Bitrates	Up to 25 Mbps (20 Mbps maximum recommended)
Input Resolutions	Up to 3840x2160@30fps
Protocol	RTSP

Audio

Features	Built-in microphone ² and speakers, Rava® SIP Intercom
-----------------	---

Connectors

LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 1000BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(1) USB Type C connector, female; USB 2.0 host port USB 3.1 DisplayPort Alt Mode (coming soon)

Power

PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1)
----------------------------------	---

NOTE: Enabling the USB port requires use of an 802.3 at Type 2 PoE+ PSE.

Environmental

Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr

Construction

Housing	Die-cast aluminum housing, smooth black or white finish, glass with black or white surround
----------------	---

Dimensions

Height	4.10 in. (104 mm)
Width	7.93 in. (201 mm)
Depth	4.53 in. (115 mm)

Weight

1.76 lb (799 g)

Compliance


Regulatory Model: M202404005




TUV Listed for the United States and Canada to UL/IEC 62368-1 safety standards. Meets CE, IC, and FCC compliance requirements

Notes:

1. Certain other functions require an internet connection.
2. The microphone may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.

Dimension Drawings

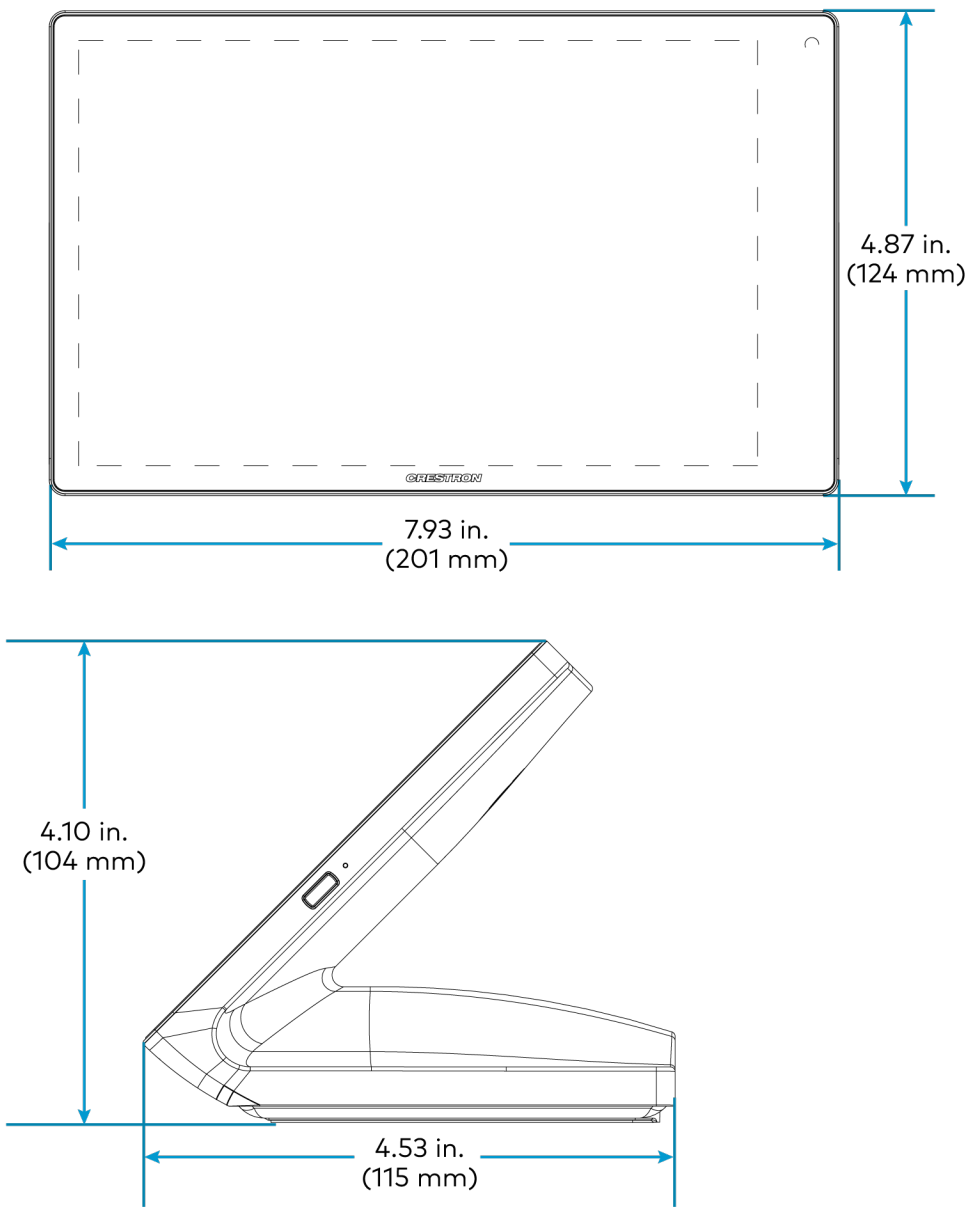

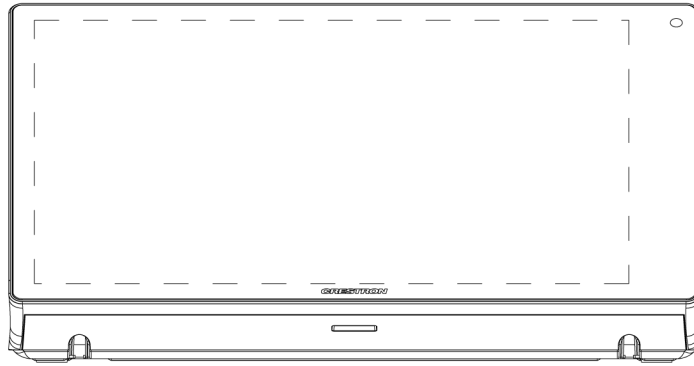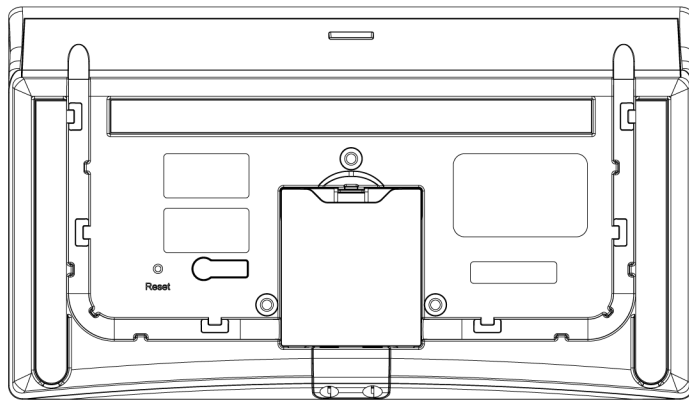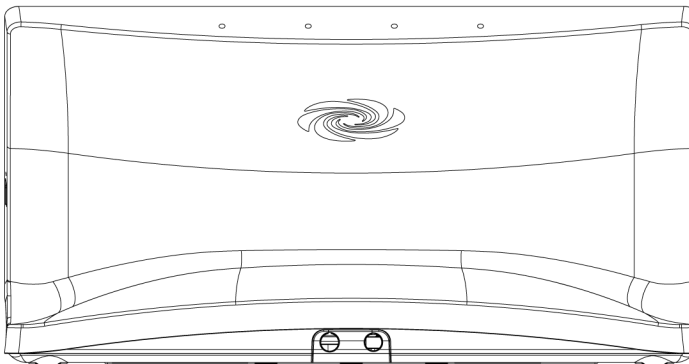

TS-1080R Specifications

Product specifications for the TS-1080R are provided below.

Product Specifications

Touch Screen Display

Display Type	TFT active matrix color LCD
Size	10.1 in. (257 mm) diagonal
Aspect Ratio	16:10 WXGA
Resolution	1920 x 1200 pixels
Brightness	Minimum: 350 nits (cd/m ²) Maximum: 400 nits (cd/m ²)
Contrast	1000:1
Color Depth	24 bit, 16.7M colors
Illumination	Edgelit LED with auto brightness control
Viewing Angle	±80° horizontal, ±80° vertical
Touch Screen	Projected capacitive, 5 point multitouch capable

Buttons

Virtual Buttons	(6) Virtual buttons in collapsible universal tool bar, per button show/hide, preconfigured with icons for Power, Home, Lights, Up, Down, and Microphone
Reset	(1) Pin hole on rear for hardware reset

Graphics Engine

Dual scalable streaming video window , native Crestron Home® OS app, touch screen setup and diagnostics via web browser, cloud, or on-screen UI, Crestron Home setup and diagnostics via Crestron Home Setup app

Languages

Onscreen Keyboard	Arabic, Chinese (Simplified), Croatian, Czech, Danish, Dutch, English (UK), English (US), Finnish, French (Canada), French (Switzerland), German, Hebrew, Hungarian, Italian, Japanese, Norwegian Bokmal, Polish, Portuguese, Russian, Serbian, Spanish, Swedish, Turkish
--------------------------	---

Memory

RAM	8GB LPDDR4
Storage	40GB eMMC pSLC
Maximum Project Size	1000 MB

Wired Communications

Ethernet	1000Mbps, autoswitching, autonegotiating, autodiscovery, full/half duplex, TCP/IP, UDP/IP, CIP, DHCP, SSL, TLS, SSH, SFTP (SSH File Transfer Protocol), IEEE 802.1X, SNMP, IPv4 or IPv6, Active Directory® service authentication, HTTPS web browser setup, IEEE 802.3 at compliant
USB	USB 2.0 host

Wireless Communications

Transceiver	IEEE 802.11a/b/g/n/ac/ax Wi-Fi 6E (2.4, 5 GHz and 6GHz) 2x2 MIMO, static IP or dynamic IP via DHCP
Security	64 and 128-bit WEP, WPA, WPA2, WPA3, WPA Enterprise and WPA2 Enterprise
Range	Up to 50 ft (15 m), subject to site-specific conditions
Bluetooth® Hardware	BLE, BT5.2, 33 ft (10 m) typical range
Radio Frequency (RF) signals	Proximity sensor (Japan): 60.5 to 61 GHz Proximity sensor (Worldwide): 61 to 61.5 GHz

Streaming Decoder

Video Formats	H.265, H.264, MJPEG
Audio Formats	AAC Stereo
Bitrates	Up to 25 Mbps (20 Mbps maximum recommended)
Input Resolutions	Up to 3840x2160@30fps
Protocol	RTSP

Audio

Features	Built-in microphone ² and speakers, Rava® SIP Intercom
-----------------	---

Connectors

LAN PoE	(1) 8-pin RJ-45 connector, female, with 2 LED indicators; 1000BASE-TX Ethernet port; PoE+ PD port; Green and yellow LEDs indicate Ethernet port status
USB	(1) USB Type C connector, female; USB 2.0 host port USB 3.1 DisplayPort Alt Mode (coming soon)

Power

PoE (Power over Ethernet)	IEEE 802.3at Type 2 compliant PoE+ PD (Powered Device); Requests 30 W (PoE+ Class 4) from an 802.3at Type 2 PSE without LLDP; Requests 15.4 W (PoE Class 0) from an 802.3af (or 802.3at Type 1)
----------------------------------	---

NOTE: Enabling the USB port requires use of an 802.3 at Type 2 PoE+ PSE.

Environmental

Temperature	32 to 104°F (0 to 40°C)
Humidity	10% to 95% RH (noncondensing)
Heat Dissipation	44 BTU/hr

Construction

Housing	Die-cast aluminum housing, smooth black or white finish, glass with black or white surround
----------------	---

Dimensions

Height	4.88 in. (124 mm)
Width	9.68 in. (245 mm)
Depth	4.53 in. (115 mm)

Weight

2.23 lb (464 g)

Compliance



Regulatory Model: M202404006




TUV Listed for the United States and Canada to UL/IEC 62368-1 safety standards. Meets CE, IC, and FCC compliance requirements

Notes:

1. Certain other functions require an internet connection.
2. The microphone may be defeated programmatically at any time.
3. Item(s) sold separately. Refer to each product's spec sheet for complete information.

Dimension Drawings

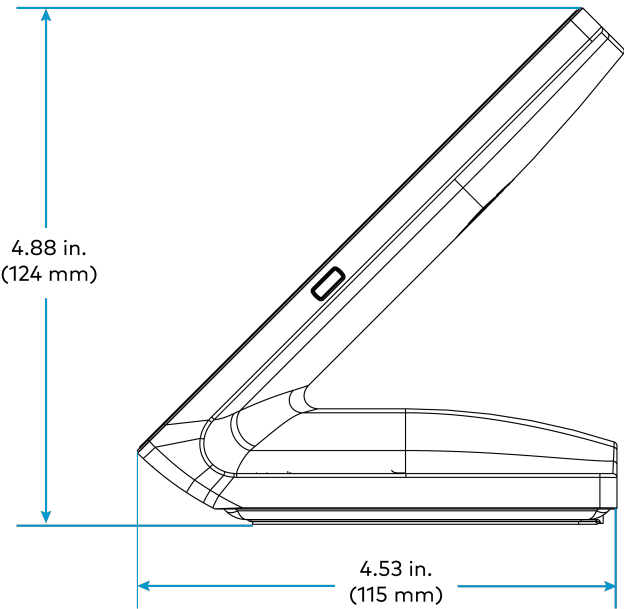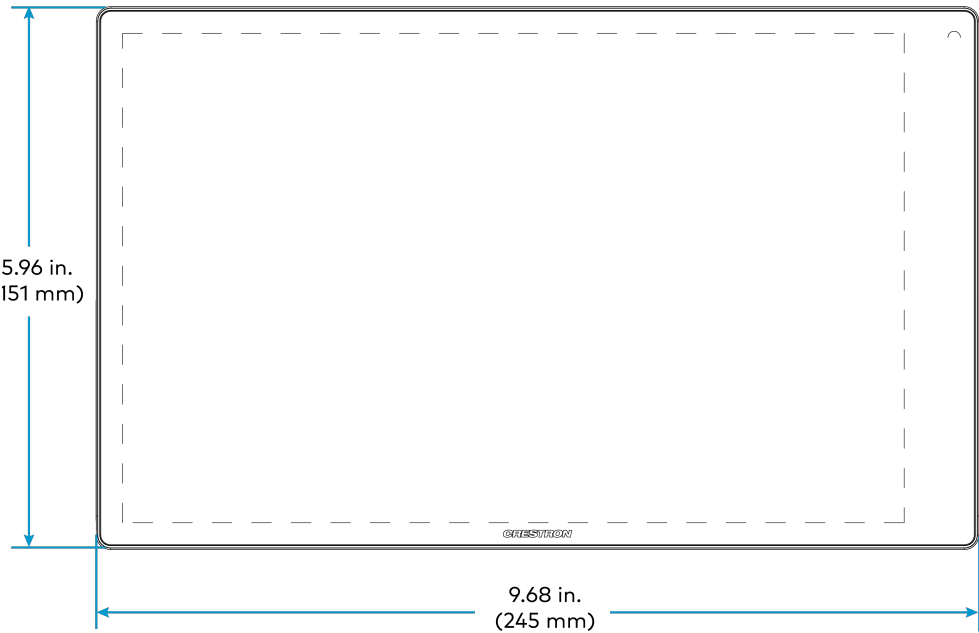

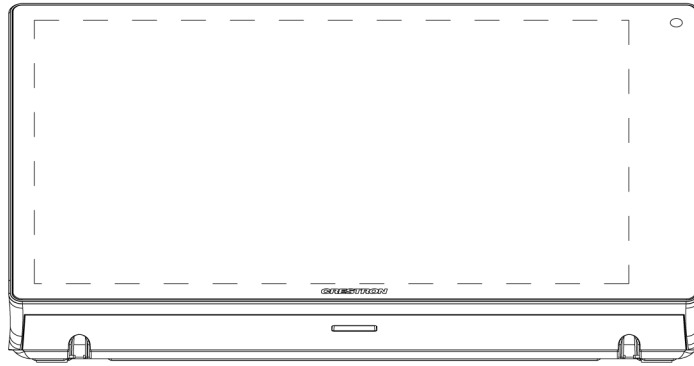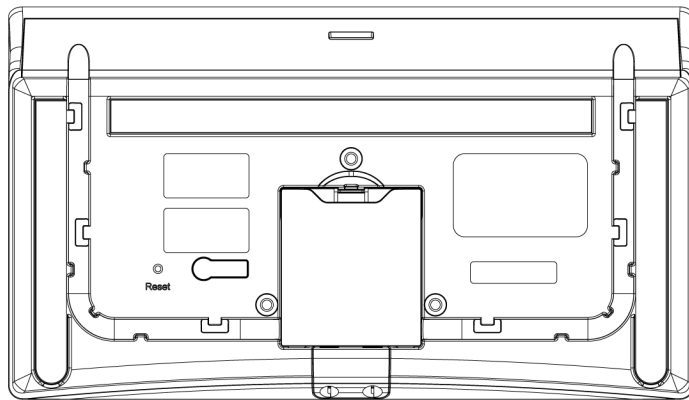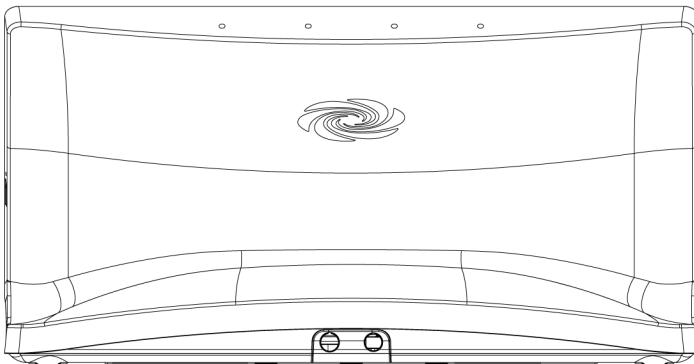

Getting Started

This section provides structured entry points for initial use of the touch screen. Refer to the below sections for more information on out of the box set up, installation, or web and local configuration.

Installation

For information on installing the touch screen and its mounting accessories, refer to [Installation on page 58](#).

Initial Setup

For information on setting up the touch screen before use, refer to [Initial Setup on page 62](#).

Web Configuration

For information on configuring the touch screen via its web configuration interface, refer to [Web Configuration on page 71](#).

Local Configuration

For information on configurations using the touch screen display, refer to [Local Configuration on page 115](#).

Installation

Use the following procedures to install the TS-880 and TS-1080.

In the Box

Qty.	Description
1	TS-880 or TS-1080, Tabletop Touch Screen
Additional Items	
1	Cable Grommet, Open (2063984)
1	Cable Grommet, Closed (2063985)


Place the Touch Screen

The touch screen may be placed on any flat, level surface such as a desk, conference table, lectern, or podium.

NOTE: To clean or disinfect a touch screen display, use a soft, clean, damp (not wet) cloth with any commercially available non-ammonia glass cleaner or disinfectant cleaner. Bezels do not provide a complete watertight seal, so apply cleaning solution to the cloth rather than the surface of the touch screen. Wipe the touch screen clean and avoid ingress of moisture beneath the bezels.

Connect the Touch Screen

Route all necessary cables through the rear of the mounting bracket, and then make connections to the touch screen rear housing.

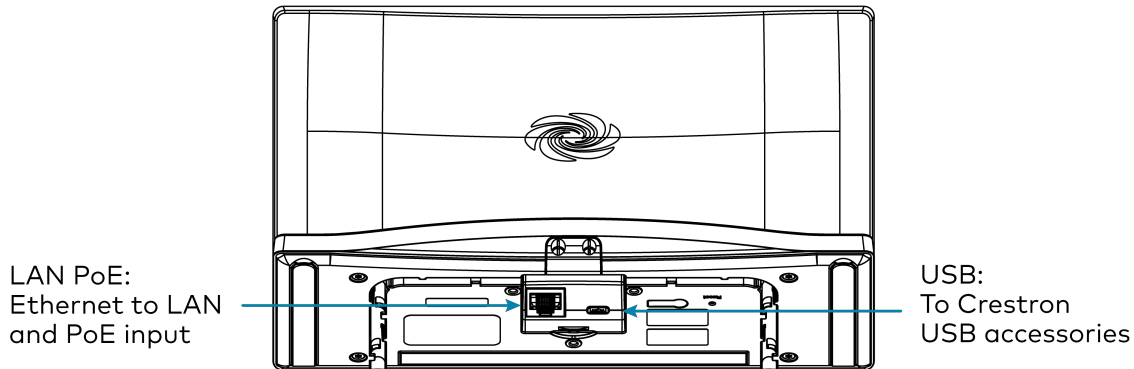

Observe the following when connecting the touch screen:

- Power and data connection is provided to the touch screen by a single Ethernet cable. A Crestron PoE (Power over Ethernet) power supply or a PoE-capable network switch is recommended (neither included). Refer to the full list of supported PoE switches [here](#).
- The USB ports are used to connect compatible Crestron LED accessories to the touch screen.

NOTE: Enabling the USB port requires use of an 802.3 at Type 2 PoE+ PSE.

- Apply power after all connections have been made.


Install the Cable Grommet

The touch screen ships with two cable grommets that can be used depending on the planned cable route to the touch screen:

- Use the open grommet if cables will be routed out from the rear of the touch screen.
- Use the closed grommet if cables will be routed from underneath the touch screen.

To install the cable grommet:

1. If using the open grommet, push the cables into the openings in the grommet.
2. Push the grommet into its slot on the bottom of the touch screen so that the two tabs on either side of the grommet engage the slots in the touch screen.

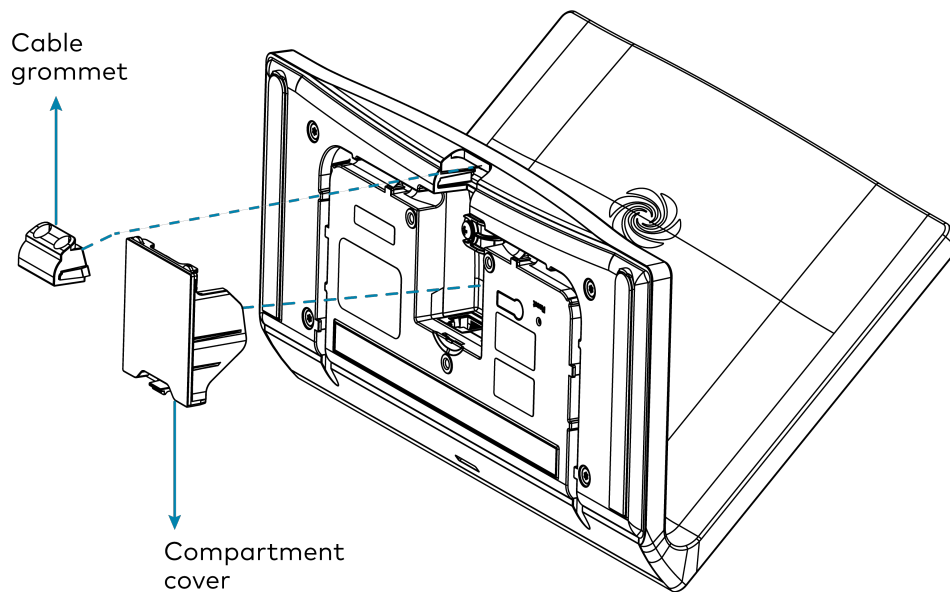

Configuration

Prior to configuration, ensure the device is running the latest firmware. Refer to [Initial Setup on page 62](#).

This section provides the following information:

- [Initial Setup](#)
- [Web Configuration](#)
- [Local Configuration](#)
- [Application Selection](#)

Initial Setup

Use the following procedures to set up the touch screen prior to regular operation.

Complete the Setup Wizard

When power is applied for the first time, the touch screen may take up to two minutes to boot.

The touch screen provides a built-in setup wizard that is displayed after first applying power to the touch screen or after a restore. The setup wizard is used to configure various touch screen settings required for operation. After completing the setup wizard, device settings for the touch screen may be configured using the built-in settings screens, the web configuration interface, or XiO Cloud. For more information on configuring the touch screen, refer to [Configuration on page 61](#).

Each screen of the setup wizard is described in the sections that follow.


NOTE: If directly connecting to the Collab Compute through PoE+, setup can be completed on the Collab Compute. Refer to the [Collab Compute Product Manual](#) for more information.

Create an Admin Account

The first time the web configuration interface is accessed, a page is displayed asking the user to create an admin account.


To create an admin account:

1. Enter a username and password for the admin account in the appropriate text fields.

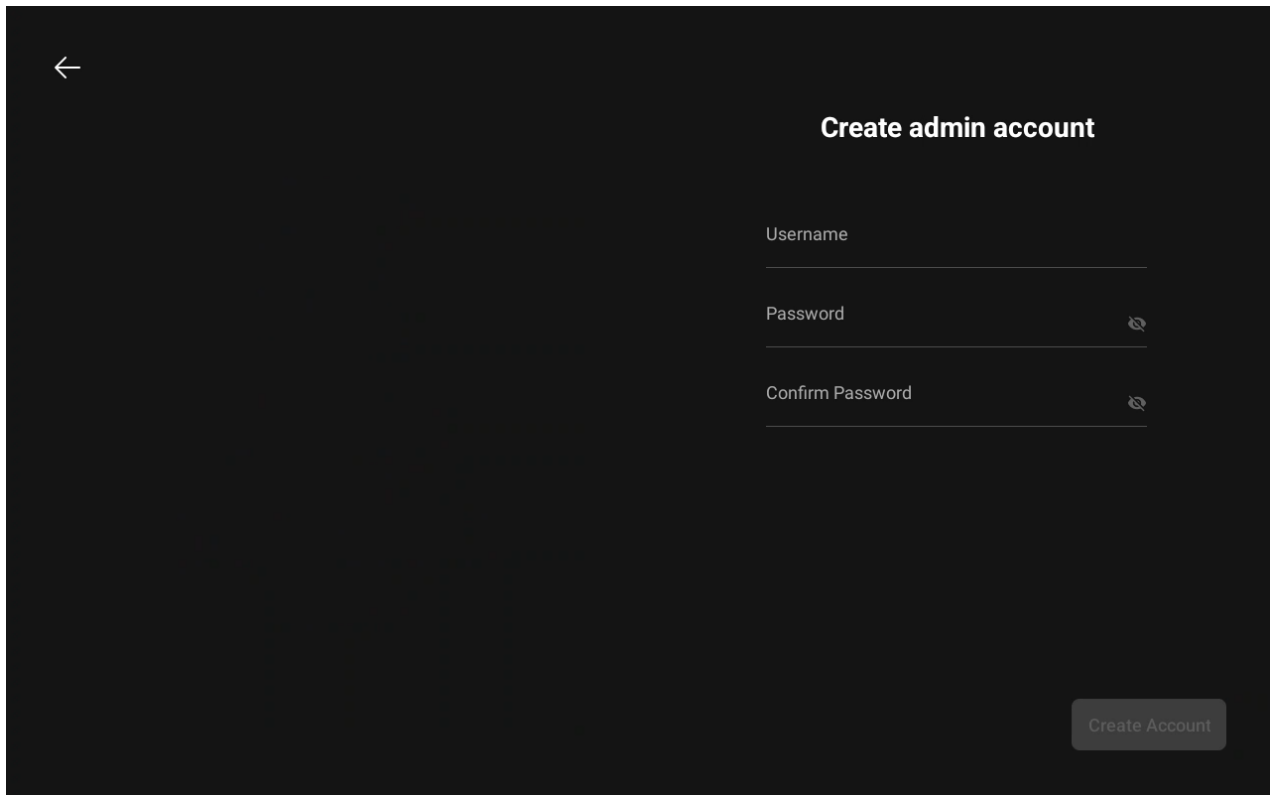

The screenshot shows a dark-themed user interface for creating an admin account. In the top-left corner, there is a white back arrow icon. The title 'Create admin account' is centered at the top in a bold, white font. Below the title, there are three text input fields stacked vertically, each with a light gray label above it: 'Username', 'Password', and 'Confirm Password'. The 'Password' and 'Confirm Password' fields include a small white icon on the right side, resembling an eye with a slash, indicating a password visibility toggle. At the bottom right of the form, there is a rounded rectangular button with the text 'Create Account' in a light gray font.

2. Select **OK** to create the admin account. The Setup Wizard refreshes to show the standard login page.

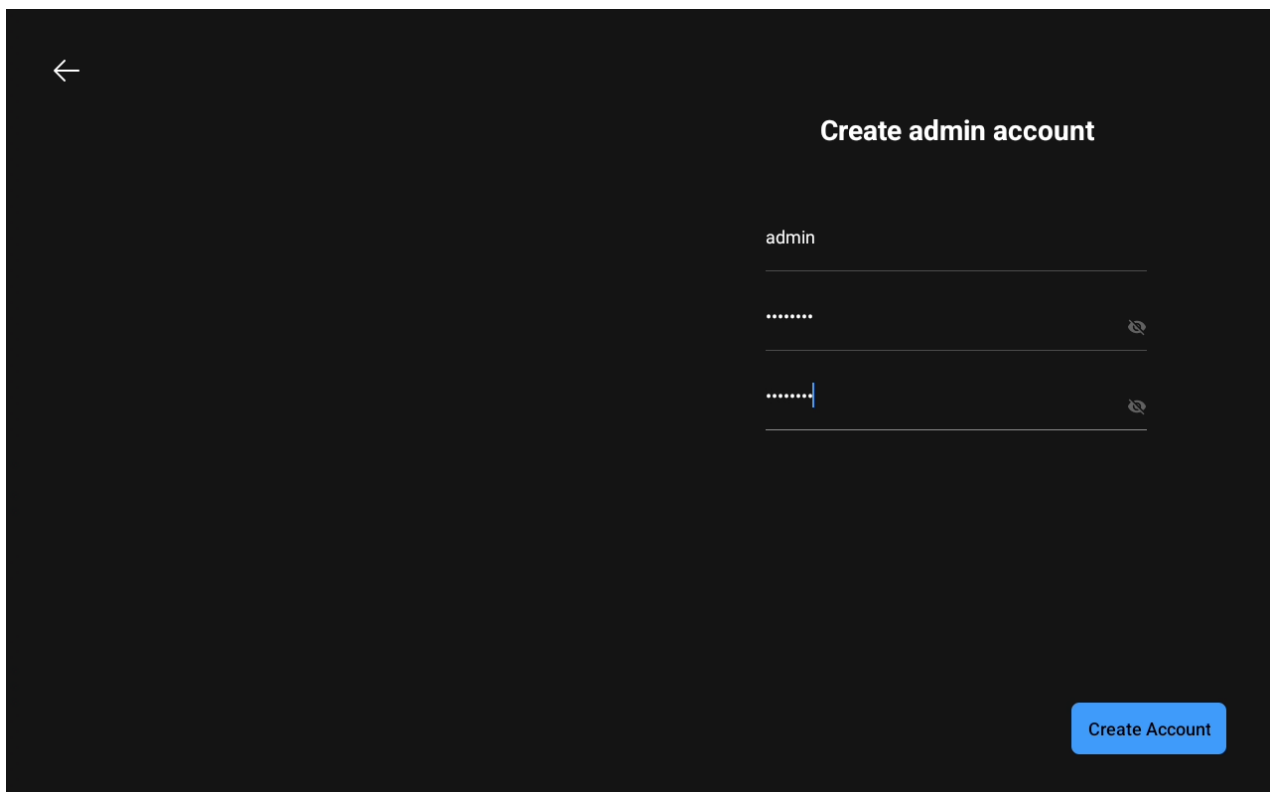

←

Create admin account

admin

.....

.....

Create Account

3. Re-enter the credentials created in step 1 and select **Sign In**.


NOTE: The username and password must also be entered when connecting from Crestron Toolbox.

Connect to a Network


If using a LAN connection, network settings will connect automatically, displaying the green **You're connected** message.

Refer to [Web Configuration on page 71](#) for more information on how to set up network settings through the touch screen IP address or XiO Cloud.


To set network and Wi-Fi settings:

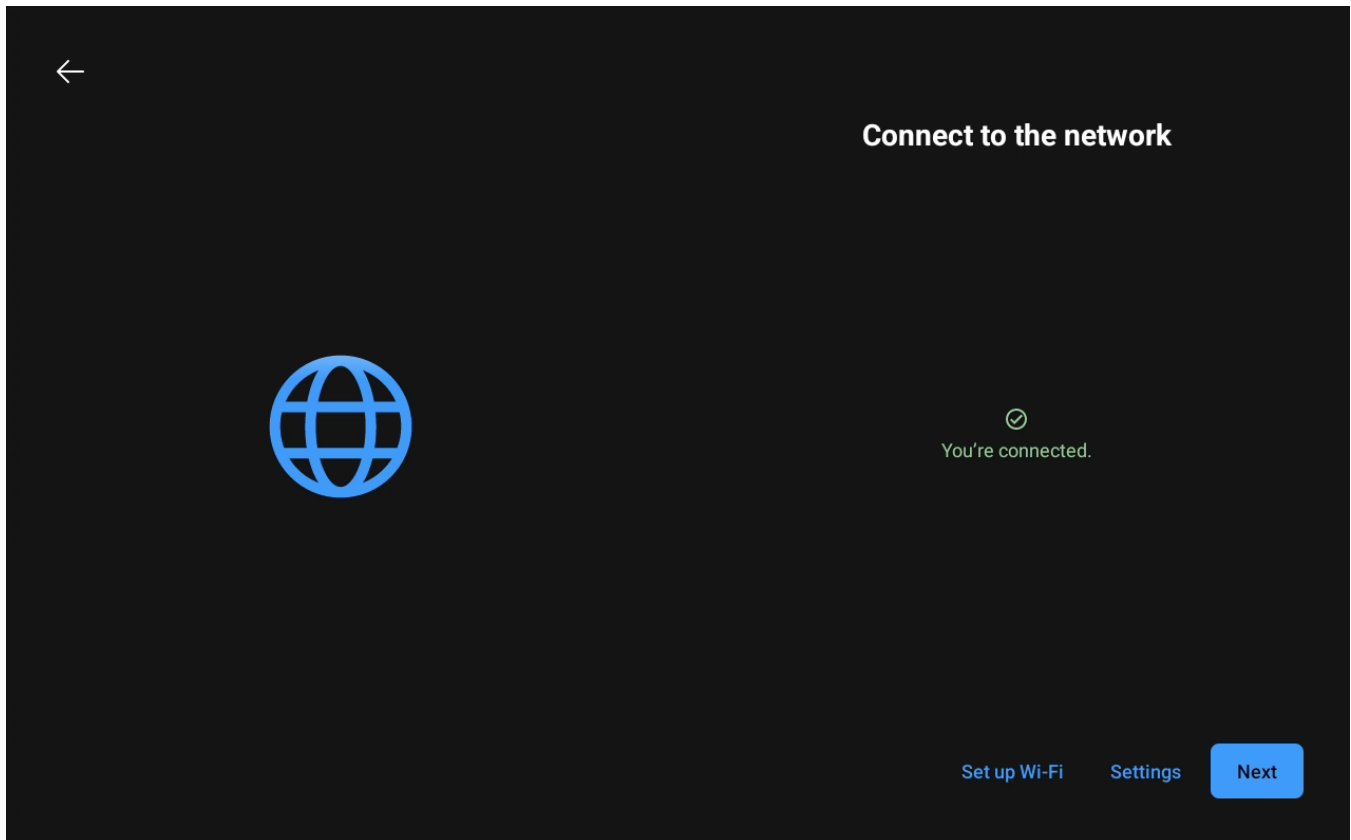


1. Select the **Set up Wi-Fi** button at the bottom of the screen.
2. Select a Wi-Fi network and complete the required **Network Settings** fields.

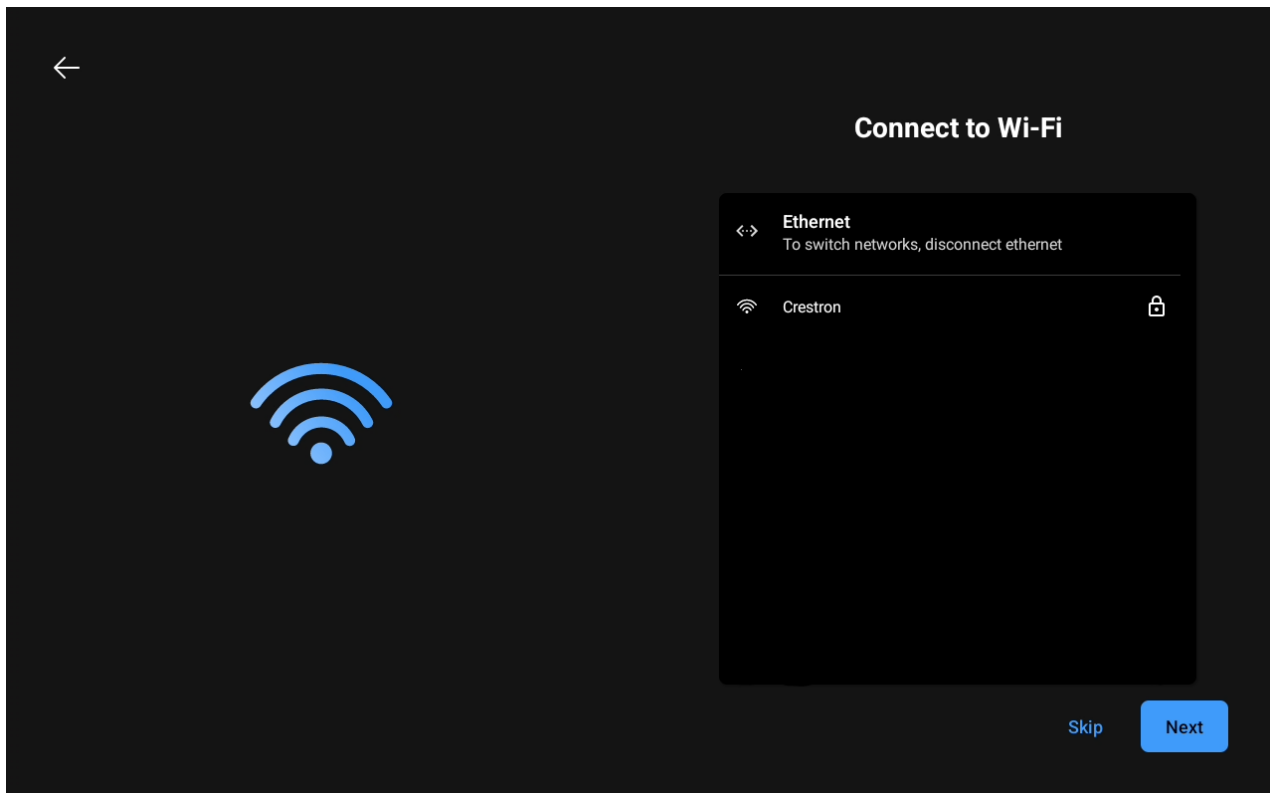

NOTE: Wi-Fi only connects when there is no direct connection or link via the Ethernet port.

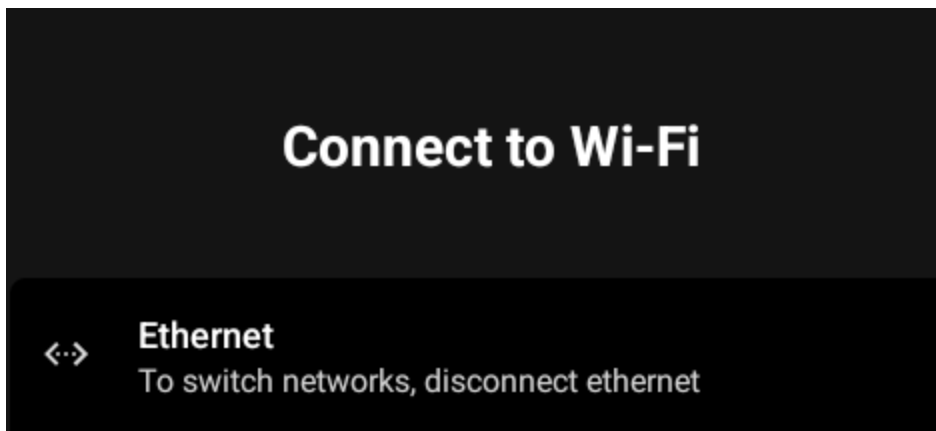

- a. Select **Add network** and enter desired network details.

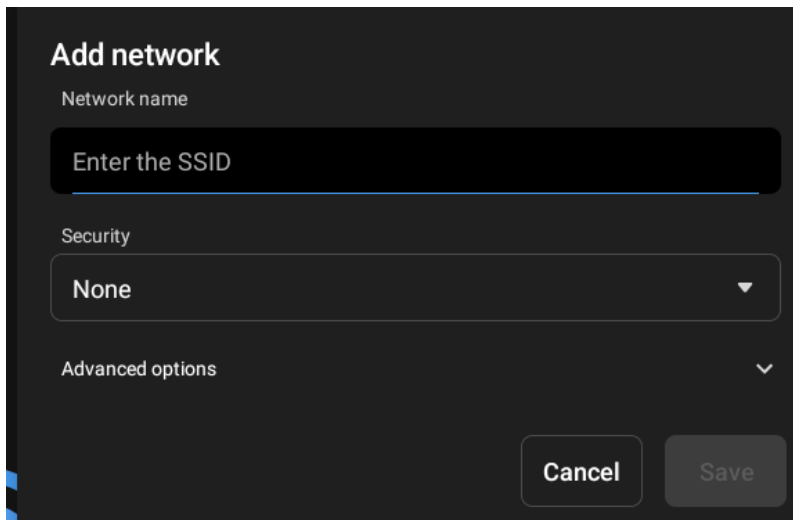


- b. Select **Save**.

Set the Time Zone

The time zone can also be set from the web configuration interface using either the touch screen IP address or the XiO Cloud service. Refer to [Web Configuration on page 71](#) for more information.

To set the time zone:

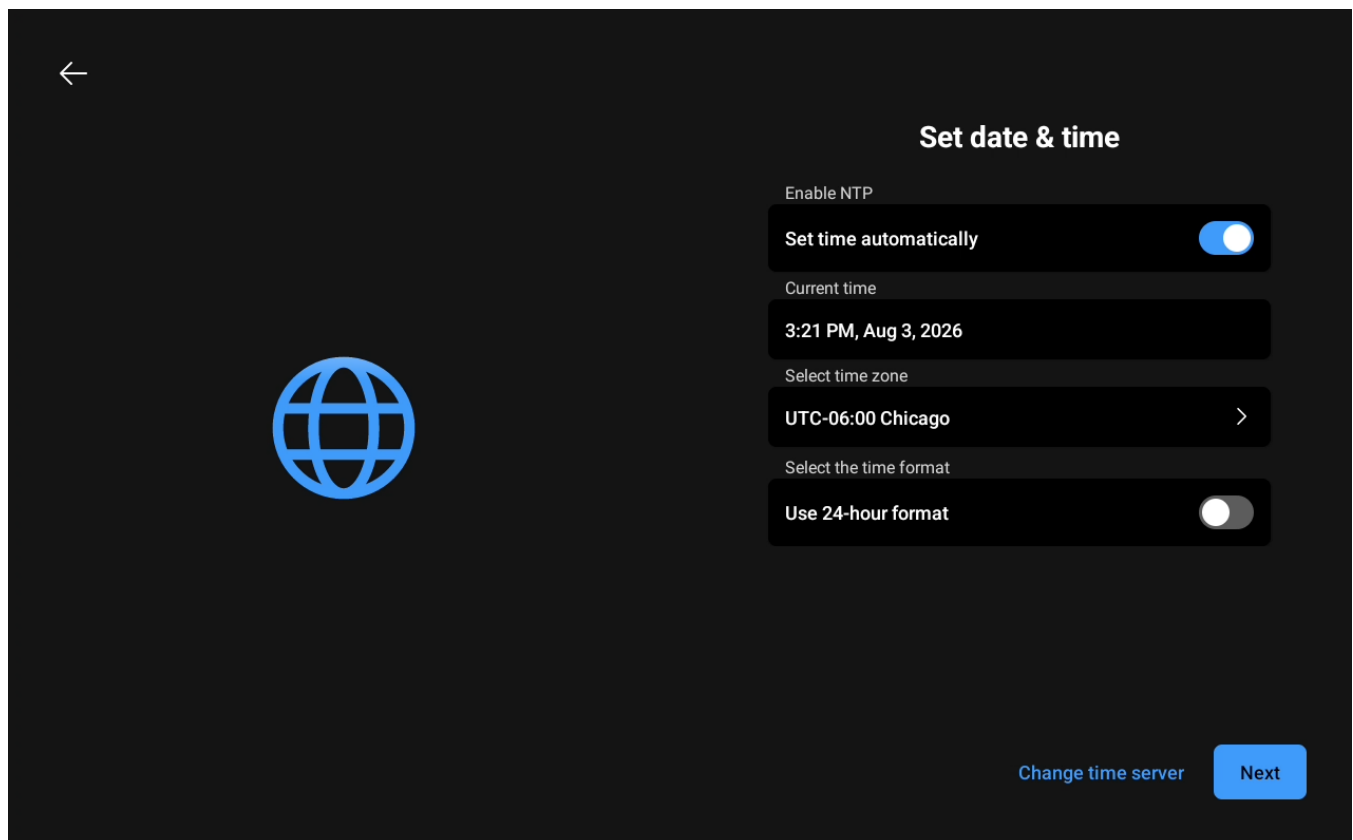


1. Turn on the **Enable NTP** toggle to set time automatically.
2. Edit the date and time manually by selecting **Current time**.
3. Select the time zone where the touch screen will be used from the **Select time zone** drop-down menu.
4. Turn **Select the time format** on or off to use the touch screen in 24 hour or 12 hour format, respectively.
5. Select **Next**.

Select an Application


The touch screen ships with various built-in applications.

To select a touch screen application:

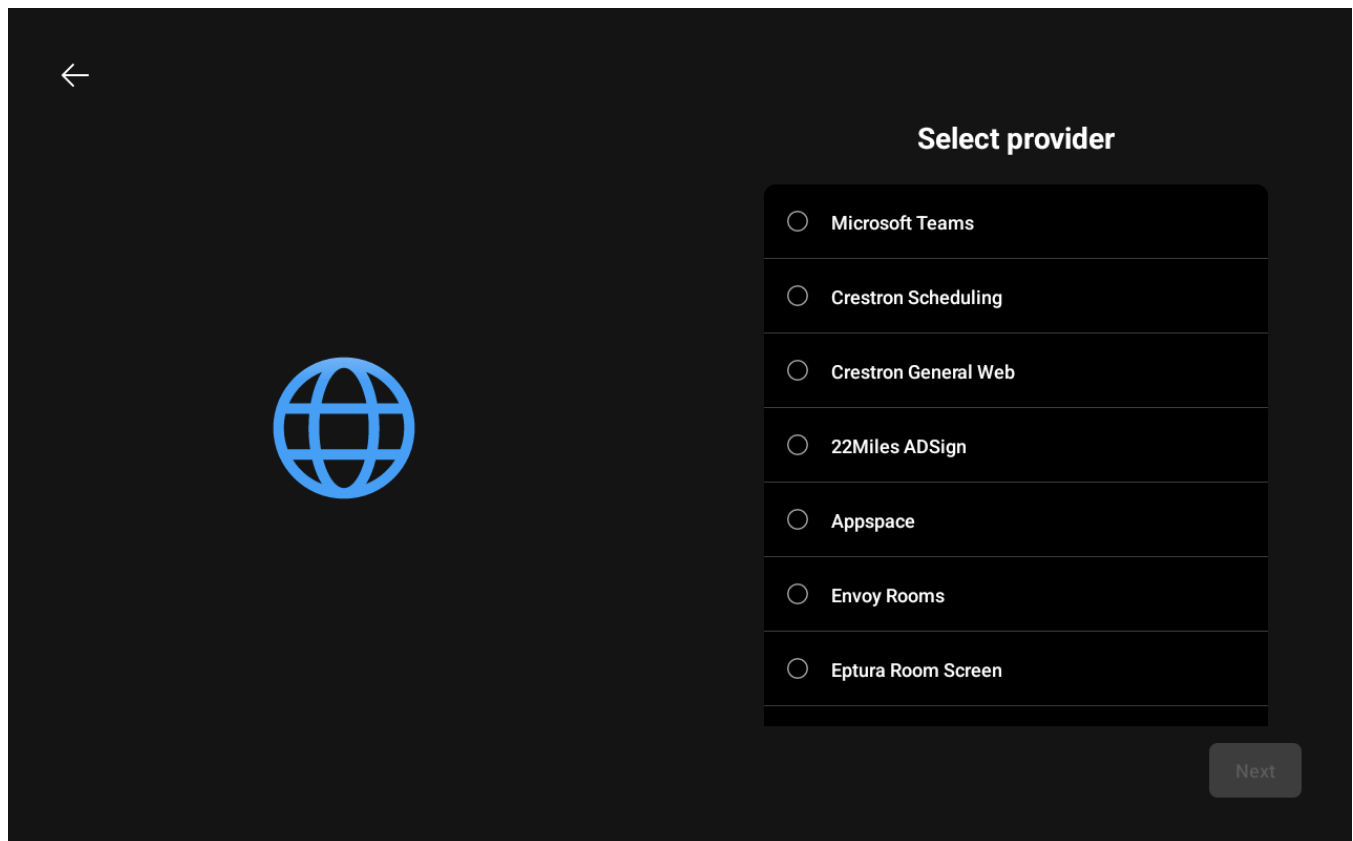

1. Select the desired touch screen application from the displayed menu. Select **Next**.
2. Configure any app-specific settings as required.

3. The touch screen restarts to display the user interface for the selected application.

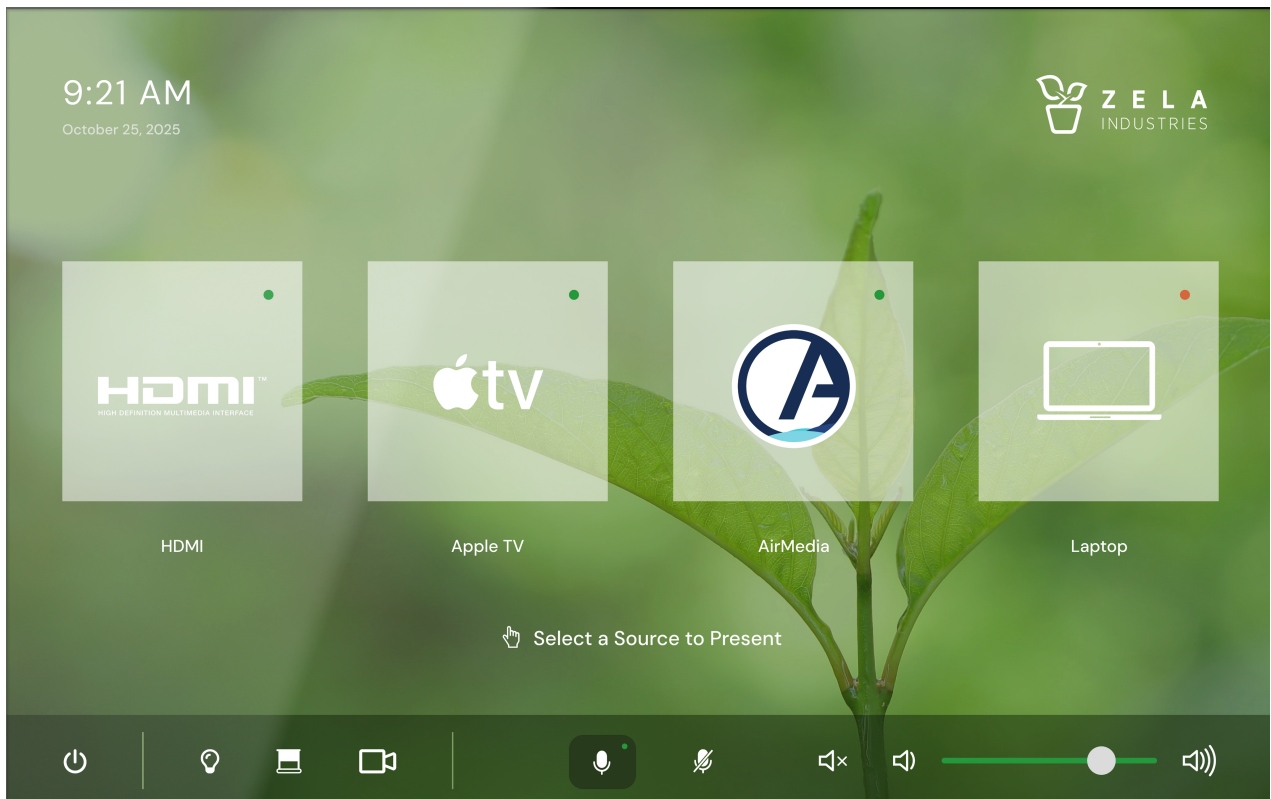

Access the Device Settings Screens

To access the built-in settings screens, place five fingers on the display and hold for 15 seconds.

Use the settings screens to configure various settings for the touch screen. The user must log into an admin account to access administrator level settings screens. Refer to [Local Configuration on page 115](#) for more information on the device settings screens.

Access the Web Configuration Interface

The touch screen provides a web configuration interface that is used to view and configure various touch screen settings and to select an application. The interface can be accessed using the touch screen IP address or the XiO Cloud® service.

Touch Screen IP Address

To access the web configuration interface using the touch screen IP address:

1. Ensure that the touch screen is connected to the network.
2. Use the Device Discovery tool in [Crestron Toolbox™](#) software to discover the touch screen and its IP address on the network.
3. Enter the touch screen IP address into a web browser.

XiO Cloud

The XiO Cloud® service allows supported devices across an enterprise to be managed and configured from one central and secure location in the cloud. Supported Crestron® devices are configured to connect to the service after completing the setup wizard.

If registering with XiO Cloud, scan the QR code to link the touch screen to your XiO Cloud account. For more information, refer to the [Device Assistant](#) page.

Use of the service requires a registered XiO Cloud account. To register for an XiO Cloud account, refer to www.crestron.com/Support/Tools/Licensing-Registration/XiO-Account-Registration.

To connect the device to the XiO Cloud service:

1. Record the MAC address and serial number that are labeled on the shipping box or the device. The MAC address and serial number are required to add the device to the XiO Cloud service.

NOTE: If the device has multiple MAC addresses, use the wired Ethernet MAC address.

2. Log in to your XiO Cloud account at portal.crestron.io.
3. Claim the device to the XiO Cloud service as described in the [XiO Cloud User Guide](#).

Web Configuration

The TS-880 and TS-1080 may be monitored and configured using their web configuration interface. The interface can be accessed via the device IP address as described in [Access the Web Configuration Interface on page 69](#).

NOTE: A similar version of the web configuration interface is provided within the XiO Cloud service. Navigate to the room associated with the device in the XiO Cloud environment tree to view the device status and settings. Additionally, certain settings can be configured for multiple devices at once at the group level. For more information, refer to the [XiO Cloud User Guide](#).


The **Status** tab is shown with the **Device** accordion open by default. The web configuration interface is shown below:

The web configuration interface provides the following tabs for navigating the interface:

- **Status:** Used to monitor device status. Refer to [Status on page 76](#).



- **Settings:** Used to configure device settings. Refer to [Settings on page 83](#).

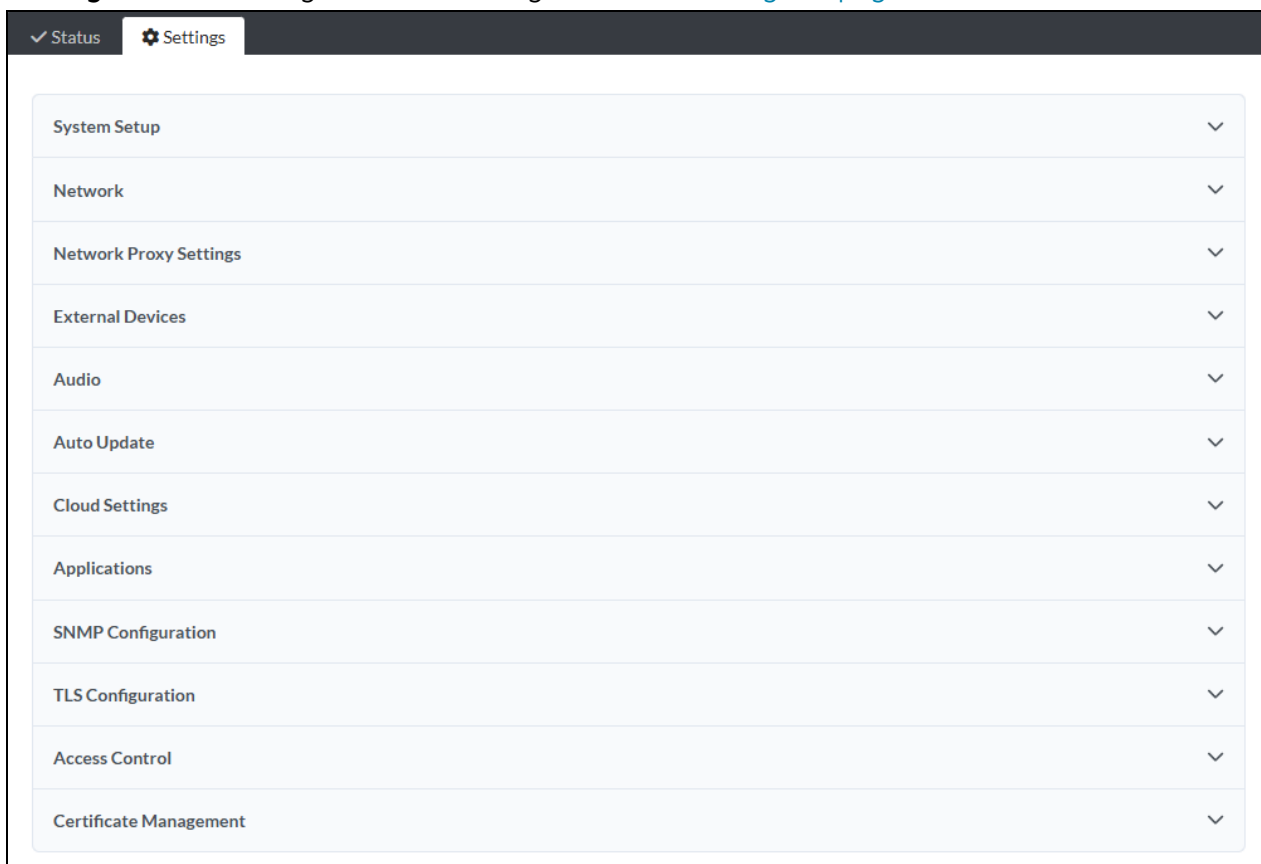

NOTE: Some device settings may be displayed or hidden depending on the selected application mode.


The following controls are also provided on the top right of the web configuration interface:

- Use the **Action** drop-down menu to perform various configuration actions. For more information, refer to [Action Menu on page 73](#).
- Select the profile button to view the active device user and to sign out of the web configuration utility.

Each section of the web configuration interface is described in the sections that follow.

Action Menu

The configuration interface provides an **Action** drop-down menu on the top right of the page. The **Action** menu may be accessed at any time.

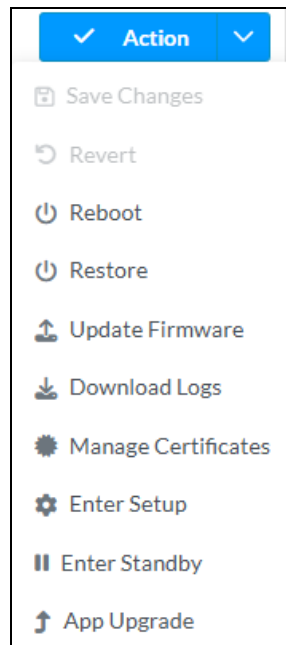

Once any changes have been made to the touch screen configuration, the **Action** button changes to a **Save Changes** button. Select **Save Changes** to save changes to the configuration settings.

If a restart is required after changes have been saved, a dialog box is displayed asking whether the restart should be performed. Select **Yes** to restart the device or **No** to cancel the restart.

The **Action** menu provides the following selections.

Save Changes

Select **Save Changes** to save any changes made to the configuration settings.

Revert

Select **Revert** to revert the touch screen back to the last saved configuration settings.

Reboot

Select **Reboot** to restart the touch screen.

After **Reboot** is selected, a dialog box is displayed asking whether the touch screen should be restarted. Select **Yes** to restart the device or **No** to cancel the restart.


Restore

Select **Restore** to restore the touch screen configuration settings to their default values.

After **Restore** is selected a dialog box is displayed asking whether the device settings should be restored. Select **Yes** to restore the settings or **No** to cancel the restore.

Update Firmware

Select **Update Firmware** to upgrade the touch screen firmware manually with a downloaded PUF (package update file).

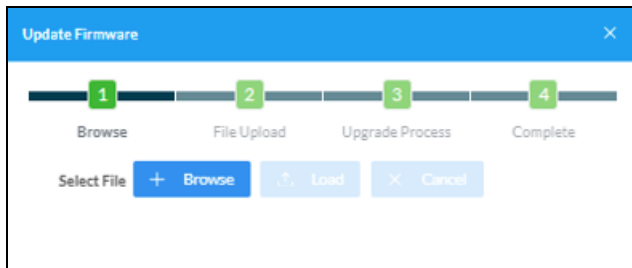

To upload a firmware PUF through the web configuration interface:

NOTE: Visit the appropriate device product page or www.crestron.com/Support/Resource-Library to download the latest firmware PUF.

1. Select **Browse**, and then navigate to the firmware PUF on the host computer.
2. Select the firmware PUF, and then select **Open**.
3. Select **Load** to load the PUF to the touch screen. The upload progress is shown in the dialog box.
4. Once the touch screen has completed the firmware upgrade, select **OK**.

Select the **x** button to close the **Firmware Upgrade** dialog box at any time during the upgrade process. Selecting the **x** button before the PUF is uploaded to the touch screen cancels the upgrade.

Download Logs


Select **Download Logs** to download the touch screen message logs for diagnostic purposes. The message files download as a compressed .tgz file. Once the compressed file is downloaded, extract the message log files to view them.

Manage Certificates


Select **Manage Certificates** to manage any certificates that are installed on the touch screen.

To add a certificate:

1. Navigate to the applicable tab (**Root**, **Intermediate**, **Machine**, **Web Server**, or **Client**) and select **Add Certificate**.

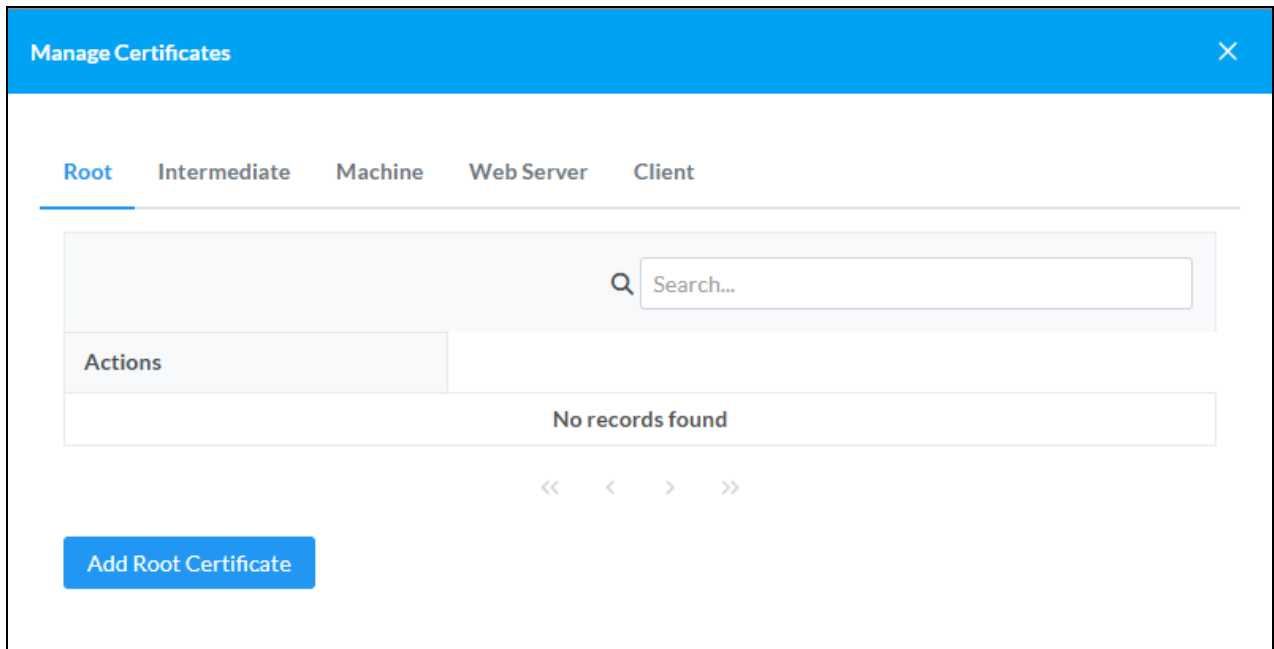

2. Select **Browse**, and then navigate to the desired certificate on the host computer.

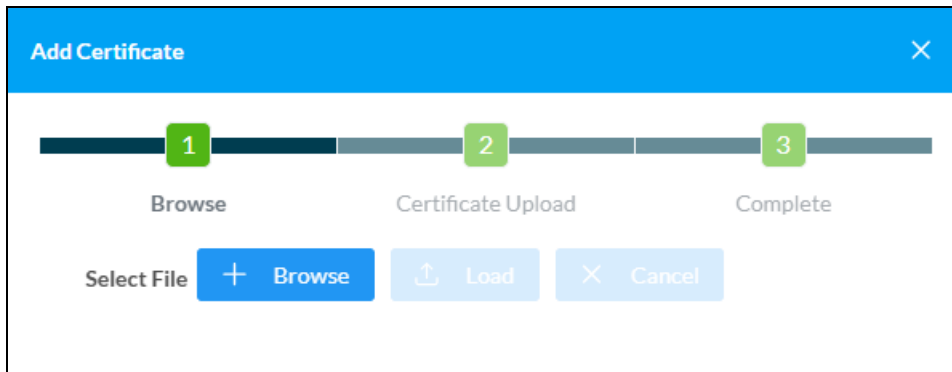

3. Select the certificate, and then select **Open**.
4. Select **Load** to load it to the touch screen. The upload progress is shown in the dialog box.
5. Once the touch screen has completed the certificate upload, select **OK**.

Enter Setup

Select **Enter Setup** to have the touch screen enter its built-in setup interface.

Enter Standby

Select **Enter Standby** to force the touch screen to enter standby mode.

App Upgrade

Select **App Upgrade** to update the currently selected application. The update progress is shown in a pop-up window.

Once the update is complete, select **OK** to close the pop-up window.

Status

Select the **Status** tab on the top left of the configuration interface to display selections for viewing the status of device, network, and control system settings.



Select on a selection name to expand the selection. If the selection is expanded, select the selection name again to collapse the section.

Each selection is described in the sections that follow.

Device

Select **Device** to view general device information.

▼ Device

Model

TS-1080

Serial Number

Firmware Version

1.0005.0051

More Details

TS-1080

1.0005.0051

Build

Thu 09 Jul 2026 03:45:11 AM UTC (1.0005.0051)

Updater

1.000.00001

Bootloader

N/A

CCUI Version

16.0500.1106144

XIOSDK

3.9.0

IoTSDK

1.14.0

Product ID

0x6FF9

Revision ID

0x0000

CPU ID

0x0000

HDCP2X-SKE

HDCP2X-SKE

HDCP2X-SKE [v9.0000.00000,#0123456789]

PRE-BOOT

[v9.0000.00000]

BOOTLOADER

[v9.0000.00000]

UUID

c3ecf3ba-9184-4b89-b832-b86277d40103

PUF

1.0005.0051

OOTBVersion

0.0.0.0

Video Player

5.0

CH5

1.3.0.166

MDEP Version

TPBA.251030.081

Secure Boot Enabled

False

Android verified boot state

orange

Android Webview

145.0.7632.45

Forced Auth Mode

True

FIPS Mode

True

The following **Device** information is displayed:

- **Model:** The touch screen model name
- **Serial Number:** The touch screen serial number
- **Firmware Version:** The firmware version loaded onto the touch screen

Select **+ More details** at the bottom of the Device tab to display an expanded section that shows additional touch screen information. If **+ More Details** is selected, select **- Less details** to collapse the section.

Network

Select **Network** to view the status of the network settings for the touch screen.

Network

Hostname

Crestron-TS-1080

IPv6 Enabled

No

IPv4

DNS Servers

10.64.5.10(DHCP),192.168.200.244(DHCP)

Primary LAN

IPv4

Domain

crestron.crestron.com

DHCP Enabled

On

IP Address

Subnet Mask

255.255.252.0

Default Gateway

10.64.16.1

Link Active

True

MAC Address

WiFi

IPv4

Domain

localdomain

Link Active

False

MAC Address

LAN

Network Proxy Settings

Disabled

The following Network information is displayed:

- **Host Name:** The touch screen host name
- **IPv6 Enabled:** Reports whether IPv6 addressing is turned on (**Yes**) or not (**No**)
- **DNS Servers:** The DNS (domain name server) addresses used to resolve the touch screen domain to an IPv6 address

Select the + (plus) icon next to Primary LAN to display the following Ethernet settings:


- **Domain:** The touch screen domain name
- **IPv4:** Contains settings for IPv4 Ethernet addressing
 - **DHCP Enabled:** Reports whether the IPv4 Ethernet address is static (**Yes**) or dynamic (**No**)
 - **IP Address:** The touch screen IPv4 Ethernet address, shown only if an Ethernet connection is active
 - **Subnet Mask:** The touch screen subnet mask address, shown only if an Ethernet connection is active
 - **Default Gateway:** The gateway router address, shown only if an Ethernet connection is active
 - **Link Active:** Reports the status of the Ethernet connection (A **true** message indicates that the Ethernet connection is active, while a **false** message indicates that the Ethernet connection is inactive.)
 - **MAC Address:** The unique MAC (media access control) address for the Ethernet adapter
- Select the + (plus) icon next to **Wi-Fi** to display the following Wi-Fi network settings:
 - **Domain:** The Wi-Fi network domain name
 - **Link Active:** Reports the status of the Wi-Fi network connection (A **true** message indicates that the Wi-Fi network connection is active, while a **false** message indicates that the Wi-Fi network connection is inactive.)
 - **MAC Address:** The unique Wi-Fi network MAC (media access control) address

Select the + (plus) icon next to **LAN** to display the following LAN settings:

- **Network Proxy Settings:** Reports whether network proxy settings are turned on or off for the touch screen

USB

Select **USB** to view the status of a connected USB accessory.

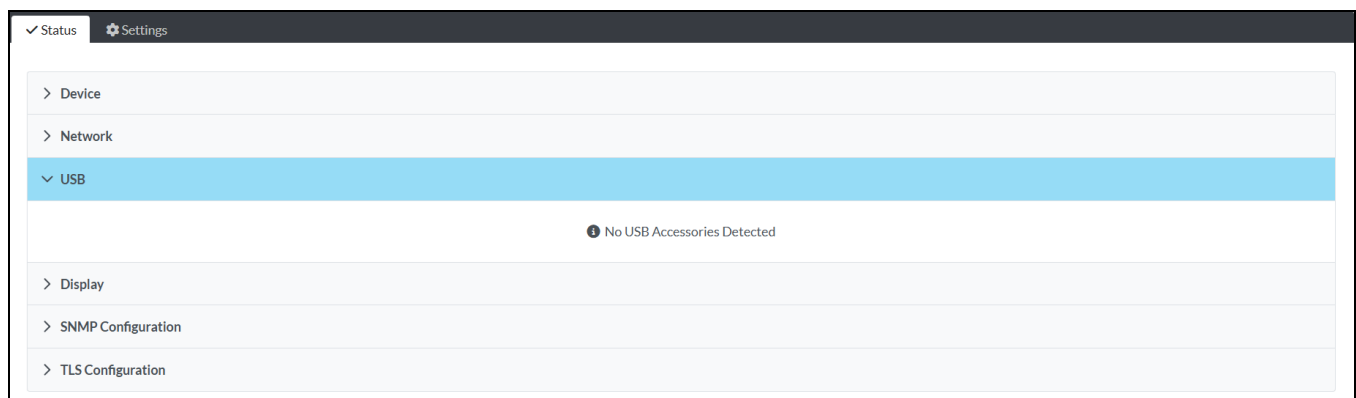

The following USB information is displayed (if a USB accessory is detected by the touch screen):

- **Accessory Connected:** The name of the connected accessory
- **Accessory Type:** The type of connected accessory

Room Scheduling

Select **Room Scheduling** to see the following information.

Room Scheduling

Room Status

Offline

Calendar Sync

Not Synced

- **Room Status:** The online or offline status of the connected conference room
- **Calender Sync:** The status of the room and touch screen's calendar

Display

Select **Display** to view the display status. The **Display Status** field indicates the display status (on or standby).

StatusSettings

> Device

> Network

> USB

Display

Display Status

On

> SNMP Configuration

> TLS Configuration

Control System

Select **Control System** to view the status of a connected control system.

Control System

Encrypt Connection

OFF

IP Table

IP ID	Room Id	IP Address/Hostname	Type	Server Port	Connection	Status
20		10.64.18.30	Peer	41794	Gway	ONLINE

The following **Control System** information is displayed:

- **Encrypt Connection:** Indicates whether the connection between the control system and touch screen is encrypted
- **IP Table:** Displays the IP table information for the control system connection
- **IP ID:** The IP ID used to connect the touch screen to the control system
- **Room ID:** The control system room ID that the touch screen is associated with (for connections to the Crestron Virtual Control server-based control system)
- **IP Address/Hostname:** The control system IP address or host name
- **Type:** The control system connection type
- **Server Port:** The server port used for the connection
- **Connection:** The control system connection method
- **Status:** The control system connection status

SNMP Configuration

Select **SNMP Configuration** to view the status of the SNMP (Simple Network Management Protocol) configuration for the touch screen.

✓ Status

⚙ Settings

> Device

> Network

> USB

> Display

▼ SNMP Configuration

SNMP Enabled

No

SNMP Allow All

No

Trap Enabled

Yes

User Name	Manager Name	Version	Write Access Level	Address	Authentication Protocol	Privacy Protocol
No records found						

The following SNMP Configuration information is displayed:

- **SNMP Enabled:** Reports whether SNMP has been turned on for the touch screen **(Yes)** or not **(No)**
- **SNMP Allow All:** Reports whether the touch screen allows SNMP requests from all managers **(Yes)** or not **(No)**
- **Trap Enabled:** Reports whether SNMP trap notifications have been turned on **(Yes)** or not **(No)**

- Each SNMP user configured for the touch screen is displayed in a table with the following information:
 - **User Name:** The name of the SNMP user
 - **Manager Name:** The SNMP manager for the user
 - **Version:** The SNMP version set for the user
 - **Write Access Level:** Indicates whether the user has write level permissions (**true**) or read-only permissions (**false**)
 - **Address:** The IP address of the SNMP manager
 - **Authentication Protocol:** The authentication protocol used by the SNMP manager
 - **Privacy Protocol:** The privacy protocol used by the SNMP manager

TLS Configuration

Select **TLS Configuration** to view the TLS (Transport Layer Security) configuration settings for the touch screen.

The screenshot shows the 'TLS Configuration' screen. At the top, there's a blue header with a dropdown arrow and the text 'TLS Configuration'. Below this, the settings are as follows:

TLS Supported Versions	TLS1.2,TLS1.3
Encrypt Connection	No
— Server Certificate Verifications	
Disable trust list verification	Yes
Disable DNS host name verification	Yes
Disable extended key usage verification	Yes


The following TLS information is displayed:

- **TLS Supported Version:** Displays the supported TLS versions
- **Encrypt Connection:** Reports if the TLS connection is encrypted
- Select the + (plus) icon next to **Server Certificate Verification** to display the following settings:
 - **Disable trust list verification:** Reports whether the touch screen disabled trusted device verification (**Yes**) or not (**No**)
 - **Disable DNS host name verification:** Reports whether the touch screen disabled host name verification (**Yes**) or not (**No**)
 - **Disable extended key usage verification:** Reports whether the touch screen disabled the extended key usage certificate extension (**Yes**) or not (**No**)

Settings

Select the **Settings** tab on the top left of the configuration interface to display selections for configuring various touch screen settings and to select a touch screen application.

NOTE: Some settings are model dependent and cannot be configured on the TSS-880-GV and TSS-1080-GV.

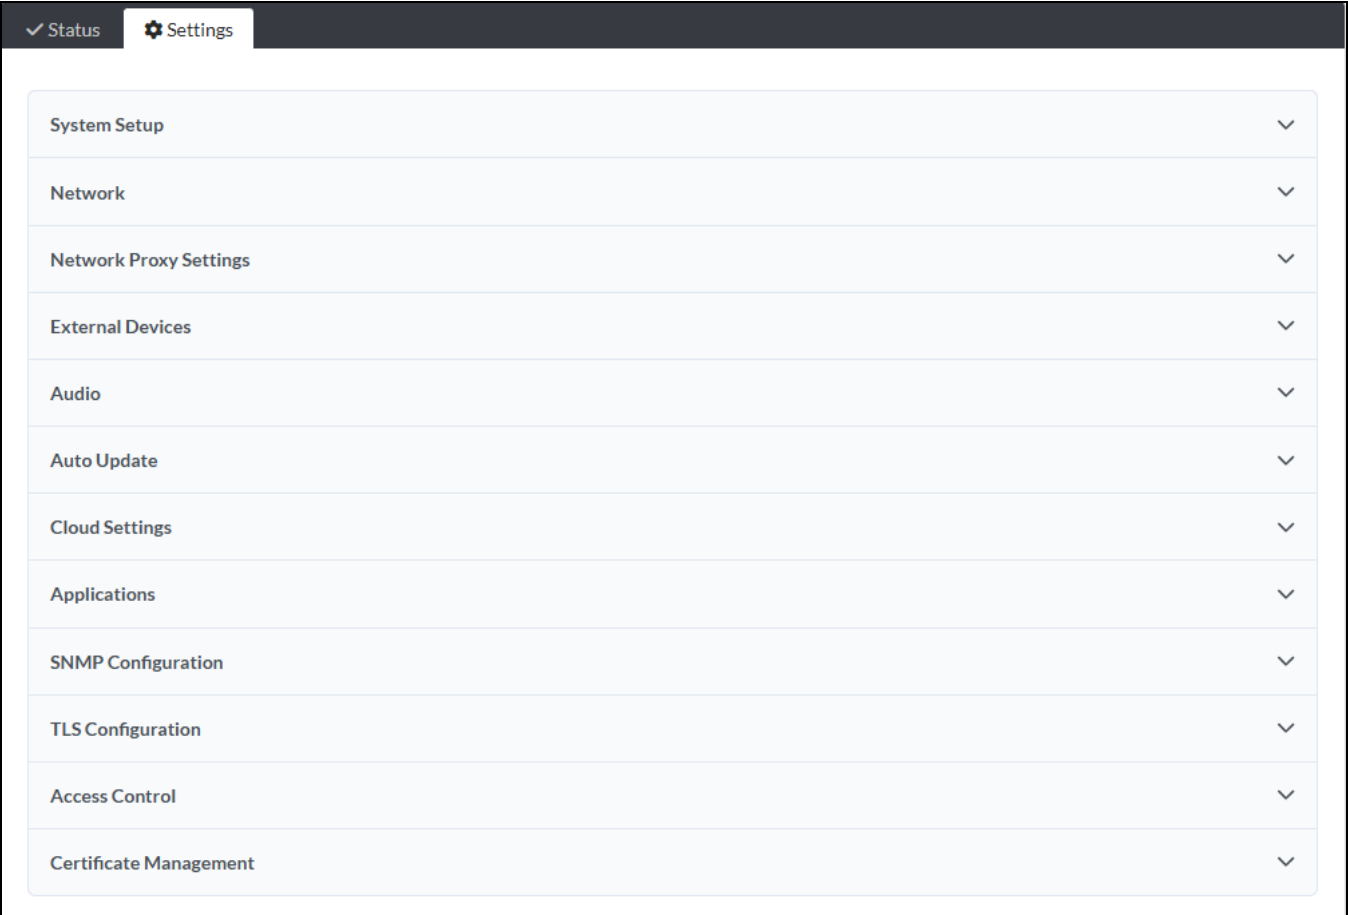

Each selection is described in the sections that follow.

System Setup

Select **System Setup** to configure general network and touch screen settings.

The screenshot shows the 'System Setup' interface with the 'Date/Time' tab selected. The interface includes a sidebar with navigation links: Date/Time, Control System, Device Display, Proximity, Button Toolbar, and SSH. The main content area is divided into sections: Synchronization, NTP Time Servers, and Configuration. In the Synchronization section, the 'Time Synchronization' toggle is turned on, and a 'Synchronize Now' button is visible. The NTP Time Servers section contains a table with columns: Address, Port, Authentication Method, Authentication Key, and Key ID. A single entry is shown with Address '169.254.0.1', Port '123', Authentication Method 'None', Authentication Key '*****', and Key ID '0'. Below the table are '+ Add' and '- Remove' buttons. The Configuration section includes fields for Time Zone (set to '(UTC-05:00) Eastern Time (US & Can)'), Date (set to '05/27/2026'), Time Format (radio buttons for 12 and 24, with 12 selected), Date Format (set to 'WMDY'), and Time (set to '11:54 PM').

Date/Time

Select the + (plus) icon next to **Date/Time** to display the following time and date settings.

Turn on the toggle to use time synchronization via SNTP (Simple Network Time Protocol).

- **Synchronize Now:** With **Time Synchronization** turned on, select **Synchronize Now** to synchronize the touch screen with the SNTP server(s) entered in the NTP Time Servers table.
- Select **Add** to add a new SNTP server entry into the table.

This close-up screenshot shows the 'NTP Time Servers' table. It has five columns: a checkbox, Address, Port, Authentication Method, Authentication Key, and Key ID. The first row has a checked checkbox, Address '169.254.0.1', Port '123', Authentication Method 'None', Authentication Key '*****', and Key ID '0'. Below the table are '+ Add' and '- Remove' buttons.

- Enter the following information for each entry:
 - Enter the SNTP server address into the **Address** text field.
 - Enter the SNTP server port into the **Port** text field.
 - Use the **Authentication Method** drop-down menu to select the authentication method used to access the SNTP server (if one exists).
 - If an authentication method is selected, enter the key used to authenticate against the SNTP server into the **Authentication Key** text field.
 - If an authentication method is selected, enter the ID for the key used to authenticate against the SNTP server into the **Key ID** text field.
- **NTP Time Servers:** With **Time Synchronization** turned on, use the provided table to enter information regarding the SNTP server(s) used to synchronize the date and time for the touch screen.
- To remove an entry, fill the checkbox to the left of the table entry, and then select **Remove**.

Control System

Select the **+** (plus) icon next to **Control System** to add or remove external control systems from the touch screen.

System Setup

Date/Time Control System Device Display Proximity Button Toolbar SSH

Control System

IP Table

☐	IP ID	IP Address/Hostname	Room Id
☐	20	10.64.18.30	Room Id

+ Add **×** Remove

To enter a new control system:

1. Select **Add**.
2. Enter the **IP ID**, **IP Address/Hostname** and **Room Id** (optional) of the control system.

☐	IP ID	IP Address/Hostname	Room Id
☐	20	10.64.18.30	Room Id
☐	IP ID	IP Address/Hostn	Room Id

+ Add **×** Remove

3. Select **Add** again to add the control system to the touch screen.

To remove a control system, select the leftmost box next to the desired control system. Then, select **Remove**.

Time Configuration:

Time Zone (UTC-05:00) Eastern Time (US & Canada) ▾

Date

Time Format (UTC-06:00) Saskatchewan

Date Format (UTC-06:00) Central America

Time (UTC-06:00) Guadalajara, Mexico City, Monterrey

(UTC-05:00) Eastern Time (US & Canada)

- **Time Zone:** Select a time zone for the touch screen using the drop-down menu.
- **Date:** Select the date for the touch screen using the pop-up calendar that is displayed.
- **Time Format:** Select the format that the time will display on the touch screen (12 hour or 24 hour).
- **Date Format:** Select the format that the date will display on the touch screen using the drop-down menu.
- **Time:** Select the time for the touch screen (in 24-hour format) using the pop-up menu that is displayed.

Device Display

Select the **+** (plus) icon next to **Device Display** to display the following device display settings.

System Setup

Date/Time

Control System

Device Display

Proximity

Button Toolbar

SSH

Device Display

LCD

Auto Brightness

Brightness *

100

%

Setup

Local Setup Sequence

Screensaver and Standby

Standby Timeout *

0

Minutes

Screensaver Enabled

24 Hour Digital Clock Enabled

Outdoor Temperature Enabled

Indoor Temperature Enabled

Date Enabled

Date Format

WMDY

Brightness *

50

%

Text Color *

#444444

Text Outline Color *

#444444

Text Font Face

Roboto-Regular

Header Text Line 1

Header Text Line 2

Header Text Justification *

Left

Center

Right

Header Text Bidirectional Text Direction *

Left-To-Right

Right-To-Left

Background Image URL

Video URL

Logo Setting

None

Crestron

Custom

Logo URL


- **LCD**
 - **Auto Brightness:** Turn on the toggle to use automatic brightness control for the touch screen LCD display.
 - **Brightness:** If **Auto Brightness** is turned off, enter a value (1–100%) for the LCD display brightness.
- **Setup**
 - **Local Setup Sequence:** Turn on the toggle to allow local access to the settings screens using a five-finger press.
- **Screensaver and Standby**
 - **Standby Timeout:** Enter a standby timeout duration (1–120 minutes) for the touch screen.
 - **Screensaver Enabled:** Turn on the toggle to show a screensaver on the touch screen during standby timeout.
 - **24 Hour Digital Clock Enabled:** Turn on the toggle to display a 24-hour digital clock on the touch screen during standby timeout.
 - **Outdoor Temperature Enabled:** Turn on the toggle to display the outdoor temperature on the touch screen during standby timeout via a join from a control system.
 - **Indoor Temperature Enabled:** Turn on the toggle to display the indoor temperature on the touch screen during standby timeout via a join from a control system.
 - **Date Enabled:** Turn on the toggle to display the date on the touch screen during standby timeout.
 - **Date Format:** Use the drop-down menu to select a format for displaying the date on the touch screen.
 - **Brightness:** Enter a brightness value (1–100%) for the screensaver.
 - **Text Color:** Select the color icon to the right of this field to display a pop-up window for selecting the text color of the screensaver, or enter a hex value for a specific color.
 - **Text Outline Color:** Select the color icon to the right of this field to display a pop-up window for selecting the text outline color of the screensaver, or enter a hex value for a specific color.
 - **Text Font Face:** Use the drop-down menu to select a font for the screensaver text.
 - **Header Text Line 1:** Enter text to be displayed on the first header text line of touch screen screensaver.
 - **Header Text Line 2:** Enter text to be displayed on the second header text line of touch screen screensaver.
 - **Header Text Justification:** Select one of the radio buttons (**Left**, **Center**, or **Right**) to select how the header text is justified on the touch screen screensaver.
 - **Header Text Bidirectional Text Direction:** Select one of the radio buttons (**Left-To-Right** or **Right-To-Left**) to determine the language text direction on the touch screen screensaver.
 - **Background Image URL:** Enter a URL of a background image to be used by the touch screen screensaver.
 - **Video URL:** Enter a URL of video to be used by the touch screen screensaver.

- **Logo Setting:** Select one of the radio buttons (**None**, **Crestron**, and **Custom**) to select a logo type to use on the touch screen screensaver.
- **Logo URL:** If **Logo Setting** is set to **Custom**, enter a URL of a custom logo to be used by the touch screen screensaver.

Proximity

Select the **+** (plus) icon next to **Proximity** to display the following proximity settings.


NOTE: This feature is unavailable on -GV models.

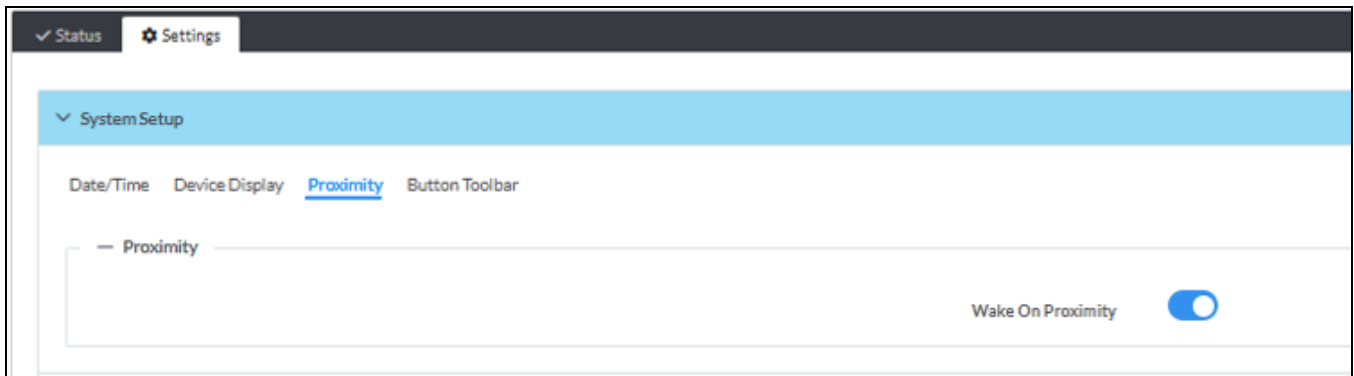

Turn on the **Wake On Proximity** toggle wake the touch screen automatically when a user enters the touch screen proximity field.

Button Toolbar


Select the **+** (plus) icon next to **Button Toolbar** to display the following virtual toolbar button settings.

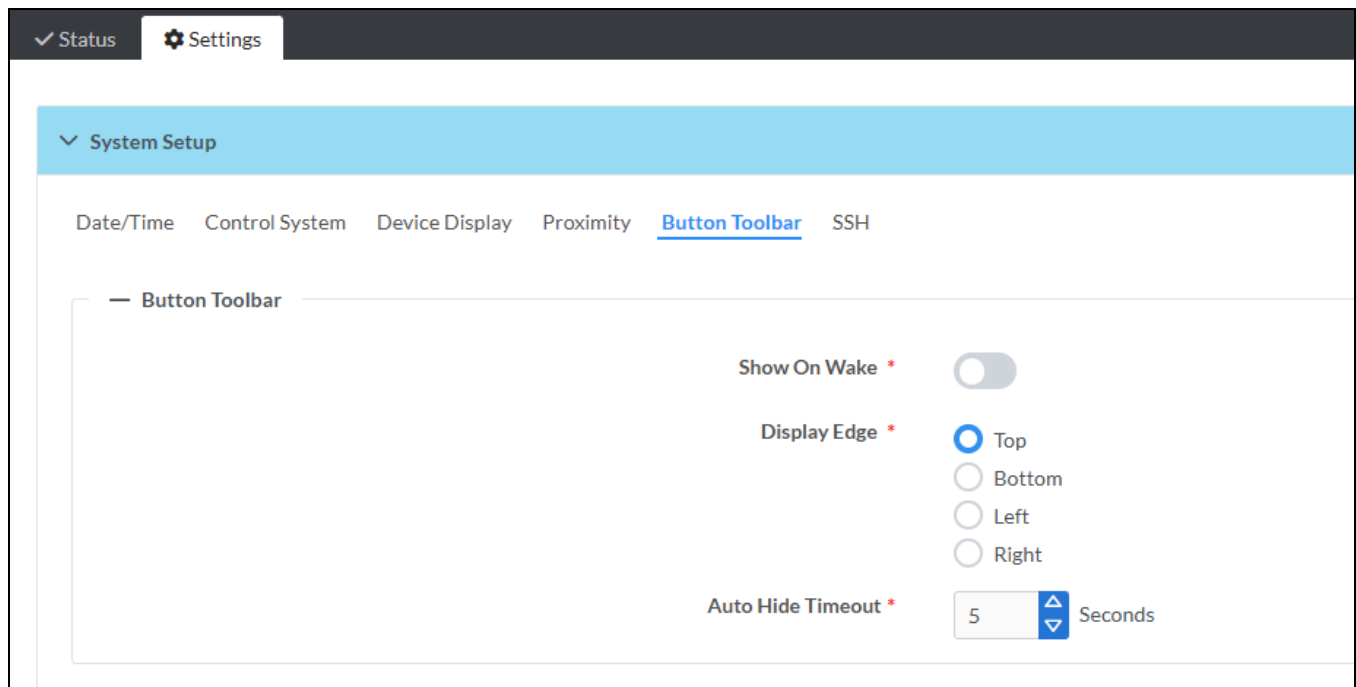

- **Show On Wake:** Turn on the toggle to show the virtual toolbar when the touch screen wakes from standby timeout.
- **Display Edge:** Select a radio button (**Top**, **Bottom**, **Left**, or **Right**) to select the position on the touch screen where the virtual toolbar is displayed.
- **Auto Hide Timeout:** Select a duration (in seconds) that must elapse before the virtual toolbar is hidden automatically.

SSH

Select the **+** (plus) icon next to **SSH** to display the following SSH settings.

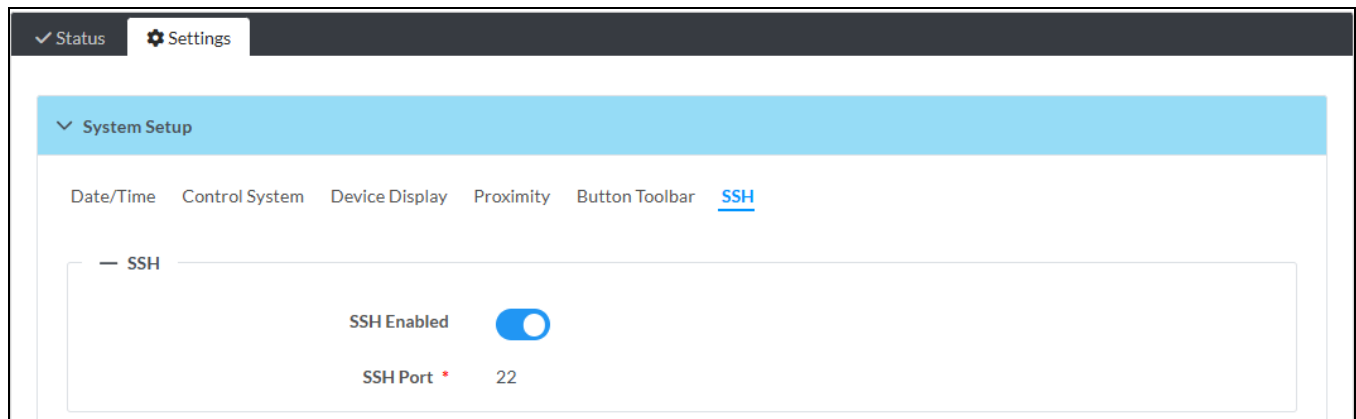

Turn on the **SSH Enabled** toggle to allow remote servers to access and interface with the touch screen. SSH is turned off by default.

Network

Select **Network** to configure network settings for the touch screen.

Network

Hostname *

IPv6 Enabled ☐ ⓘ

IPv4

Primary Static DNS

Secondary Static DNS

+ Primary LAN

+ WiFi

+ 802.1x Configuration

NOTE: The **IP Address**, **Subnet Mask**, and **Default Gateway** fields are required only if DHCP is turned off for Ethernet and Wi-Fi network connections.

- **Hostname:** Enter the touch screen host name.
- **IPv6 Enabled:** Turn on the toggle to use IPv6 addressing for the touch screen.
- **Primary Static DNS:** If **IPv6 Enabled** is turned on, enter the primary DNS address used to resolve the touch screen domain to an IPv6 address.
- **Secondary Static DNS:** If **IPv6 Enabled** is turned on, enter the secondary DNS address used to resolve the touch screen domain to an IPv6 address.

Select the + (plus) icon next to **Primary LAN** to display the following Ethernet settings:

— Primary LAN

IPv4

Adapter Enabled ☒

Domain * CP4N-00107FEB1321.crestron

DHCP Enabled ☒

IP Address * 172.22.43.237

Subnet Mask * 255.255.0.0

Default Gateway * 172.22.0.2

- **Adapter Enabled:** Turn on the toggle to use the touch screen Ethernet adapter, which allows the touch screen to make an Ethernet connection.
- **Domain:** Enter the fully qualified domain name on the network.
 - **DHCP:** Turn on the toggle to use DHCP for the IPv4 Ethernet connection.
 - **NOTE:** If DHCP is turned on, IP does not function until a reply has been received from the server. The touch screen broadcasts requests for an IP address periodically.
 - **IP Address:** Enter the touch screen IPv4 Ethernet address on the network.
 - **Subnet Mask:** Enter the touch screen subnet mask address on the network.
 - **Default Gateway:** Enter the gateway router address on the network.

Select the + (plus) icon next to **Wi-Fi** to display the following Wi-Fi network settings:

NOTE: This feature is unavailable on -GV models.

— WIFI

Adapter Enabled ☒

Domain *

IPv4

DHCP Enabled ☒

IP Address *

Subnet Mask *

Default Gateway *

- **Adapter Enabled:** Turn on the toggle to use the touch screen Wi-Fi adapter, which allows the touch screen to make a Wi-Fi network connection.
- **Domain:** Enter the fully qualified domain name on the network.
 - **DHCP:** Turn on the toggle to use DHCP for the IPv4 Wi-Fi network connection.

NOTE: If DHCP is turned on, IP does not function until a reply has been received from the server. The touch screen broadcasts requests for an IP address periodically.

- **IP Address:** Enter the touch screen IPv4 Wi-Fi network address on the network.
- **Subnet Mask:** Enter the touch screen subnet mask address on the network.
- **Default Gateway:** Enter the gateway router address on the network.
- **Wi-Fi Access Points**

WiFi Access Points

Select Discovered Access Points

CTI
Crestron Secure
CrestronWIFI
Crestron_Guest
Crestron_Pyng
Crestron_Training
DIRECT-AS-HP PageWide Pro 452dw
DIRECT-AM-3200-WF-16d450
DIRECT-AM-3200-WF-7068ba
DIRECT-AM-3200-WF-73db02
DIRECT-NJ-DUMONT
...

Scan WiFi Access Points

The maximum configurable access points are limited to 4


☐	SSID	Encryption Key	Password	Active	Actions
<input type="button" value="+"/>	<input type="button" value="Add"/>	<input type="button" value="X"/>	<input type="button" value="Remove"/>		

- **Select Discovered Access Points:** Select an access point after completing a scan. Enter text in the search field to search for a specific Wi-Fi access point name.
- **Add Access Points:** Adds the chosen access point entry from the **Select Discovered Access Points** field to the table below.

Each added Wi-Fi access point is displayed in a table that contains the following information.

- **SSID:** Enter or modify the SSID (name) of the Wi-Fi access point.
- **Encryption Key:** Select the security/encryption type used by the Wi-Fi access point.
- **Password:** Enter the password used to connect to the Wi-Fi access point.
- **Active Access Point:** Indicates whether a connection to the Wi-Fi access point is active


Select **Add** to open the **Connect to Access Point** pop-up window. Enter the **SSID** information and Security Mode and select **OK** to add a new entry to the Wi-Fi access point table.

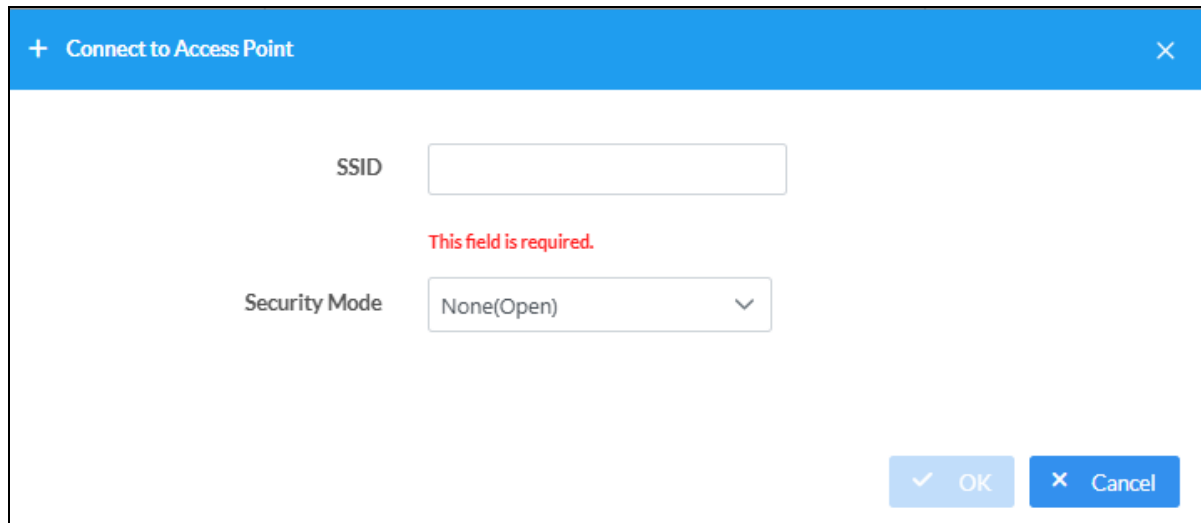

The image shows a 'Connect to Access Point' dialog box. It has a blue header bar with a plus icon and a close icon. The main area contains two input fields: 'SSID' and 'Security Mode'. The 'SSID' field is empty, and a red error message 'This field is required.' is displayed below it. The 'Security Mode' field is a dropdown menu with 'None(Open)' selected. At the bottom right, there are two buttons: 'OK' (with a checkmark icon) and 'Cancel' (with an 'X' icon).

After selecting one more entries in the Wi-Fi access point table, select **Remove** to delete the selected entries.

Select the **+** (plus) icon next to **802.1x Configuration** to display the following settings:

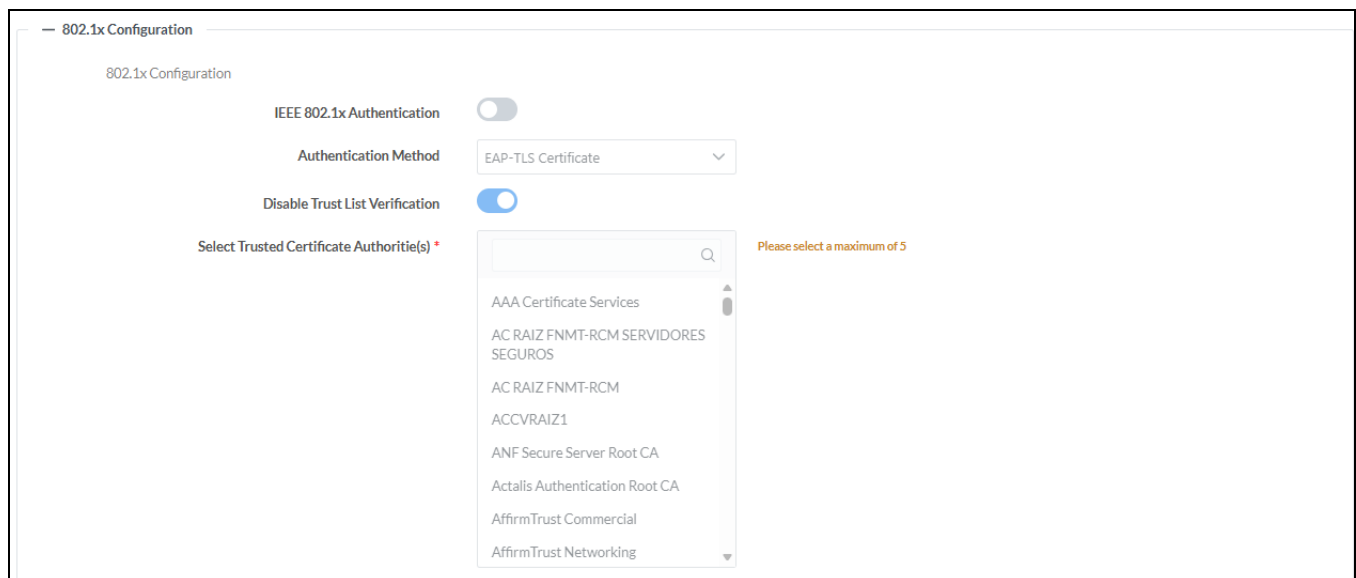

The image shows the '802.1x Configuration' settings page. It has a header bar with a minus icon and the text '802.1x Configuration'. The main area contains several settings: 'IEEE 802.1x Authentication' (a toggle switch that is currently off), 'Authentication Method' (a dropdown menu with 'EAP-TLS Certificate' selected), 'Disable Trust List Verification' (a toggle switch that is currently on), and 'Select Trusted Certificate Authoritie(s) *' (a search box with a list of certificate authorities below it). The list of certificate authorities includes: 'AAA Certificate Services', 'AC RAIZ FNMT-RCM SERVIDORES SEGUROS', 'AC RAIZ FNMT-RCM', 'ACCVRAIZ1', 'ANF Secure Server Root CA', 'Actalis Authentication Root CA', 'AffirmTrust Commercial', and 'AffirmTrust Networking'. A note on the right side of the list says 'Please select a maximum of 5'.

- **IEEE 802.1x Authentication:** Turn on the toggle to use 802.1X authentication for the touch screen.
- **Authentication Method:** Select an 802.1X authentication method (**EAP-TLS Certificate** or **EAP MSCHAP V2- password**) from the drop-down menu.

NOTE: In FIPS mode, password authentication should not be used.

- **Select Trusted Certificate Authorities:** Select trusted CAs (Certificate Authorities) from the provided CAs to be used for server validation.

Select **Manage Certificates** from the **Action** menu to add or remove CAs from the list.

Network Proxy Settings

Select **Network Proxy Settings** to configure network proxy settings for the touch screen.

- **Proxy:** Turn on the toggle to configure the touch screen for use with a proxy server.
- **HTTP Settings**

- **HTTP Proxy:** Turn on the toggle to use an HTTP proxy server.
- **HTTP Proxy Address:** Enter the IP address of the HTTP proxy server.
- **HTTP Proxy Port:** Enter the port number of the HTTP proxy server.
- **Username:** Enter the username required for the HTTP proxy server.
- **Password:** Enter the password required for the HTTP proxy server.


- **HTTPS Settings**

The screenshot displays the 'Network Proxy Settings' window. At the top, there is a blue header bar with a dropdown arrow and the text 'Network Proxy Settings'. Below this, there are three tabs: 'HTTP Settings', 'HTTPS Settings' (which is selected and underlined in blue), and 'Proxy Allow'. In the center, there is a 'Proxy' toggle switch that is currently turned off. Below the 'Proxy' toggle, there is a section titled 'HTTPS Settings' with a minus sign icon to its left. Inside this section, there is an 'HTTPS Proxy' toggle switch, also turned off. Below the toggle, there are four input fields: 'HTTPS Proxy Address *' (with a red asterisk), 'HTTPS Proxy Port *' (with a red asterisk and a value of '1'), 'Username', and 'Password'. Each input field has a small blue icon to its right.

- **HTTPS Proxy:** Turn on the toggle to use an HTTPS proxy server.
- **HTTPS Proxy Address:** Enter the IP address of the HTTPS proxy server.
- **HTTPS Proxy Port:** Enter the port number of the HTTPS proxy server.
- **Username:** Enter the username required for the HTTPS proxy server.
- **Password:** Enter the password required for the HTTPS proxy server.

- **Proxy Allow**

- **Proxy:** Turn on to use an additional proxy server.

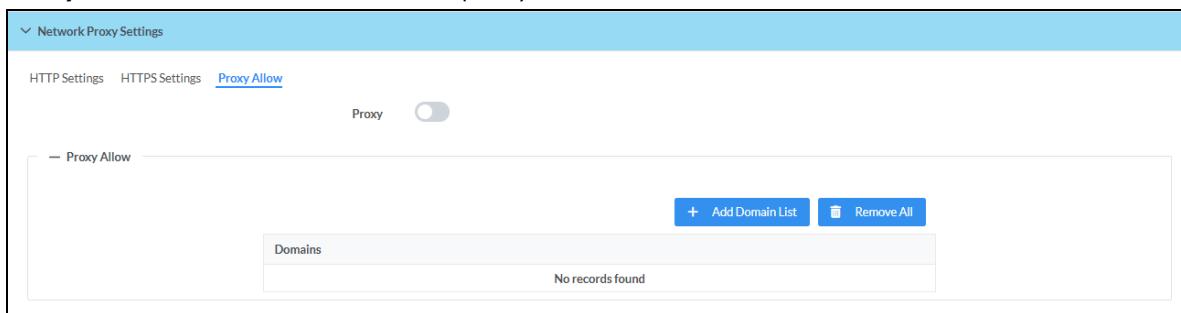

Network Proxy Settings

HTTP Settings HTTPS Settings Proxy Allow


Proxy ☐

— Proxy Allow

+ Add Domain List Remove All

Domains
No records found

- Select **Add Domain List** or **Remove All** to add or remove domains to the proxy list.

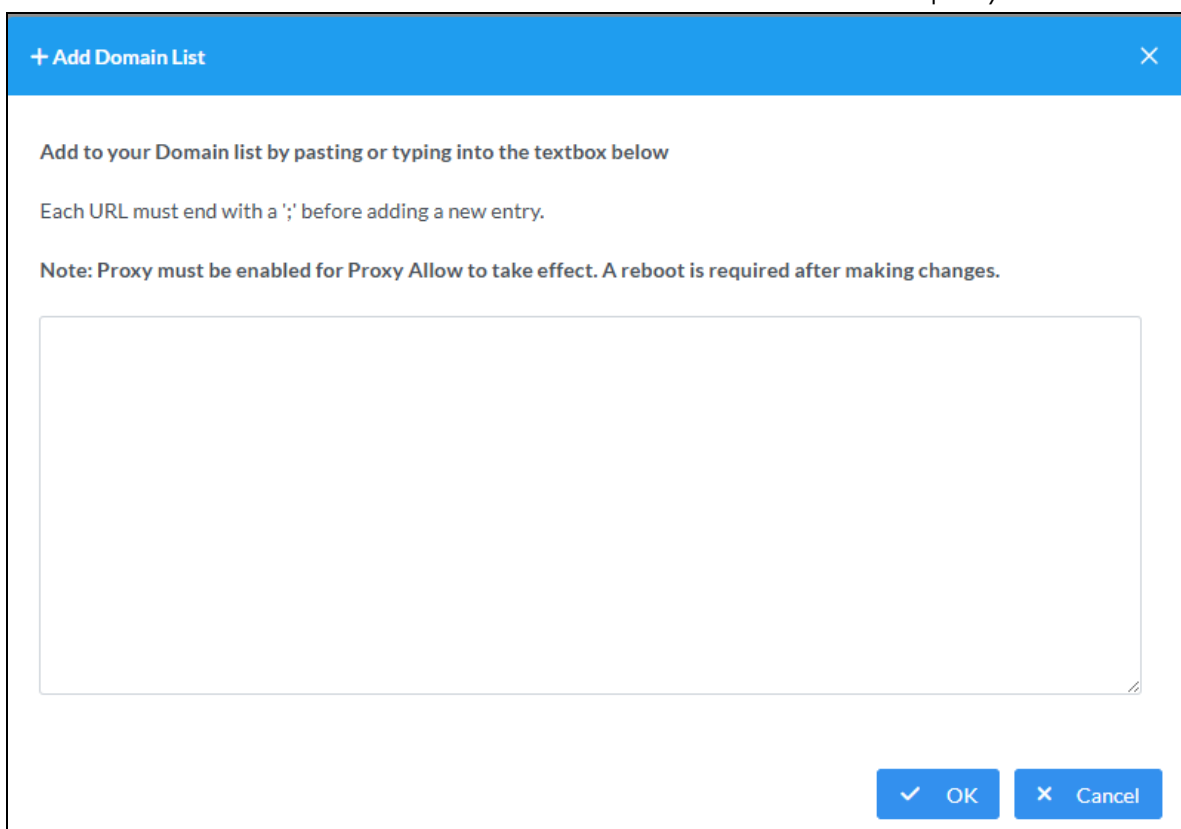

+ Add Domain List

Add to your Domain list by pasting or typing into the textbox below

Each URL must end with a ';' before adding a new entry.

Note: Proxy must be enabled for Proxy Allow to take effect. A reboot is required after making changes.

OK Cancel

- Add all domain URLs into the text field as a semicolon-delimited list.
- Select **OK**.

External Devices

Select **External Devices** to configure settings for pairing the touch screen to accessories or other devices.

External Devices

External Devices

+ Add Device

Occupancy Sensor

Name	Hostname	Device Model	MAC Address	Serial Number	IP Address	Status	Actions
No devices paired							

NOTE: Bluetooth devices cannot be connected to -GV models.

Select **Add Device** to add any conferencing devices or occupancy sensors to the touch screen. Only one device may be paired at a time.

- If connecting an occupancy sensor, select **Add Device** above **Occupancy Sensor**.

+
Add Device

Occupancy Sensor

Name *

Device IP Address / FQDN *

Pairing Retry Time *
Minutes

Username *

Password *

✓ Save

✕ CANCEL

- Enter the **Device Name**, **IP Address**, **Username** and **Password**.
- Use the arrows to increase or decrease the device's pairing retry timeout.
- Select **Save**.

Audio

Select **Audio** to configure various audio settings for the touch screen.

▼
Audio

Device Audio

Panel Mute
☐

Panel Volume
%

Media Mute
☐

Media Volume
%

- **Panel Mute:** Turn on the toggle to mute the main touch screen volume.
- **Panel Volume:** Enter a value (1–100) for the main touch screen volume level.
- **Media Mute:** Turn on the toggle to mute the touch screen media volume.
- **Media Volume:** Enter a value (1–100) for the touch screen media volume level.

Auto Update


Select **Auto Update** to configure automatic firmware updates for the touch screen.

NOTE: The **Auto Update** accordion can be used to configure auto update settings for firmware only. Automatic application updates are not affected by these settings.

- **Auto Update:** Turn on the toggle to use automatic firmware updates.
- **Custom URL:** Turn on the toggle use a custom update server URL. If turned off, the server URL will default to the standard Crestron update sever.
- **Custom URL Path:** If **Custom URL Path** is turned on, enter the custom URL path for the update server.
- **Day of Week:** Select the day of week when the touch screen will check for updates. Select Daily to have the touch screen check for updates every day.
- **Time of Day:** Enter a time of day (in 24-hour format) when the touch screen will check updates on the scheduled day.
- **Poll Interval:** Enter the polling interval (in hours) for when the touch screen will poll the server for updates.
- Select **Update Now** to check the update server for new firmware and to update the touch screen immediately if new firmware is available.


Cloud Settings

Select **Cloud Settings** to enable or disable a connection between the touch screen and an XiO Cloud® service account. A connection to the XiO Cloud service is enabled by default after completing the Setup Wizard.

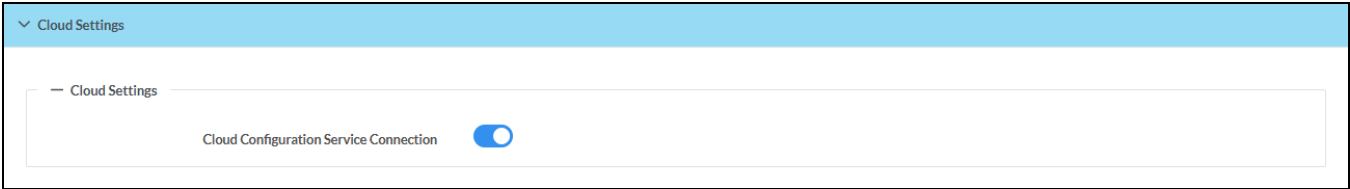

Applications

Select **Applications** to view the currently running application.

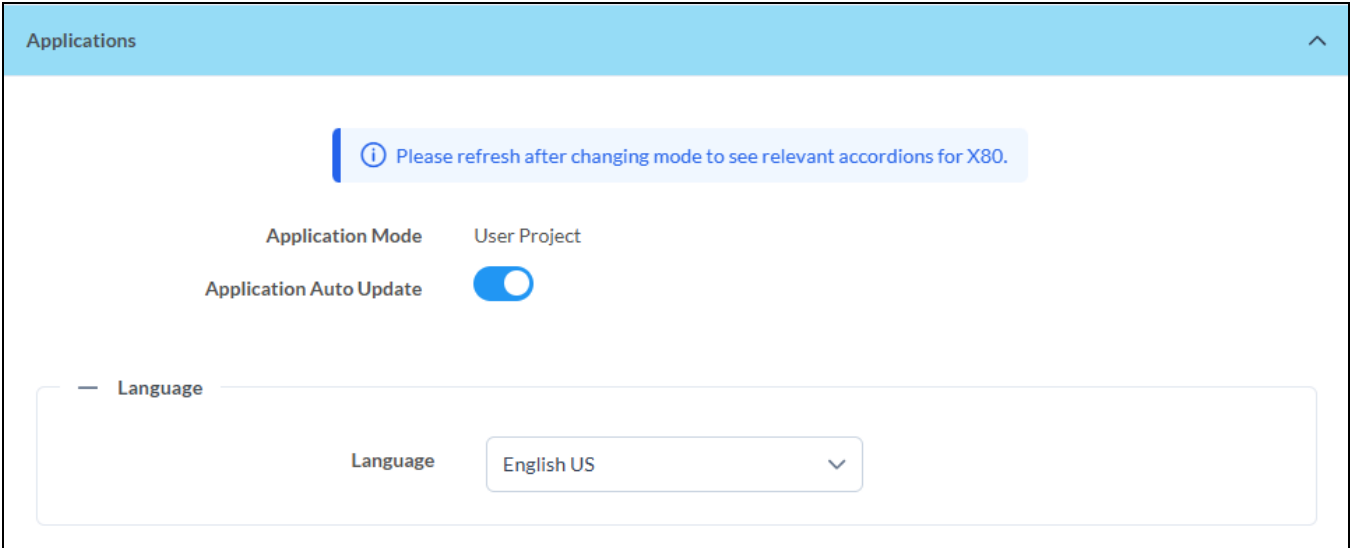

The **Application Mode** field displays the currently running touch screen application. Use the **Language** drop-down menu to switch between supported languages.

NOTE: Each application uses a unique setup procedure for registering and configuring the application.

SNMP Configuration

Select SNMP Configuration to configure SNMP (Simple Network Management Protocol) settings on the touch screen.

SNMP Configuration

SNMP Enabled

SNMP Allow All

Trap Enabled

Delete All

Add User

User Name	Manager Name	Version	Write Access Level	Address	Authentication Protocol	Privacy Protocol	Actions
No records found							

SNMP Enabled: Turn on the toggle to turn on SNMP for the touch screen.

- **SNMP Allow All:** Turn on the toggle to all the touch screen to receive SNMP requests from all managers.
- **Trap Enabled:** Turn on the toggle to turn on SNMP trap notifications.

Each added SNMP user is displayed in a table that contains the following information.

- **User Name:** The name of the SNMP user
- **Manager Name:** The SNMP manager for the user
- **Version:** The SNMP version set for the user
- **Write Access Level:** Indicates whether the user has write level permissions (**true**) or read-only permissions (**false**)
- **Address:** The IP address of the SNMP manager
- **Authentication Protocol:** The authentication protocol used by the SNMP manager
- **Privacy Protocol:** The privacy protocol used by the SNMP manager
- **Actions:** Controls for editing and deleting the SNMP user

Select **Delete All** to delete all existing SNMP users. When a dialog box is shown asking whether all SNMP users should be deleted, select **Yes**.

Select **Add User** to add a new SNMP user. Enter the following information for the SNMP user:

Add SNMP Configuration

Manager Name *

IP Address/Host Name *

Community Name *

Write Access Level

Please Select Access Level

SNMP Version *

Please Select SNMP Version

SNMP Authorization Protocol *

Please Select Authorization Protocol

SNMP Privacy Protocol *

Please Select Privacy Protocol

SNMP Security Password *

Password

SNMP Privacy Password *

Password

✓ OK

✗ CANCEL


- **Manager Name:** Enter the SNMP manager name for the user.
- **IP Address/Host Name:** Enter the IP address or host name of the SNMP manager.
- **Community Name:** Enter the SNMP community (user) name.
- **Write Access Level:** Use the drop-down menu to select whether the user has write level access (**True**) or read-only access (**False**).
- **SNMP Version:** Use the drop-down menu to select the SNMP version used by the manager.
- **SNMP Authorization Protocol:** If required, use the drop-down menu to select the authorization protocol used by the SNMP manager.
- **SNMP Privacy Protocol:** If required, use the drop-down menu to select the privacy protocol used by the SNMP manager.

- **SNMP Security Password:** If required, enter the security password for the SNMP manager.
- **SNMP Privacy Password:** If required, use the privacy password for the SNMP manager.


Select **OK** to create the new user. The user is added to the table within the **SNMP Configuration** table.

TLS Configuration

Select **TLS Configuration** to configure the TLS (Transport Layer Security) settings.

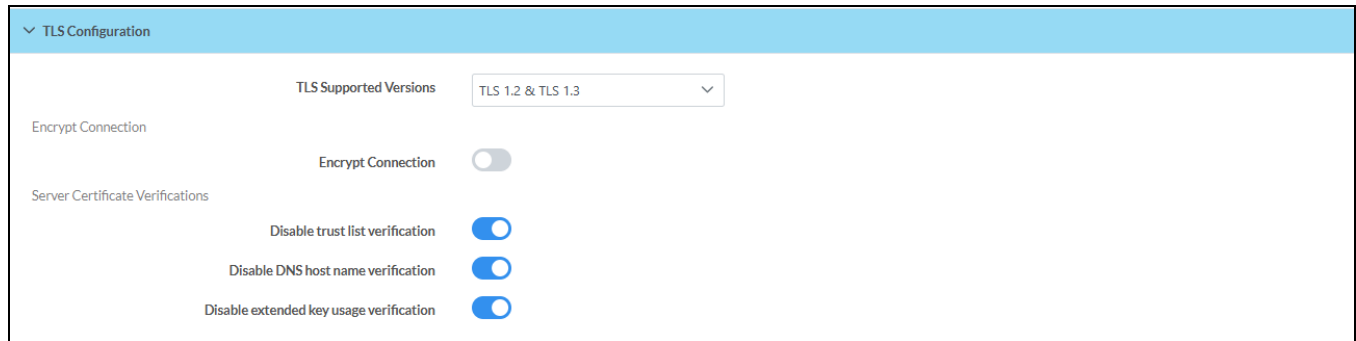


- **TLS Supported Version:** Use the drop-down menu to select the desired TLS version.

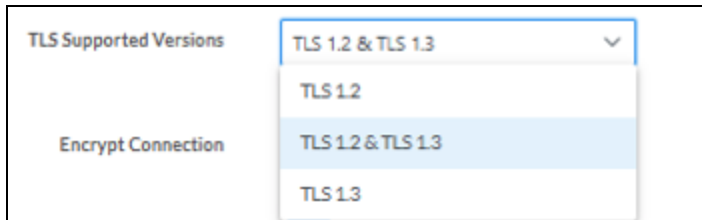

- **Encrypt Connection:** Use the drop-down menu to toggle TLS encryption.
- **Disable trust list verification:** Turn on the toggle to enable trusted device verification.
- **Disable DNS host name verification:** Turn on the toggle to enable host name verification.
- **Disable extended key usage verification:** Turn on the toggle to enable extended key usage certificate extensions.

Access Control

Select **Access Control** to display selections for configuring security and authentication settings for the touch screen.

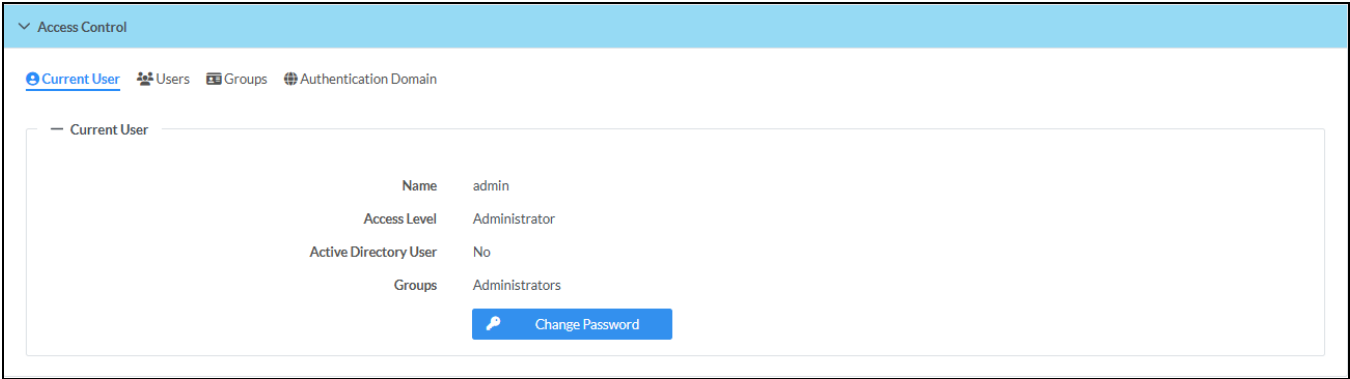

CAUTION: Do not lose the administrator username and password, as the touch screen settings must be restored to factory defaults to reset the username and password.

Use the following settings to add, delete, and edit touch screen users and groups.

Current User

Select the **Current User** tab to view and edit information for the current touch screen user. The following settings are displayed for the current user:

- **Name:** The chosen username
- **Access Level:** The access level granted to the user (**Administrator**, **Programmer**, **Operator**, **User**, or **Connect**)
- **Active Directory User:** Reports whether the current user is (**Yes**) or is not (**No**) authenticated through Active Directory® software

NOTE: A user must be added to an Active Directory group before the user may be selected as an active directory user. For more information, refer to [Web Configuration on page 71](#).

- **Groups:** Any groups of which the current user is a member

Select **Change Current User Password** to change the password for the current user.

Users

Select the **Users** tab to view and edit information for the touch screen users. Enter text into the **Search Users** field to find and display users that match the search term(s).

Access Control

Current User **Users** Groups Authentication Domain

Users

+ Add user

Global Filter

User Name ↑↓	Active Directory User ↑↓	Groups ↑↓	Actions
admin		Administrators	Edit User Delete

Touch screen users are listed in table format. The following information is displayed for each touch screen user:

- **Username:** The chosen username
- **Active Directory User:** Reports whether the user is (**Yes**) or is not (**No**) authenticated through Active Directory

NOTE: A user must be added to an Active Directory group before the user may be selected as an active directory user. For more information, refer to [Web Configuration on page 71](#).

Use **Add User** to add new user information.

+ Add user

User Name *

Active Directory User

Password *

Confirm New Password *

Groups *

OK CANCEL

Select **Edit User** to view or configured the following settings:

Edit User

User Name * admin

Active Directory User No

TAC Password Authorization ☒

Reset Password ☐ ⚠ This user will be forced to change their password at next login

Temporary Password *

Confirm Temporary Password *

Groups * Administrators ▼

✓ OK × CANCEL

- **Name:** The chosen username
- **Active Directory User:** Turn on the toggle to use authentication via Active Directory for the selected user.
- **Reset Password:** Turn on to reset a password.
- **Password:** Enter a new password for the selected user.
- **Confirm Password:** Reenter the password provided in the **Password** field.
- **Groups:** Add the user to one or more groups.


NOTE: A user must be added to an Active Directory group to be selected as an Active Directory user.

Select **OK** to save any changes and to return to the **Users** accordion. Select **Cancel** to cancel any changes.

Select **Delete User** from the **Actions** column to delete user information. This button is inaccessible if only one user is configured for the touch screen.

Groups

Select the **Groups** tab to view and edit settings for touch screen groups. Touch screen groups are used to group users by access level and Active Directory authentication settings.

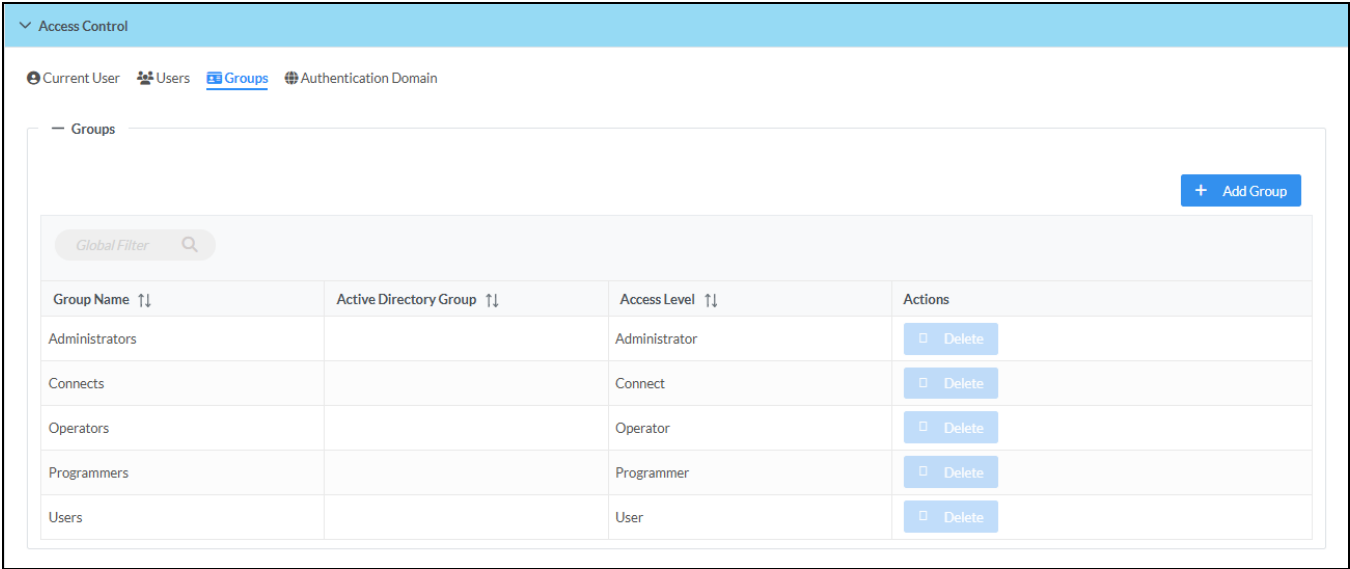

Enter text in to the **Global Filter** field to find and display groups that match the search term(s).

Touch screen groups are listed in table format. The following information is displayed for each touch screen group:

- **Group Name:** The chosen group name
- **Active Directory Group:** Reports whether the group is (**Yes**) or is not (**No**) authenticated through Active Directory


NOTE: Active Directory provides an additional layer of authentication for touch screen groups and users. Active directory group and user names are stored in the touch screen console along with a unique SID (security identifier). When an Active Directory user attempts to authenticate against the console, the console first checks the user credentials. If the Active Directory authentication is successful, Active Directory queries the console for the user or group's SID. The user is granted access to the touch screen only if at least one SID match is found.

- **Access Level:** The access level for the selected group (**Administrator, Programmer, Operator, User,** or **Connect**)

If the touch screen groups span multiple pages, use the navigation arrows on the bottom of the page to move forward or backward through the pages, or select a page number to navigate to that page. Additionally, the number of groups displayed on each page may be set to 5, 10, or 20 users.

An **Actions** column is also provided for each group that allows the user to delete groups.

Select **Add Group** at the bottom of the page to create a new touch screen group. The **Add Group** dialog box is displayed.

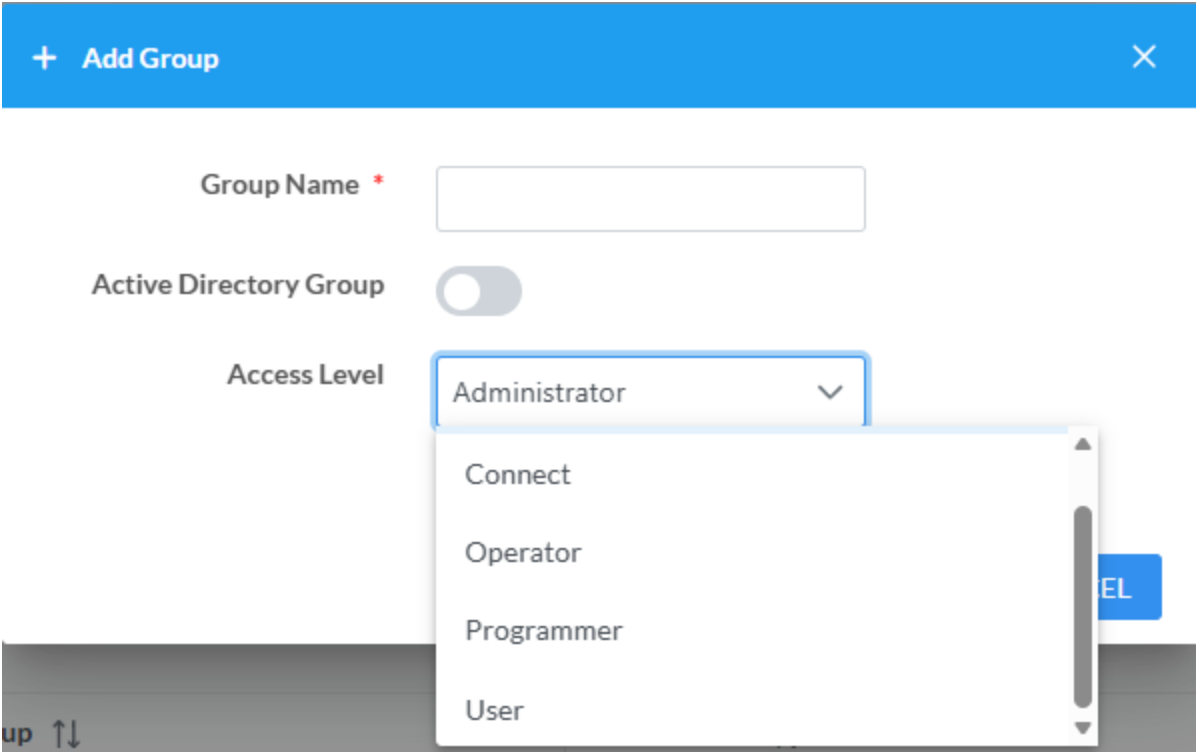


Use the following settings to create a new group:

- **Name:** Enter a group name.
- **Active Directory Group:** Turn on the toggle to use authentication via Active Directory for the group.
- **Access Level:** Select an access level for the group and its users from the drop-down menu.

Select **OK** to save any changes and to return to **Groups**. Select **Cancel** to cancel creating a new group.

Certificate Management

Select **Certificate Management** to configure certificate settings for the touch screen.

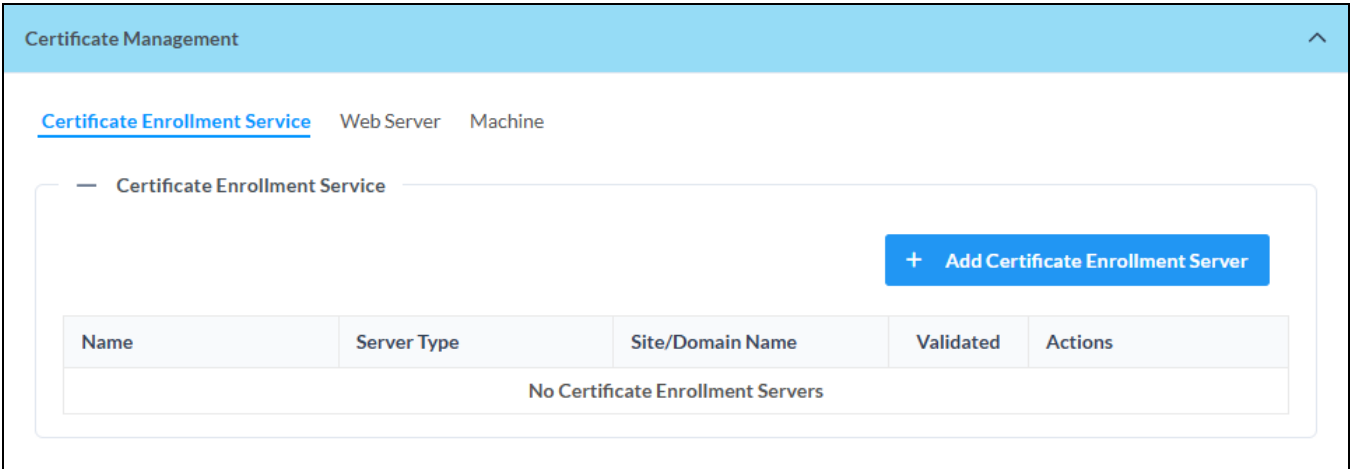

Use the following settings to add or delete certificates.

Certificate Enrollment Service

Select the **Certificate Enrollment Service** tab to view and edit certificate enrollment server information. The following settings are displayed:

- **Name:** Certificate Enrollment Service (CES) name
- **Server Type:** Reports the server type (**EST** or **SCEP**) for the chosen CES
- **Site/Domain Name:** Reports the domain name of the certificate
- **Validated:** Reports the certificate validation status
- **Actions:** Reports any access control actions or restrictions


To add a new CES, select **Add Certificate Enrollment Server** to configure the following server settings:

- **Server Type:** Select either **EST** (Enrollment over Secure Transport) or **SCEP** (Simple Certificate Enrollment Protocol) from the drop down menu
- **Name:** Enter the server name
- **Site/Domain Name:** Enter the URL or IP address of the desired CES
- **Port Number:** Enter the established HTTPS port number associated with the desired server
- **Label:** Enter a desired identifier or tag to assign it to the certificate

Enter at minimum the **Server Type** (**EST** or **SCEP**), **Name**, and **Site/Domain Name** of the new CES. Select **Save**.

Web Server

Select the **Web Server** tab to view and edit web server and Certificate Signing Request (CSR) information. The following information is displayed:

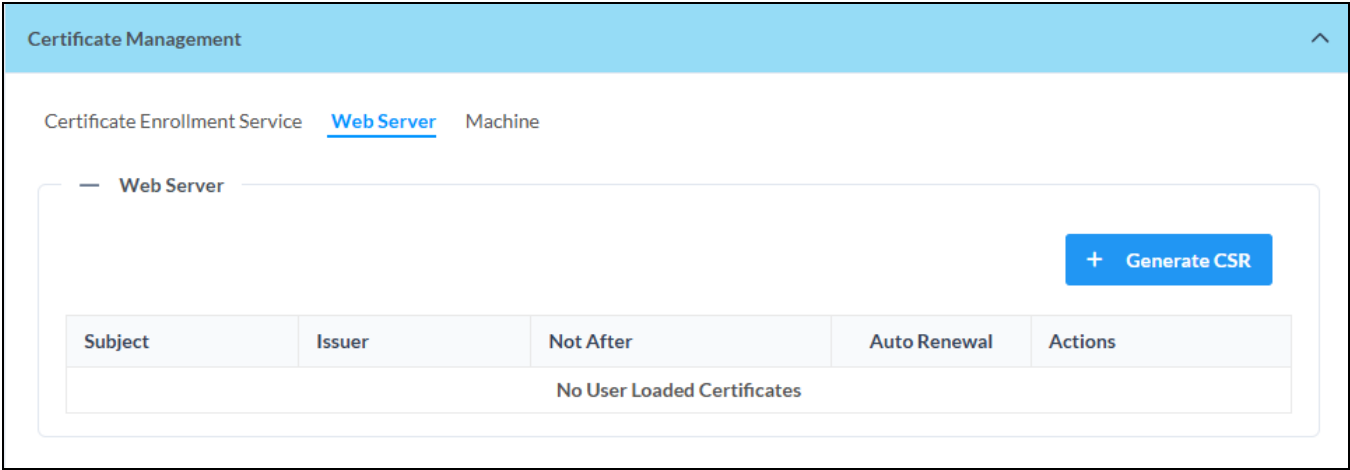

- **Subject:** Identifies the certificate used by the Certificate Authority (CA)
- **Issuer:** Reports the name or designation of the certificate issuer or CA
- **Not After:** Reports the expiration date and time of the certificate
- **Auto Renewal:** Reports whether or not auto renewal of the certificate is enabled
- **Actions:** Reports any access control actions or restriction

To create a new Certificate Signing Request:

Generate CSR

Site/Domain Name (CN) *

Enter Site/Domain Name

This field is required

Country (C)

Enter Country (e.g. US)

State (ST)

Enter State

City (L)

Enter City

Organization (O)

Enter Organization

Organizational Unit (OU)

Enter Organizational Unit

Email Address (E)

Enter Email Address

Key Type *

Select Key Type

User Note

Enter User Note

Subject Alternative Name (SAN)

Type

Name

No SAN Entries

+ Add

Remove

✓ Save

✕ Cancel

1. Select **Generate CSR**.
2. Enter at minimum the **Site/Domain Name** and **Key Type** as well as any additional applicable information.
 - **Site/Domain Name (CN):** The fully qualified domain name of your certificate
 - **Country (C):** Two letter ISO country code
 - **State (ST):** Full state, province, or region name
 - **City (L):** City or town name
 - **Organization (O):** Name of issuing company or entity
 - **Email Address (E):** Contact email
 - **Key Type:** Select the algorithm and properties of your certificate's key pair
 - **User Note:** Additional operating notes for users
3. If required, select **+ Add** in the **Subject Alternative Name (SAN)** setting to add a new SAN entry.
4. Choose the applicable SAN (**DNS**, **EMAIL**, **IP**, **URI**).

The image shows a user interface for configuring Subject Alternative Names (SANs). It features a 'Type' dropdown menu with a blue '+' button to the left. The dropdown menu is open, showing four options: 'DNS', 'EMAIL', 'IP', and 'URI'. The 'EMAIL' option is currently selected and highlighted.

5. Select **Save**.

Machine

Select the **Machine** tab to view and edit web server and Certificate Signing Request (CSR) information. The following information is displayed:

The image shows the 'Certificate Management' interface with the 'Machine' tab selected. At the top, there are tabs for 'Certificate Enrollment Service', 'Web Server', and 'Machine'. Below the tabs, there is a 'Machine' section with a '+ Generate CSR' button. Below this button is a table with the following columns: 'Subject', 'Issuer', 'Not After', 'Auto Renewal', and 'Actions'. The table is currently empty, and the text 'No User Loaded Certificates' is displayed below it.

- **Subject:** Identifies the certificate used by the Certificate Authority (CA)
- **Issuer:** Reports the name or designation of the certificate issuer or CA
- **Not After:** Reports the expiration date and time of the certificate
- **Auto Renewal:** Reports whether or not auto renewal of the certificate is enabled
- **Actions:** Reports any access control actions or restriction

To create a new Certificate Signing Request, refer to [Web Server on page 111](#).


Local Configuration

Refer to the following sections for information about configuring the device locally using its built-in setup screens.

NOTE: Some features are unavailable with the TSS-880-GV and TSS-1080-GV.

Access the Settings Screens

To access the touch screen's built-in settings screens during regular operation, press five fingers on the screen for fifteen seconds.

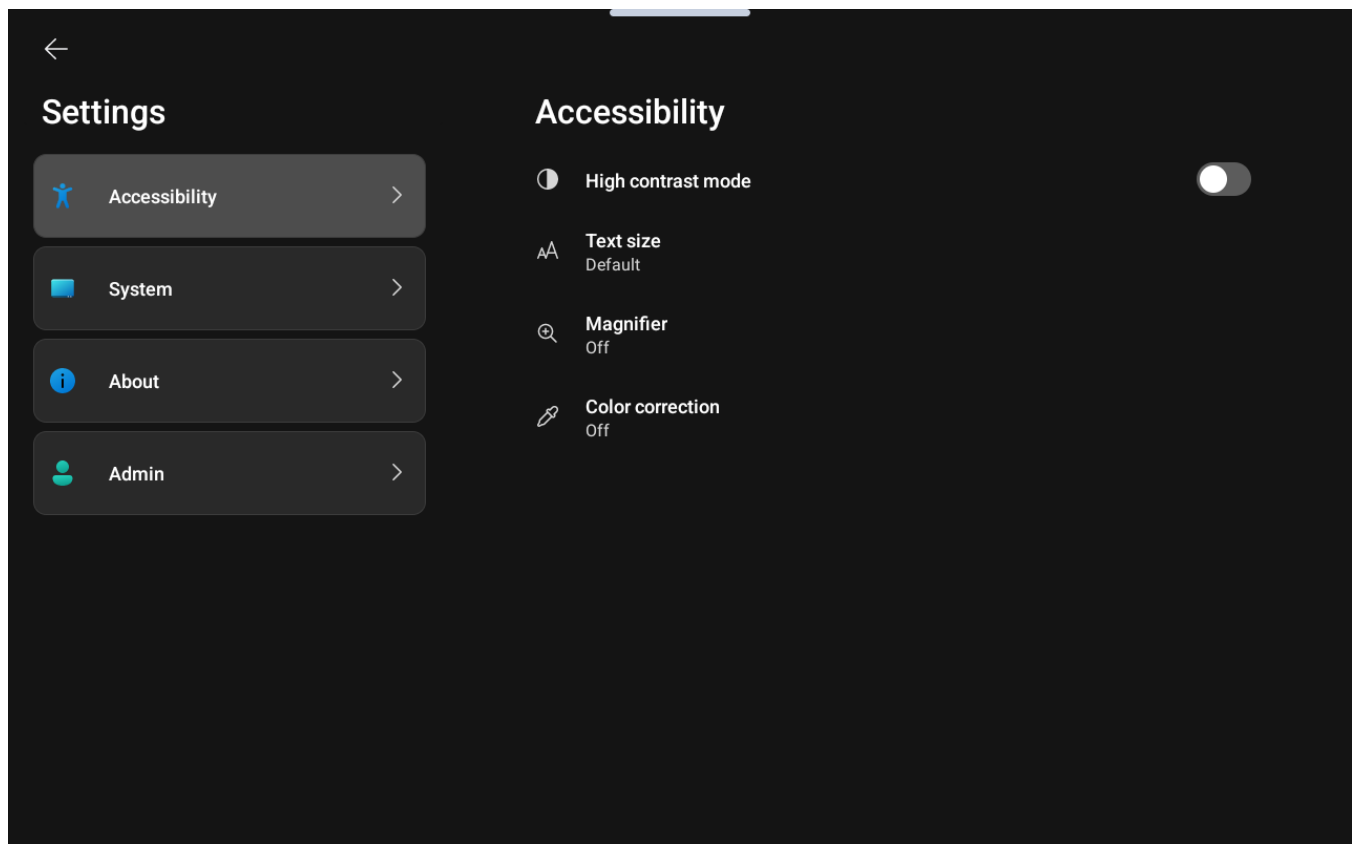


The settings screen provides several accessibility and system configuration settings as well as device information.

To access administrator level settings, select the **Admin** tab from the left menu and log into an administrator account. Some settings are not available without administrator privileges.

The functions of each tab are detailed in the following sections.

Accessibility


Select **Accessibility** on the **Settings** screen to display customizable accessibility settings. The following configuration settings are shown:

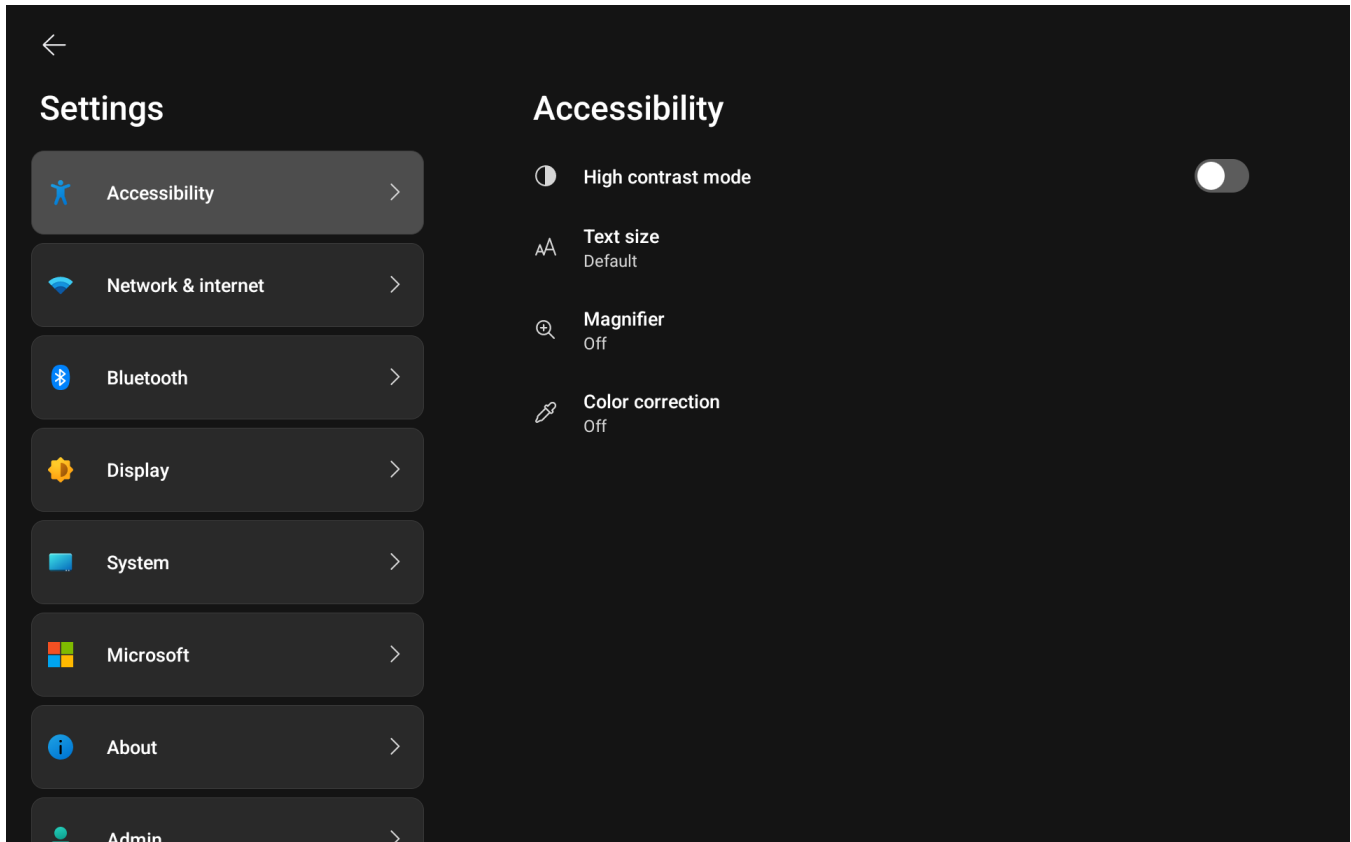

- **High Contrast Mode:** Turn on or off **High Contrast Mode** to affect the background and text colors.
- **Text size:** Select preferred text size from **Small**, **Default**, **Large**, and **Largest**.
- **Magnifier:** Turn on **Magnifier** to quickly zoom in on content. Magnifier starts and stops by triple-tapping anywhere on screen.
- **Color correction:** Turn **Color correction** on and off to compensate for blue light.


Network Settings

Select **Network** on the Settings screen to display the **Network & Internet** screen.

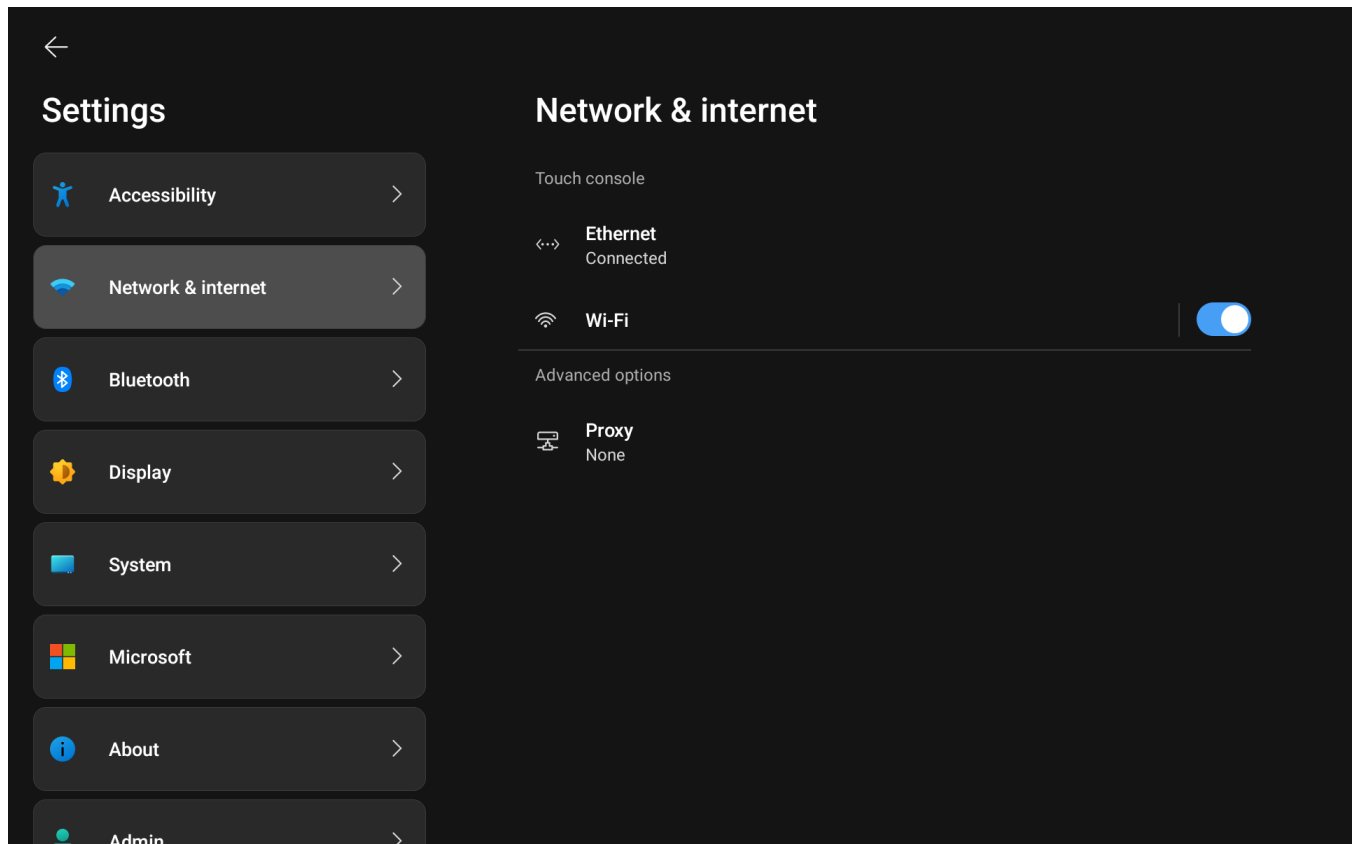

NOTE: You must be logged in as an admin to edit network settings. Navigate to the Admin screen on the Settings page to log in.

Use the **Wi-Fi** screen and select a network to view the Wi-Fi network MAC and IP addresses, subnet mask address, default router address, primary and secondary DNS addresses, host name, domain, and various details about the Wi-Fi connection.

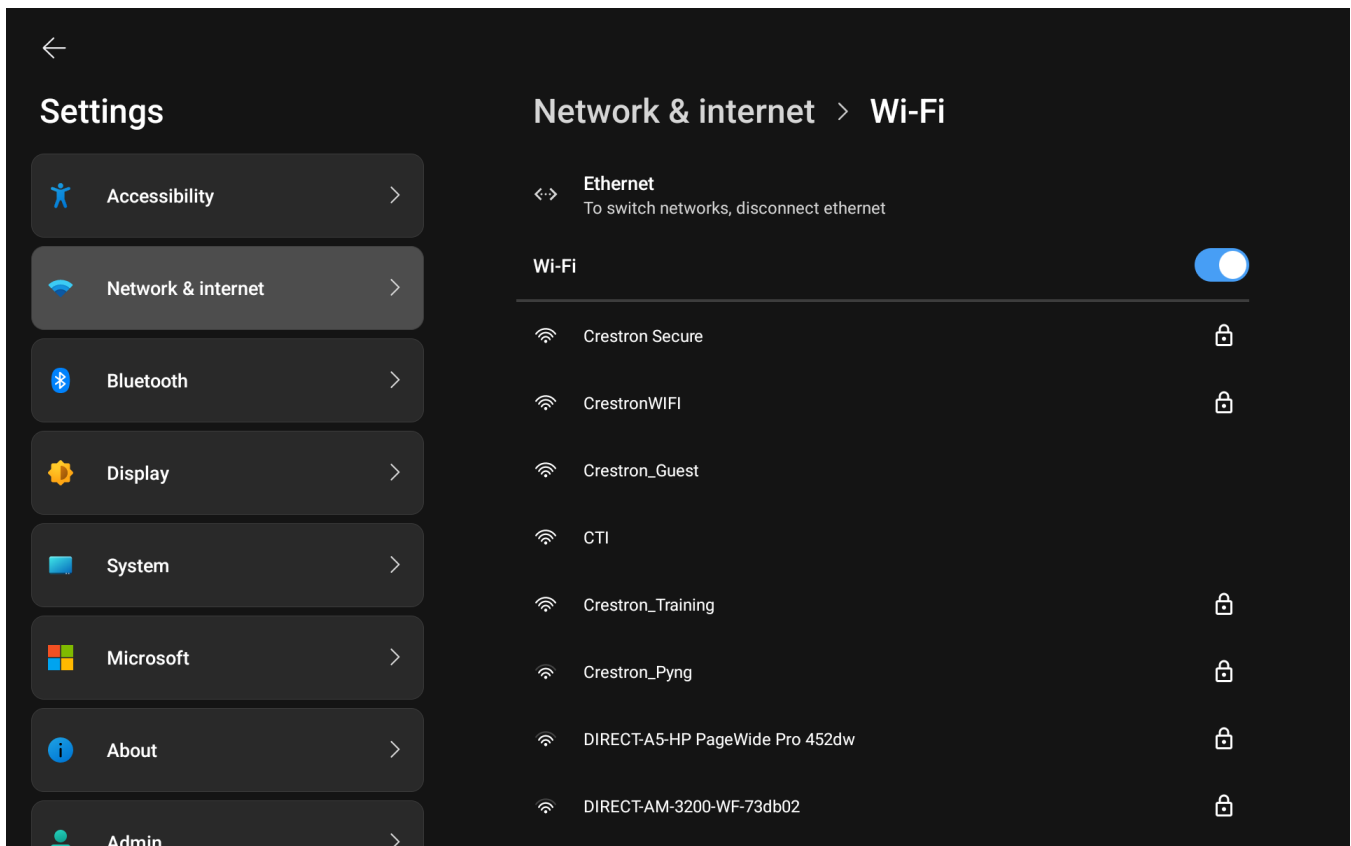


NOTES:

- Ethernet must be disabled before a Wi-Fi connection can be configured.
- Wi-Fi is disabled on -GV models.


The following buttons are provided for configuring Wi-Fi settings:

- Select **On** or **Off** under **Wi-Fi** to turn the Wi-Fi adapter on or off. If **Wi-Fi** is set to **Off**, Wi-Fi will not function and an Ethernet connection can be established.

- Select **Add Network** at the bottom of the screen to manually add Wi-Fi information.

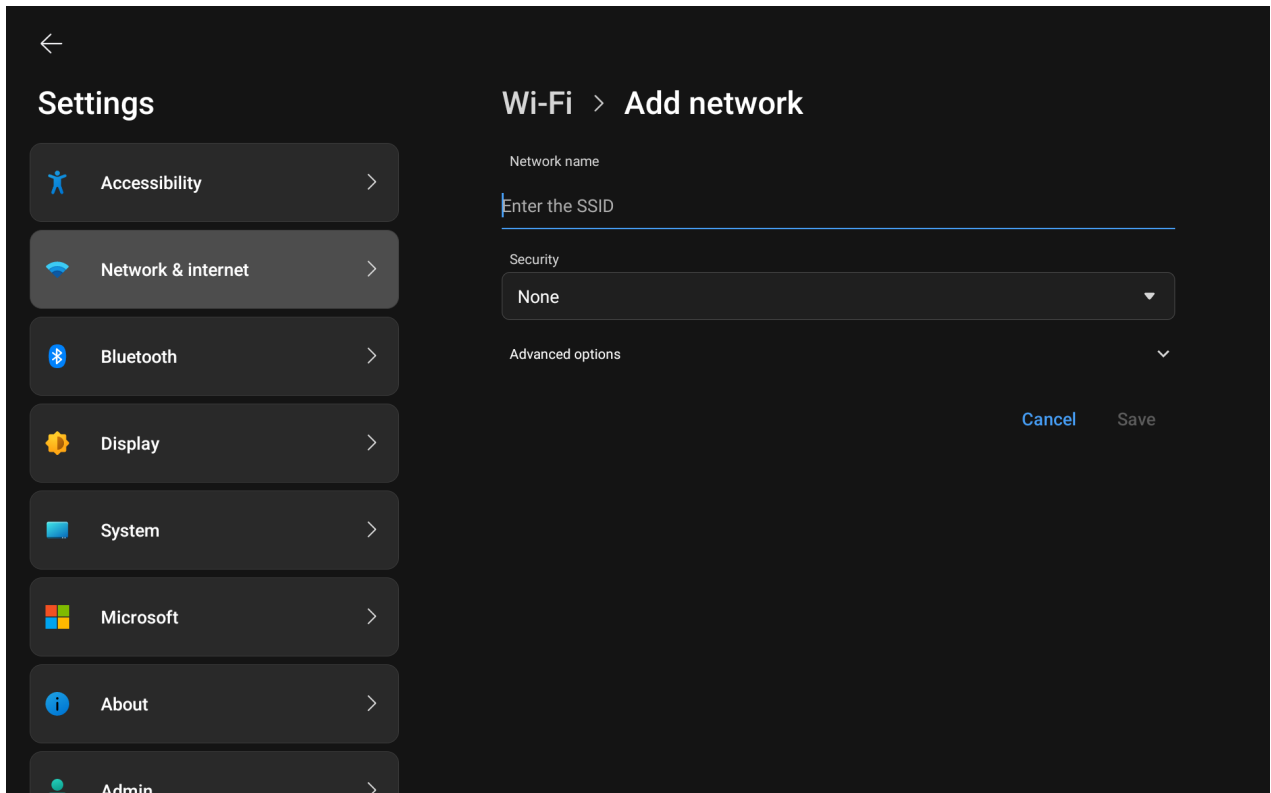

- Use the drop down menu to select DHCP (Dynamic Host Configuration Protocol) or Static IP.

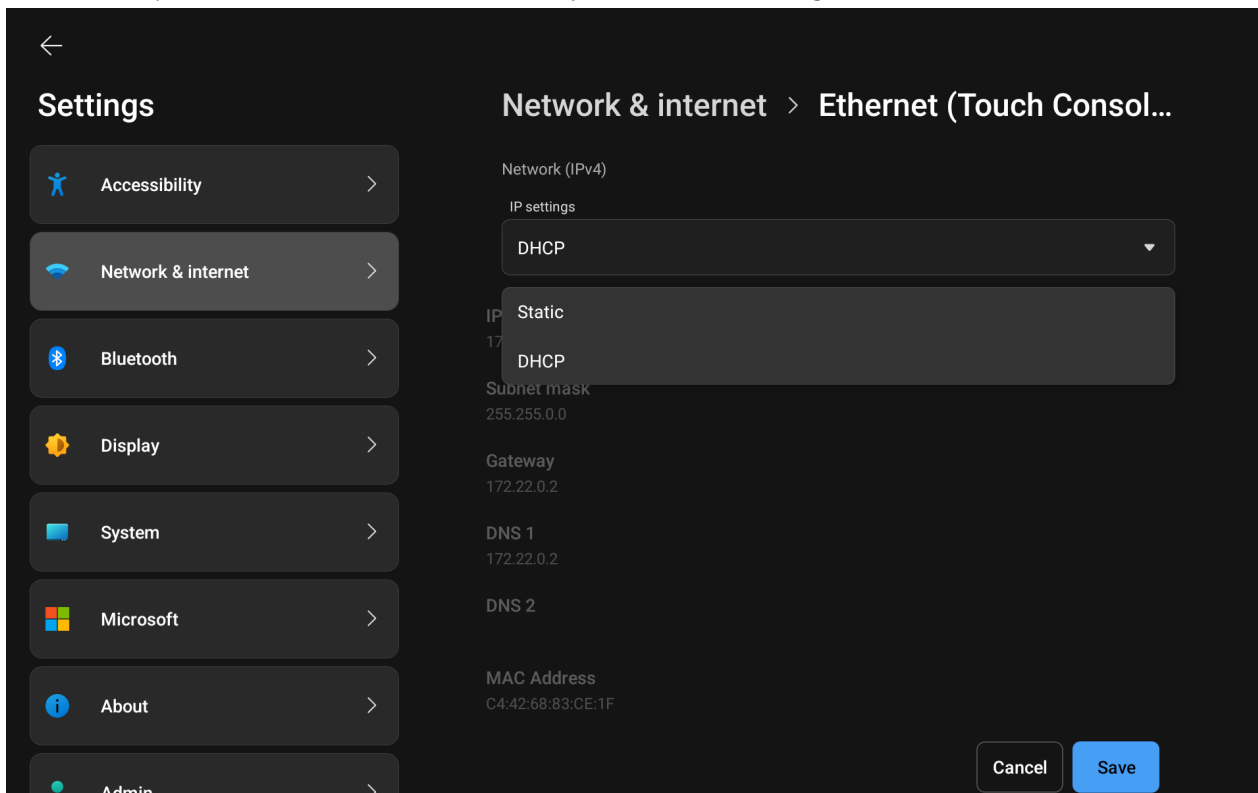

NOTE: DHCP is enabled on the touch screen by default.


- Select **Save** to apply any new Wi-Fi settings to the touch screen and to stay in setup mode.

Select the **BACK** arrow to return to the Settings screen.

Bluetooth

Select **Bluetooth** on the Settings screen to display the **Bluetooth** screen.


NOTE: Bluetooth is unavailable on -GV models.

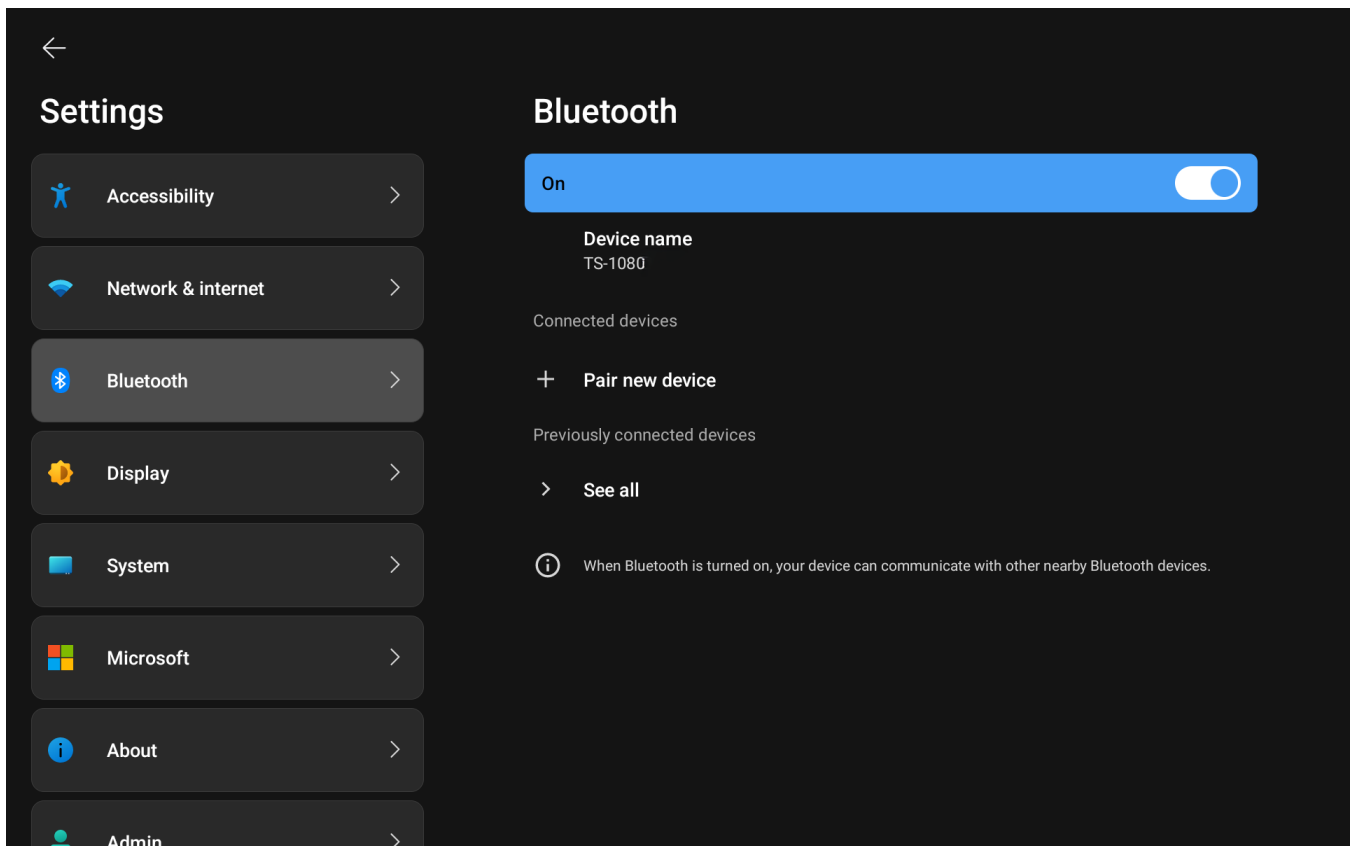


The following buttons or controls are provided for configuring Bluetooth settings:

- Turn **Bluetooth** on or off to enable or disable the Bluetooth function.

- Select **Pair new device** to connect a new Bluetooth device.
 - Select the desired device from the list of **Available Devices**. Your device must be in pairing mode to connect over Bluetooth.

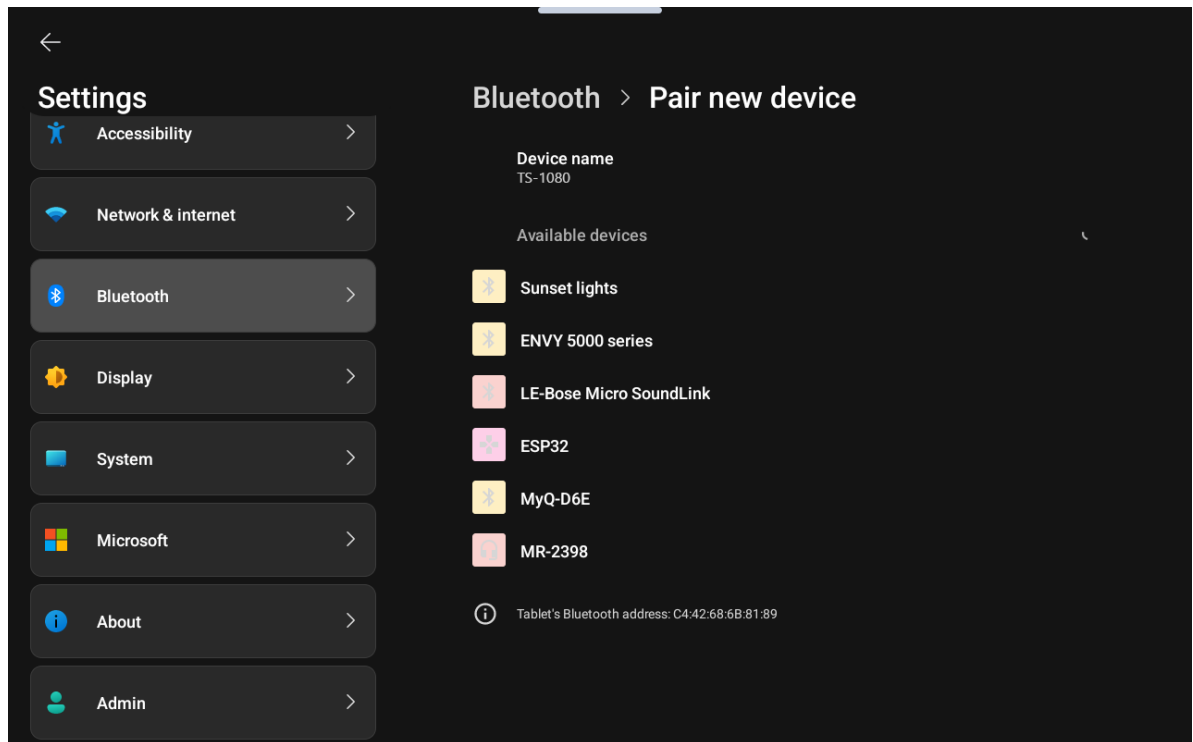


- The following pop-up window will display. Select **Pair**.

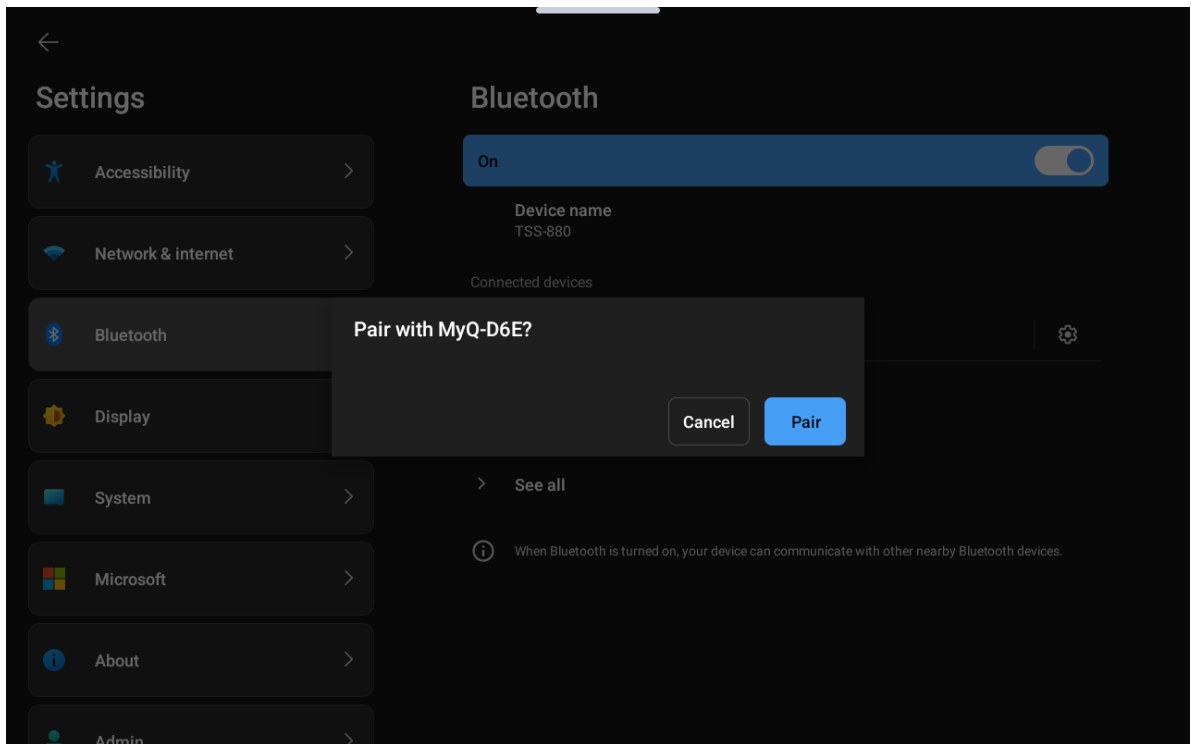


- Select the menu under **Previously connected devices** to display previous connections.

Display

Select **Display** on the Settings screen to access the **Display** screen.

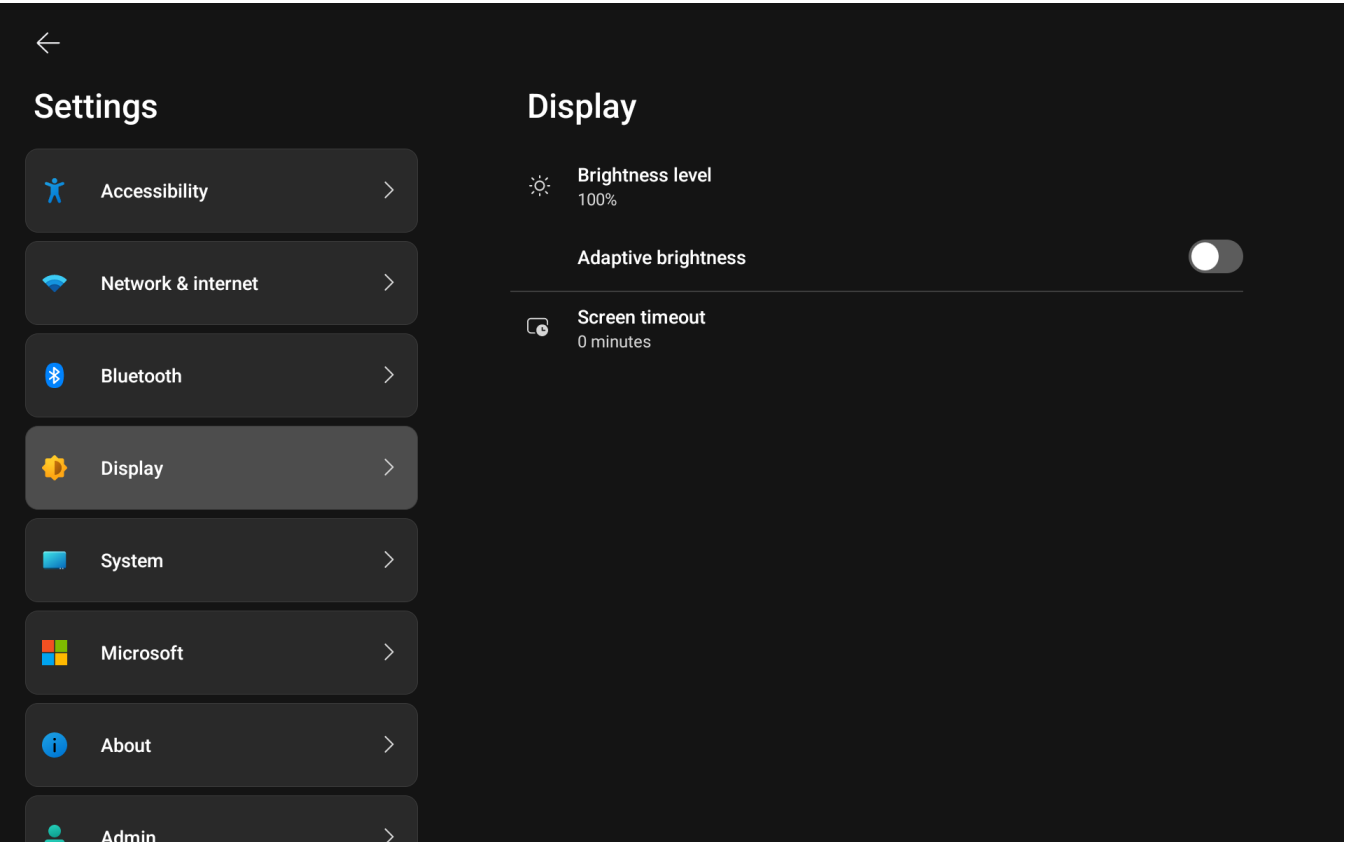


- Use the slider under **Brightness** to raise or lower the LCD display brightness level incrementally from 0 to 100%.

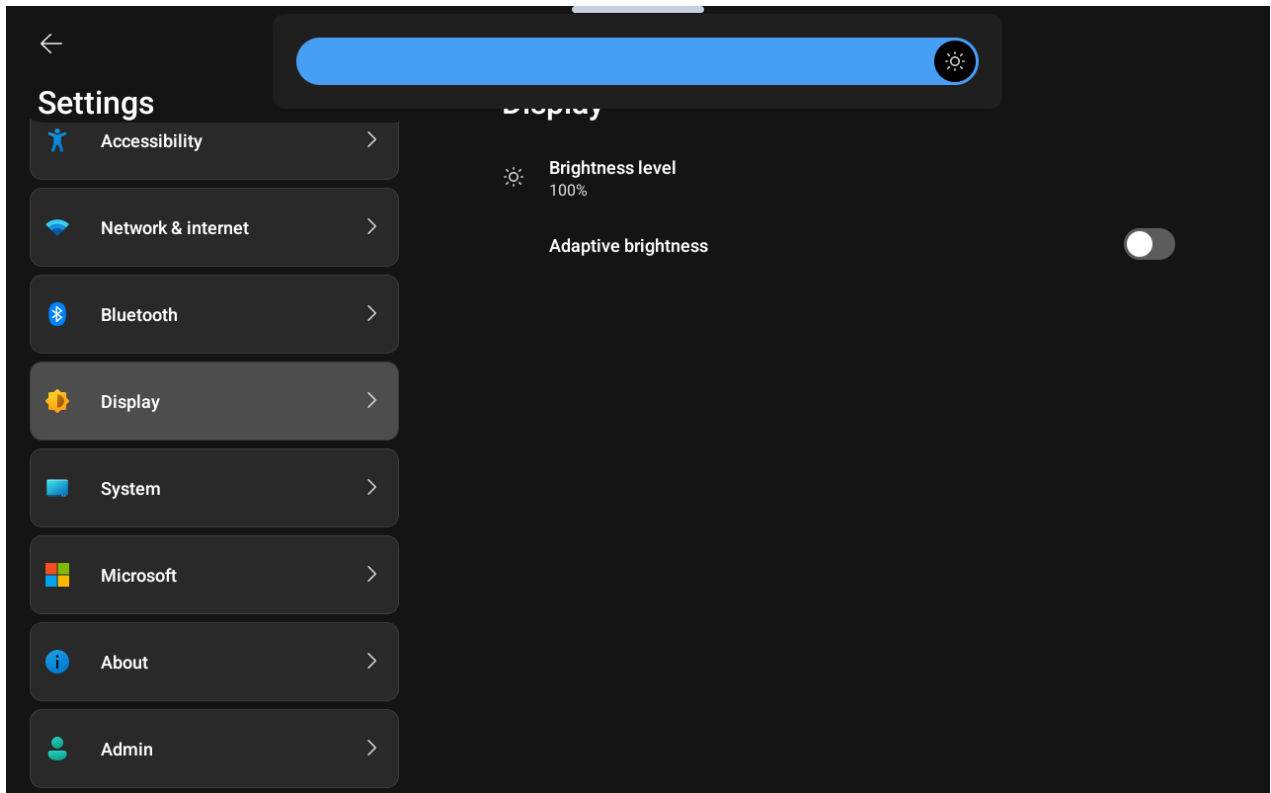

- Toggle **On** under **Adaptive Brightness** to allow the touch screen to adjust brightness levels, depending on the on-screen display, to provide ideal contrast levels.

System

Select **System** on the Settings screen to access the **System** screen.

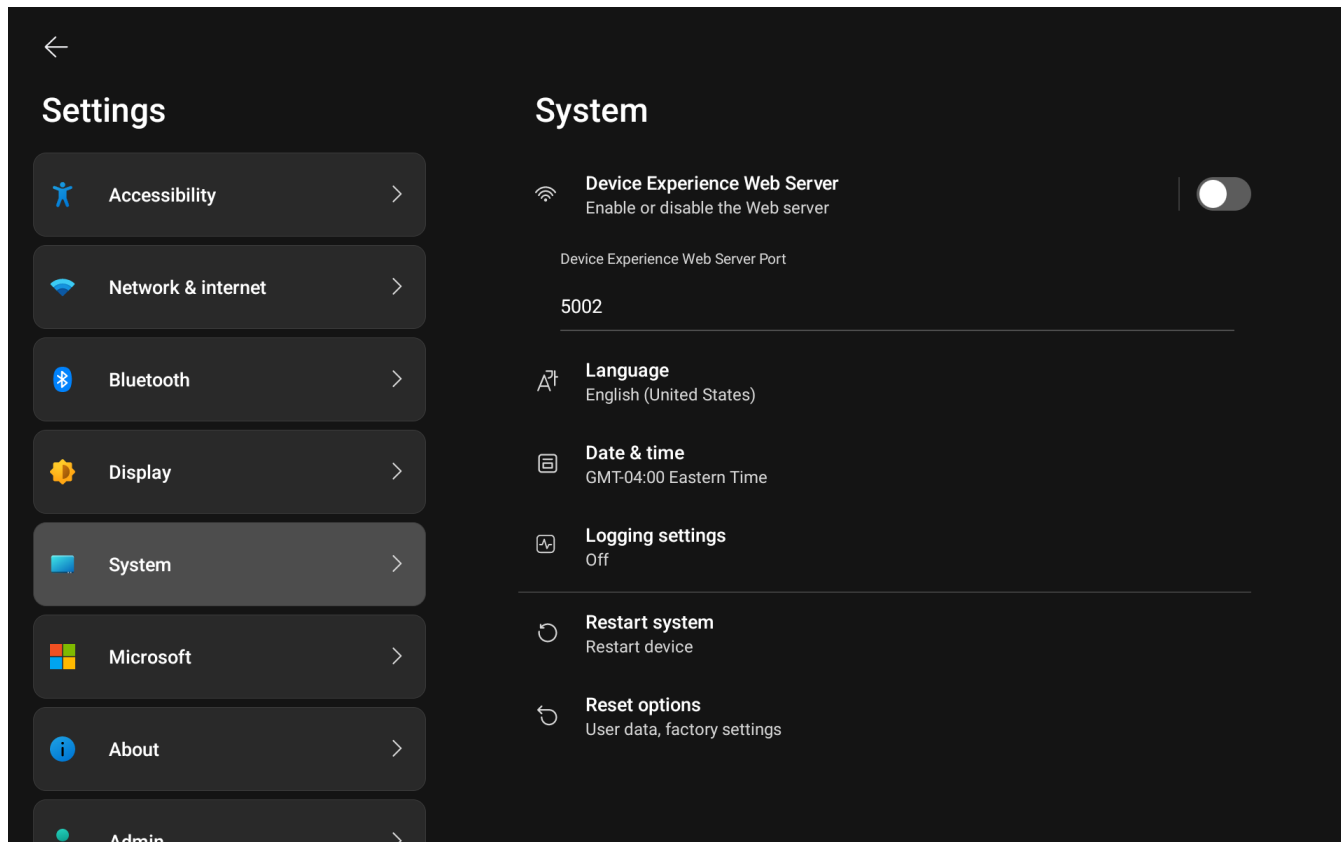


The following buttons or controls are provided for configuring System settings:

- Toggle on or off under **Device Experience Web Server** to enable or disable the web server. The port number is displayed.
- Select **Language** to change the device language. Use the pop-up menu to select the desired language.
- Select **Date & Time** to edit the date and time zone.
- Turn **Logging settings** on or off to begin logging data.
- Select **Restart system** to restart the device.
- Select **Reset options** to choose factory reset or user data reset.

CAUTION: Performing a factory restore returns all settings to their default values and removes any static IP addresses, IP table connections, and wireless access points (WAPs) that were previously added.

Microsoft



Select **Microsoft** to access the **Microsoft Privacy** screen.

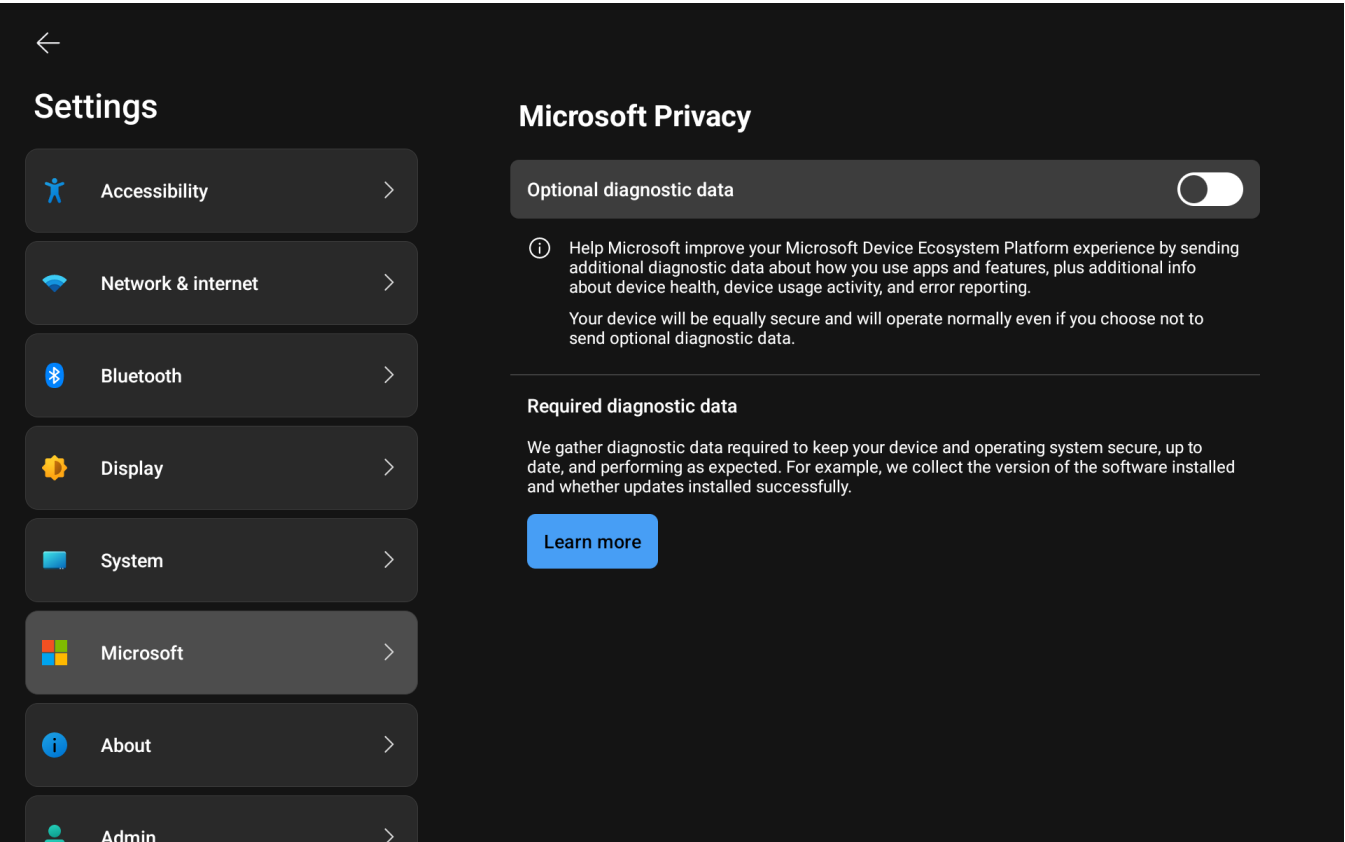

Turn **Optional diagnostic data** on or off to enable sending Microsoft information on use, device health, usage activity, and errors.

About


Select **About** to see device details on the **About** screen.

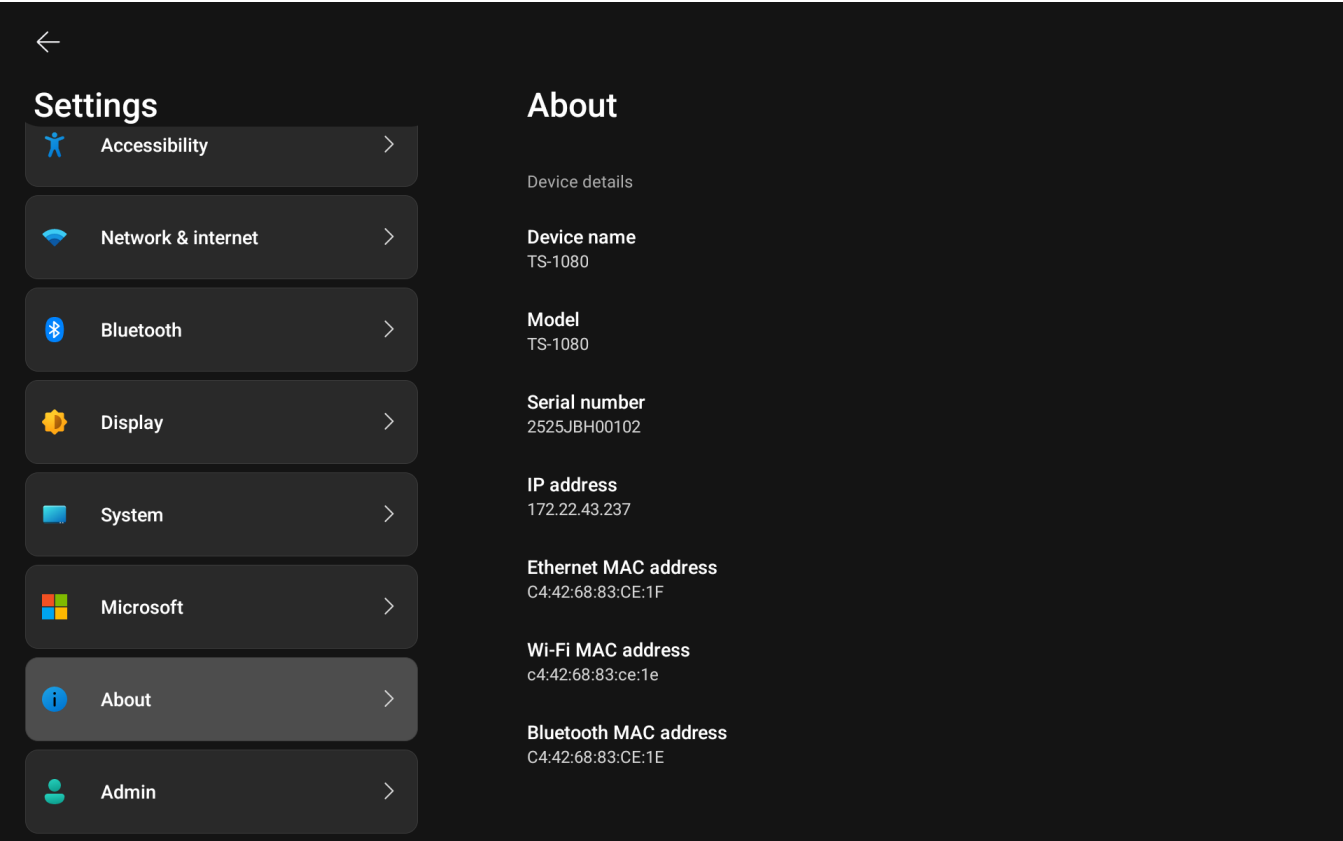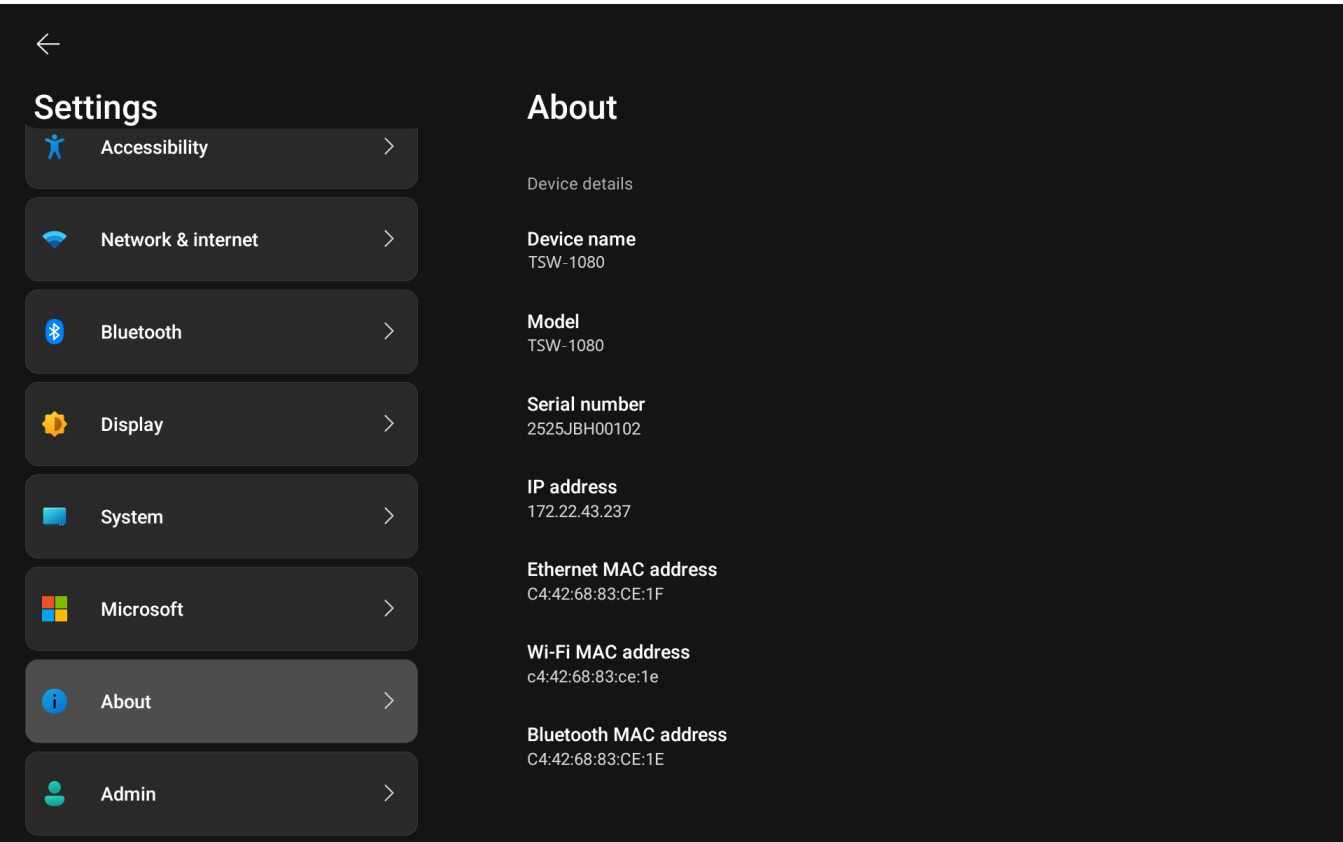

Device name, model, serial number, IP address, Ethernet MAC address, Wi-Fi MAC address, and Bluetooth MAC address information are displayed.

Admin

The **Admin** screen requires administrator log in. Select **Admin** to access the screen.

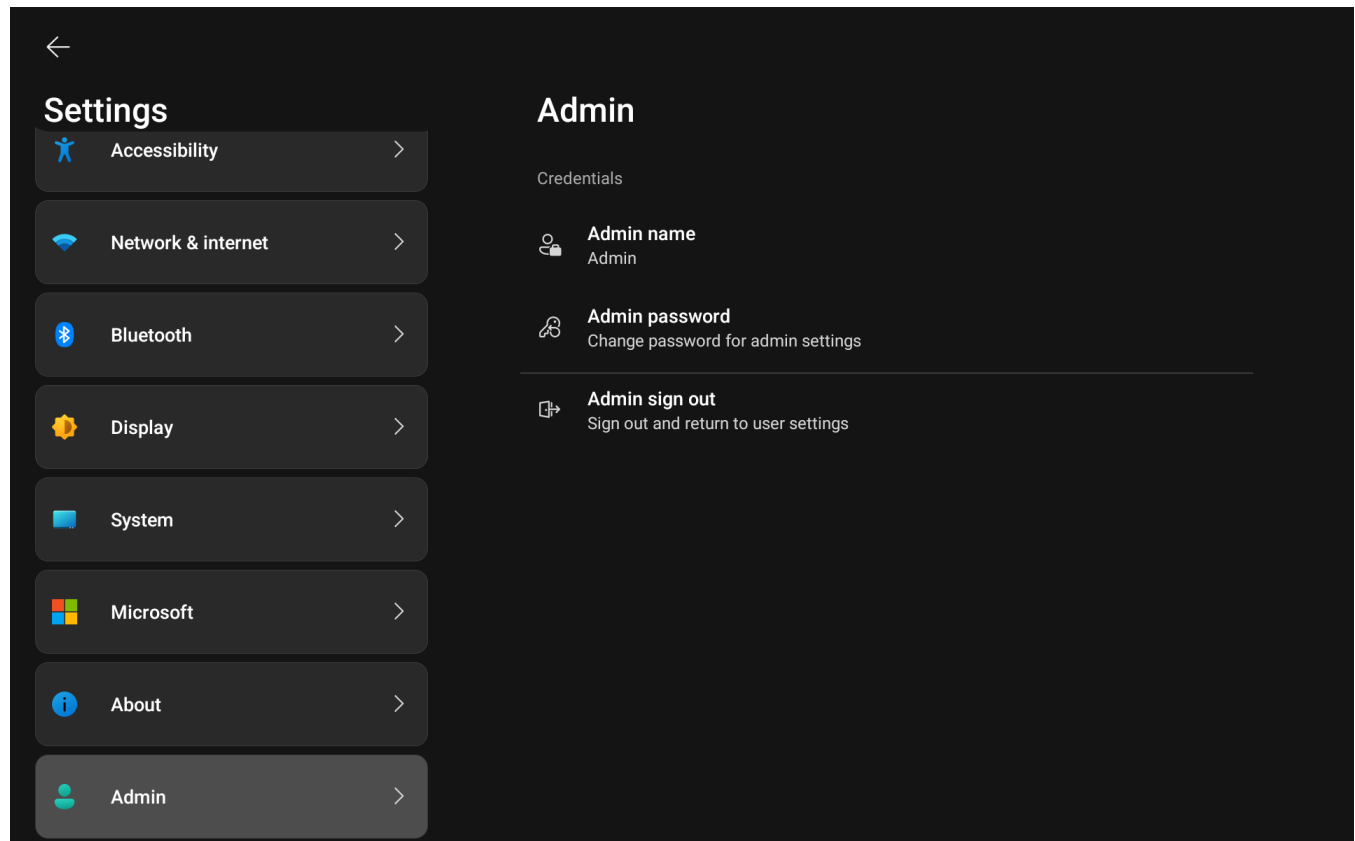

- Select **Admin name** to display the admin username.
- Select **Admin password** to change the user profile password.
- Select **Admin sign out** to sign out of the administrator account.

Application Selection

The TS-880 and TS-1080 touch screens ship with a variety of preconfigured applications:

- [Crestron room scheduling](#) application
- [Microsoft Teams® online meeting solution](#) application
- [Microsoft Teams® Scheduling Panels](#) application

External applications can be downloaded from the cloud and will install on the touch screen automatically. The following applications are supported:

- Crestron general web application
- [Crestron Home™ OS](#) user control application
- [Crestron HTML5 User Interface](#)
- [22Miles ADSign](#) application
- [Appspace](#) application
- [Envoy® room scheduling](#) application
- [Eptura](#) application
- [Spaceti](#) application
- [Hyundai Autoever](#) application

NOTE: Support for additional applications will be provided by future firmware updates.

The touch screen runs only one app, which is selected at setup. Only the apps approved and delivered by Crestron may run on the touch screen.

NOTE: Additional subscriptions and/or licenses may be required. Refer to each provider's website for details about the capabilities and requirements of its scheduling application and services.

For more information on using and setting up each application, refer to the provider's website.

Operation

The touch screen is controlled by using its capacitive touch screen display. The touch screen supports gesturing and swiping controls to perform various functions. Supported touch controls vary by application or program.

The virtual toolbar is used to perform basic device functions if it has been enabled. By default, the virtual toolbar can be accessed by swiping down on the tab located at the top of the screen. The toolbar can be hidden by swiping up on the tab or is hidden automatically after a set timeout duration.

The following virtual buttons are provided by default and can be used to control the touch screen or the loaded application or program (if supported).



NOTE: Virtual button functionality can be custom programmed using a Crestron control system.

- **Power:** Powers the touch screen off.
- **Home:** Returns to the home page of the application or program.
- **Lighting:** Navigates to lighting controls in the application or program.
- **Up:** Moves up a page in the application or program.
- **Down:** Moves down a page in the application or program.
- **Microphone:** Enables or disables the microphone functionality.

Resources

The following resources are provided for the TS-880 and TS-1080.

NOTE: You may need to provide your Crestron.com web account credentials when prompted to access some of the following resources.

Crestron Support and Training

- [Crestron True Blue Support](#)
- [Crestron Resource Library](#)
- [Crestron Online Help \(OLH\)](#)
- [Crestron Technical Institute \(CTI\) Portal](#)

Programmer and Developer Resources

- help.crestron.com: Provides help files for Crestron programming tools such as SIMPL, SIMPL#, and Crestron Toolbox™ software
- developer.crestron.com: Provides developer documentation for Crestron APIs, SDKs, and other development tools

Product Certificates

To search for product certificates, refer to the [Product Certificates](#) section of the Crestron Resource Library.

Related Documentation

- [Crestron Technical Documentation](#)

